

MEUBLES DE JARDIN

CORRIVEAU

OUTDOOR FURNITURE

Fireplace no. 1


Assembly instructions

QP20SQX-001-



Parts & hardware list

ITEM NO.	Description	QTY.
A	Base	1
B	Top	1
C	Leg	4
D	Door	1
E	Wire grid	3
F	Knob	1
G	Left part	1
H	Right part	1
I	Front part	1
J	Bolt	77
K	Nut	78
L	Lock	1
M	Flat washer	48

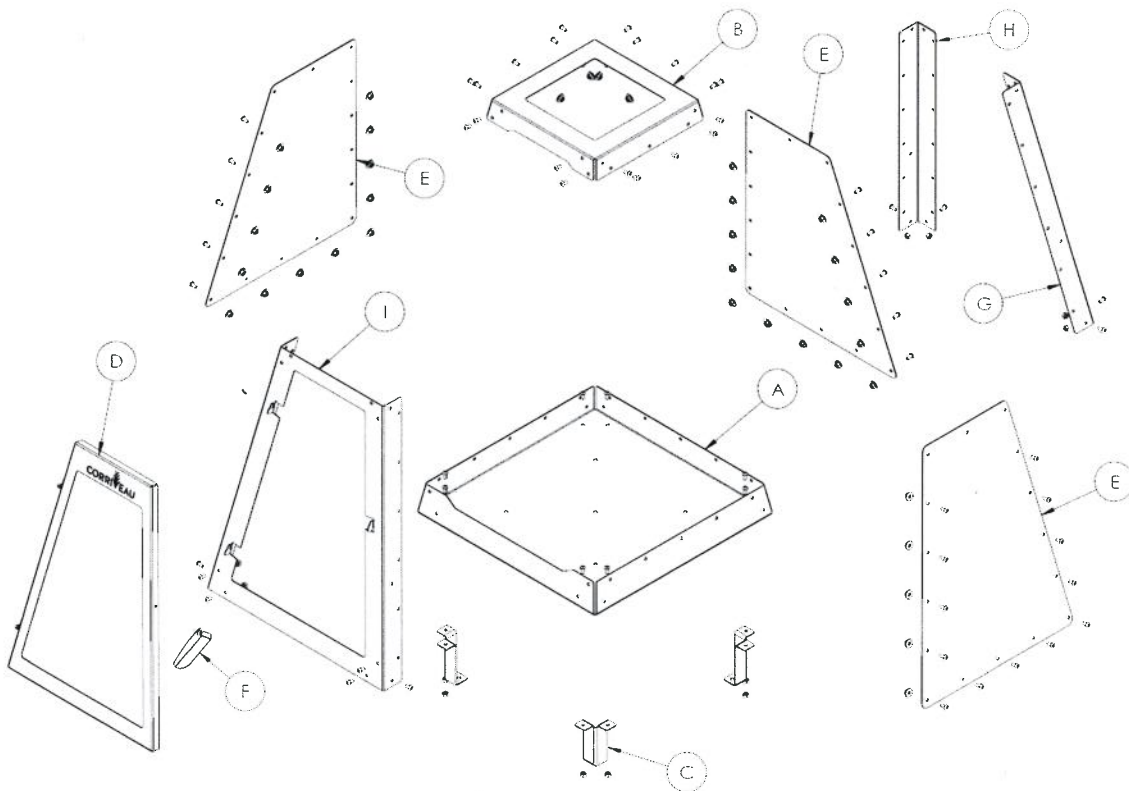

Setting up

Prior the assembly of the product, make sure that all parts are present. Compare the parts with the box contents list and the hardware list above. If any parts are missing or damaged, do not attempt to assemble the product, contact customer service for replacement parts.

Estimated assembly time: 1hr.

Tools for assembly: Allen key (included) and monkey wrench 7/16 (not included)

WARNING:


FOR OUTDOOR USE ONLY! Burning wood or charcoal indoors can be harmful, giving off odorless carbon monoxide.

- **NEVER LEAVE THE FIRE UNATTENDED!**
- **DO NOT** leave children or pets near the fireplace unattended.
- **DO NOT** touch the surface of the fireplace while in use.
- **NEVER** burn in vehicles, tents or indoors. **RISK OF CARBON MONOXIDE ASPHYXIA.**
- **NEVER** place a cover over the fire pit while in use. Make sure the fireplace and the fire screen are completely cool before putting on a cover.
- When the fireplace is in use, the lid handle can reach extreme temperatures which can cause serious injury. Use the a poker when handling.
- **DO NOT** touch the surface of the fireplace during use.


CAUTION:

- Burn only wood, charcoal, or logs.
- **DO NOT** use gasoline or kerosene to light the fireplace.
- **DO NOT** use this appliance on a wooden deck, on dry grass / leaves, or on a combustible surface.
- **DO NOT** attempt to move the fireplace when hot or while in use.
- Do not place the fireplace within 8 feet / 2.4 meters of walls or of fuel during use.
- Adequate fire extinguishing equipment should be easily accessible.
- Use heat resistant gloves when handling hot tools.
- **DO NOT** place or use a fireplace under an awning.
- Always make sure the door is securely closed during use.
- Also check with your municipality for municipal regulations.


Step 1: Bolt the 4 legs #C to the base #A using bolts and nuts. Tighten the nuts with the allen key and pliers or 7/16" monkey wrench.

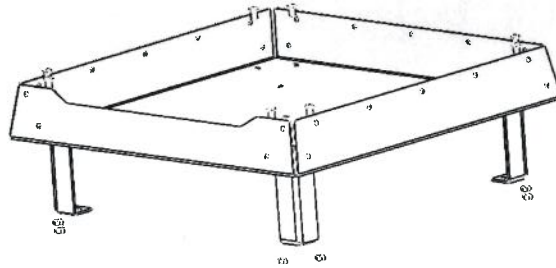


Step 2: Bolt the front part #I (i) which serves as the door frame to the lowered part. Use the #J bolts and #K nuts on the front part and the lower holes on the sides. Only hand tighten the bolts.

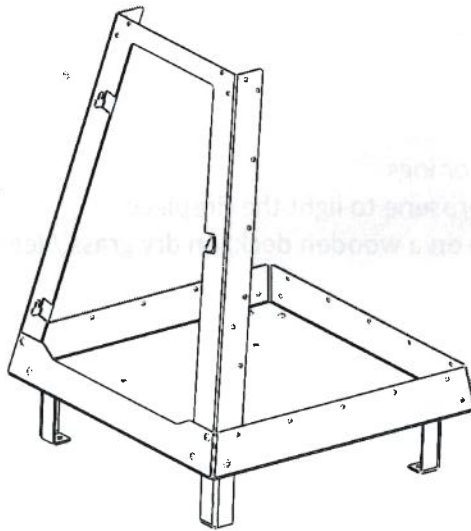


Step 3: Bolt the #G left and H right parts using #J bolts and #K nuts in the lower holes on the sides (2x each upright). Only hand tighten the bolts. Be careful not to reverse the 2 parts.

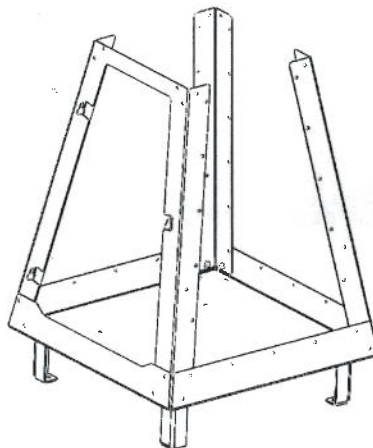

Step 4: Bolt the 3 grids #E on the solid sides of the base #A using bolt #J flat washer #M and nuts #K in all holes except the top holes. Only hand tighten the bolts.

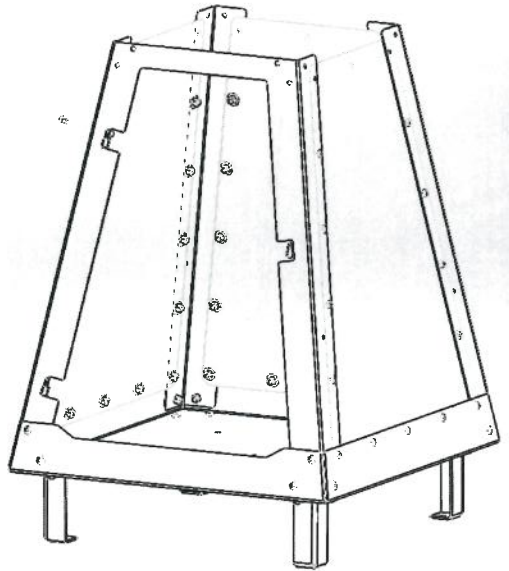


Step 5: Bolt the upper part #B with the bolts #J and nuts #K. Add a #M flat washer when the bolt goes through the screen. Only hand tighten the bolts.

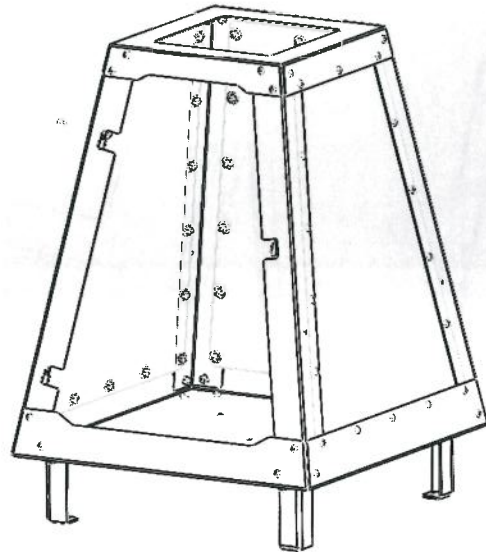


Step 6: Proceed to tighten all the bolts with the allen key and pliers or 7/16 " monkey wrench.

Step 7: Bolt handle #F to door #D. Tighten the bolt and nut to obtain a slight play to allow the handle to rotate. Add a second nut to lock out the first nut.

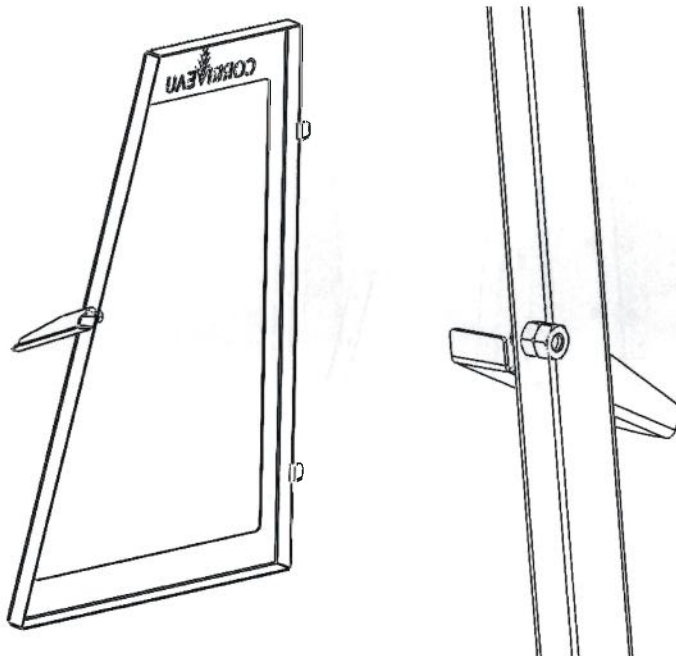

Step 8: Insert the door on the hinges and put the lock #L to secure the door.

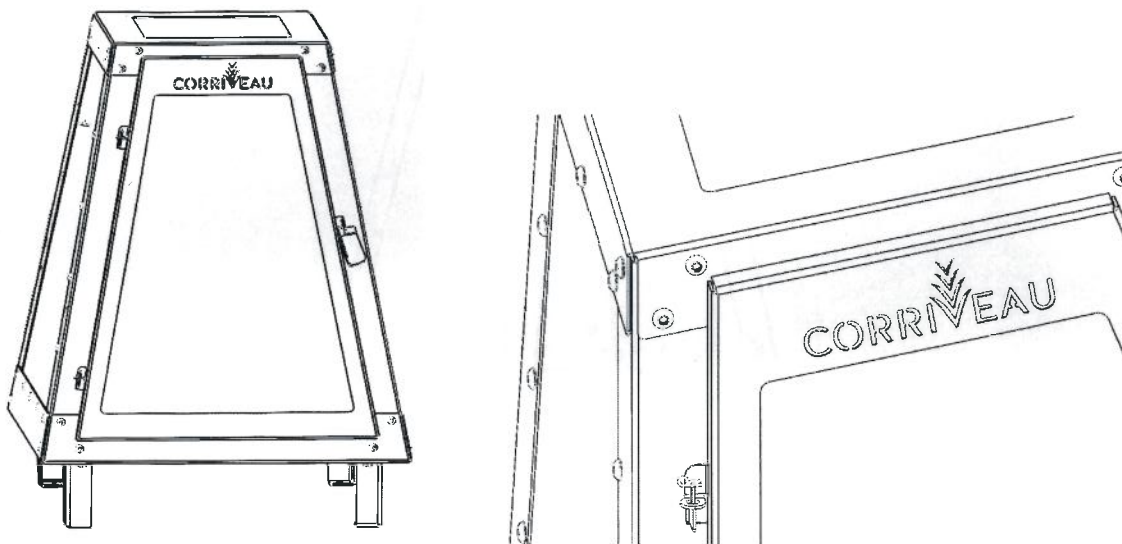

You are ready to use your fire pit!