

MEUBLES DE JARDIN




CORRIVEAU

OUTDOOR FURNITURE

Fireplace no. 3


Assembly instructions

QP20SQX-003-

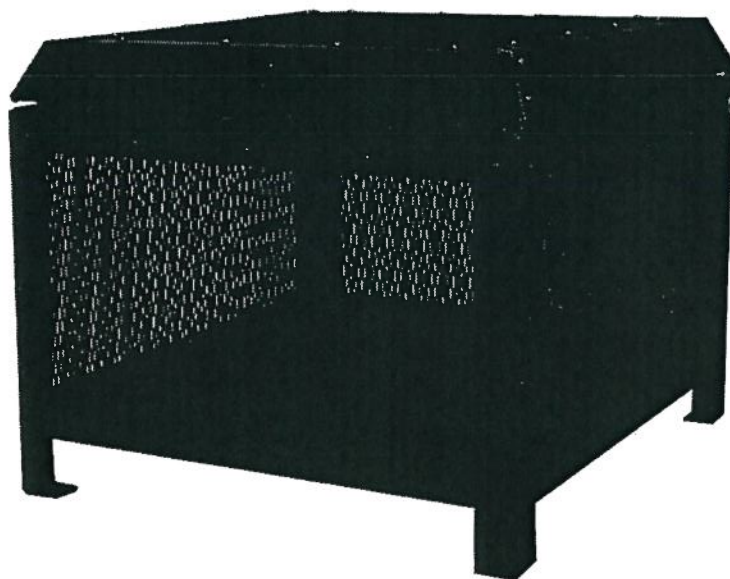

Parts list

No. ARTICLE	DESCRIPTION	QTE
A	Base	1
B	Leg	4
C	Upper contour	4
D	Perimeter wire mesh screen	4
E	Rear part of the lid	1
F	Front part of the lid	1
G	Right part of the lid	1
H	Wire mesh screen of the lid	1
I	Left part of the lid	1
J	Hinge washer	2
K	Knob	1
L	1/4" x 1/2" long bolt	70
M	1/4" Nut	76
N	Countersunk screw for door stop	4
O	Flat washer	70
P	1/4" x 3/4" long bolt	2

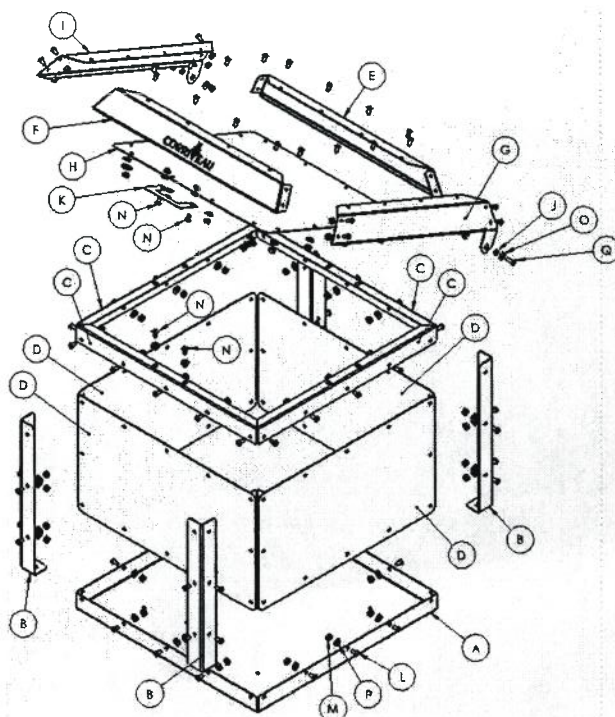

Setting up

Prior the assembly of the product, make sure that all parts are present. Compare the parts with the box contents list and the hardware list above. If any parts are missing or damaged, do not attempt to assemble the product, contact customer service for replacement parts.

Estimated assembly time: 1hr.

Tools for assembly: Allen key (included) and monkey wrench 7/16 (not included)

WARNING:


FOR OUTDOOR USE ONLY! Burning wood or charcoal indoors can be harmful, giving off odorless carbon monoxide.

- **NEVER LEAVE THE FIRE UNATTENDED!**
- **DO NOT** leave children or pets near the fireplace unattended.
- **DO NOT** touch the surface of the fireplace while in use.
- **NEVER** burn in vehicles, tents or indoors. **RISK OF CARBON MONOXIDE ASPHYXIA.**
- **NEVER** place a cover over the fire pit while in use. Make sure the fireplace and the fire screen are completely cool before putting on a cover.
- When the fireplace is in use, the lid handle can reach extreme temperatures which can cause serious injury. Use a poker when handling.
- **DO NOT** touch the surface of the fireplace during use.


CAUTION:

- Burn only wood, charcoal, or logs.
- **DO NOT** use gasoline or kerosene to light the fireplace.
- **DO NOT** use this appliance on a wooden deck, on dry grass / leaves, or on a combustible surface.
- **DO NOT** attempt to move the fireplace when hot or while in use.
- Do not place the fireplace within 8 feet / 2.4 meters of walls or of fuel during use.
- Adequate fire extinguishing equipment should be easily accessible.
- Use heat resistant gloves when handling hot tools.
- **DO NOT** place or use a fireplace under an awning.
- Always make sure the door is securely closed during use.
- Also check with your municipality for municipal regulations.


Step 1: Bolt the 4 perimeter screens #D to the bottom #A using #L ½" long bolts, #O flat washer and #M nuts. Put only the 3 center bolts. Hand tighten bolts only.

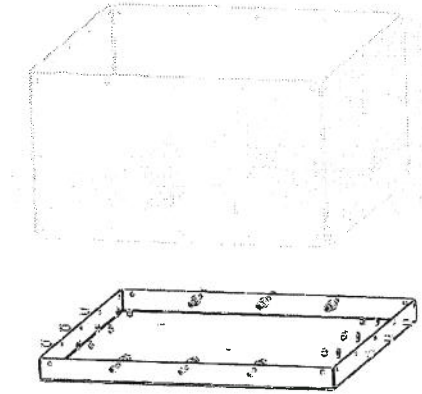


Step 2: Bolt the legs #B on the bottom and the perimeter screens. Use #L ½" long bolts, #O flat washer and #M nuts. Put the bolts in the lower and middle holes only. Hand tighten bolts only.

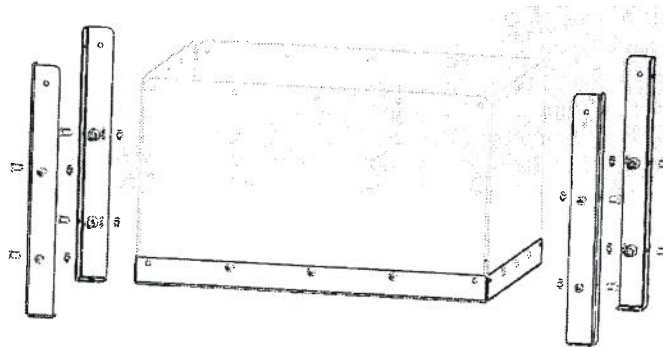


Step 3: Bolt the upper contour #C using #L ½" long bolts, #O flat washer and #M nuts. Keeps 2 opposite corners without bolts for the lid hinges. Hand tighten bolts only.

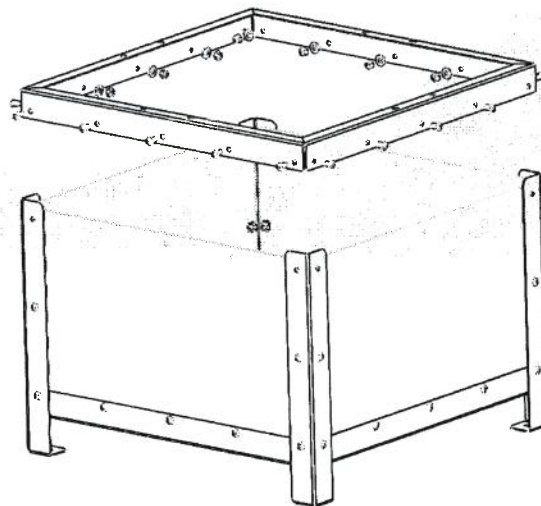


Step 4: Insert 2 countersunk screws #N on the opposite side of the hinges using flat washer #O and nuts #M. Tighten the nuts with an Allen key and pliers or monkey wrench 7/16".

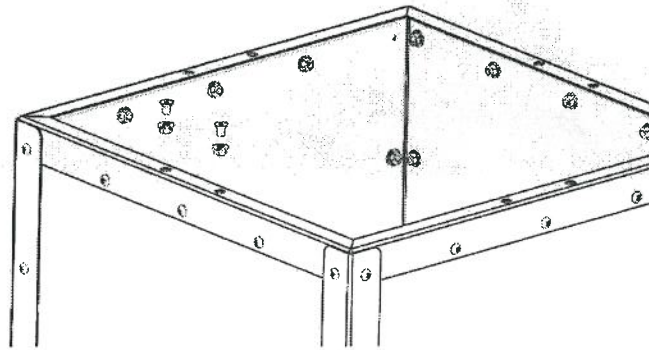


Step 5: Bolt the 4 parts of the lid #E, #F, #G, #I (i), with bolts #L and nuts #M. Hand tighten bolts only.

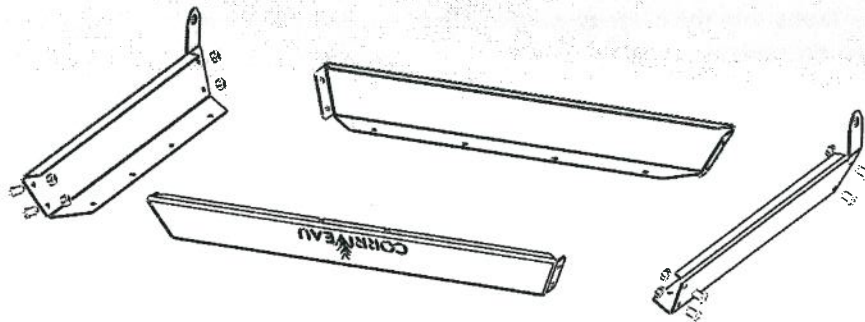


Step 6: Bolt the screen lid #H using #L 1/2" long bolts, #O flat washer and #M nuts. Hand tighten bolts only.

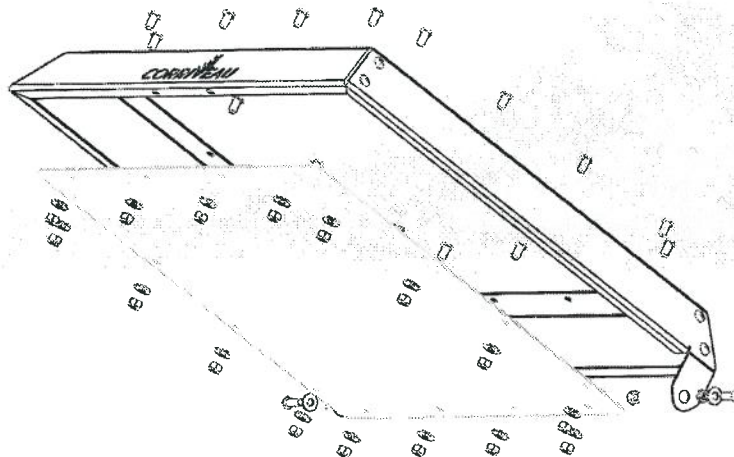

Step 7: Bolt the knob #K to the front part of the lid using 2 countersunk screws #N, flat washer #O and nuts #M. Tighten the nuts with an Allen key and pliers or 7/16" monkey wrench.

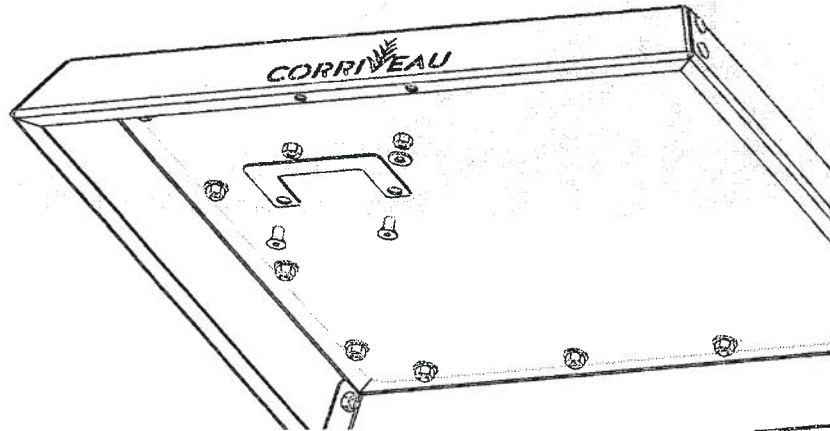

Step 8: Install the lid on the fireplace using the #P ¾" long bolts, #J hinge washer, #O flat washer and #M nuts. Make sure the #J hinge washer is properly seated in the cover hinge hole before tightening the bolt and nut.

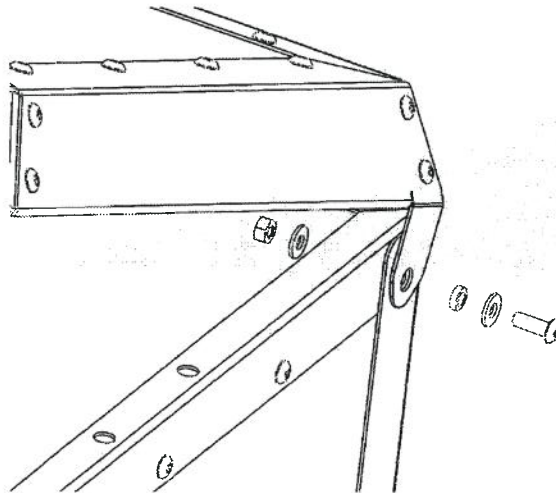

Step 6: Proceed to tighten all the bolts with an Allen key and pliers or 7/16" monkey wrench.

You are ready to use your firepit!!