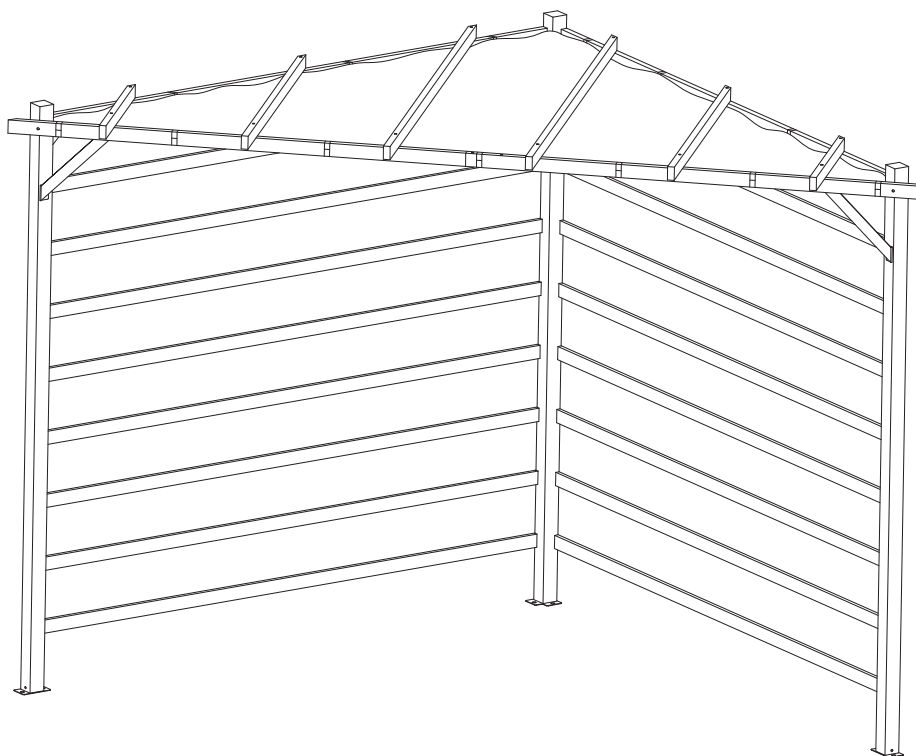


TOSCANA pergola 8'x8' B080870 (2023)

Assembly instructions



F. Corriveau
INTERNATIONAL

IMPORTANT:

Please read and follow all safety statements, warnings, assembly instructions, use & care directions before attempting to assemble. Each of the recommendations must be followed to ensure the utmost solidity.

Security Rules

Warning:

Keep flame and heat sources away from the pergola fabric. The fabric may burn if it is exposed to prolonged contact with a source of heat. The application of any foreign substance to the gazebo fabric may render the flame-resistant properties ineffective.

Regulation

It is the responsibility of the consumer being in accordance with city regulation, construction codes, zoning or any limitations and obtaining a permit prior assembling pergola.

Recommendation

- When assembling and using this product, basic safety precautions should always be followed to reduce the risk of a personal injury and damage to parts.
- Do not use the pergola during extreme weather conditions.
- Before beginning assembly of products, make sure all parts are present. Compare parts with the package contents list. If any part is missing or damaged, do not attempt to assemble the product.
- Some parts may contain sharp edges. The use of protective gloves is always recommended.
- When installing and assembling your pergola, it is recommended that 2 or more adults are involved.
- Considering at least three hours to complete the installation, even well anchored, a pergola unit that is not finished assembling can get or create damages to nearby environment.
- Verify that all nuts and bolts are tightly secured before and during use.
- Use proper tools and equipment for a safe and compliant installation. Never climb, sit or stand on structure while assembling.
- Even if this gazebo is built for all year-round, the snow must be removed from the roof at all times.

- The curtains must be removed from the unit in freezing period.
- Anchoring bolts or other anchoring devices are not supplied.
- Keep away from any electric installation or transportation device.
- Always recommended keeping assembly manual for further reference.

Care

Avoid using a pressure washer. The use of a mild soap with warm water is the best solution for the frame only. A clear water rinse is necessary then. Never use soap on fabric, this will reduce their durability, consequently their lifespan and general look. The use of a soft brush and warm water are an excellent solution for cleaning the fabric.

Warranty

Covered

We warrant the frame and fabric to be free of manufacturing defects to the original purchaser for one year.

Not covered

This warranty does not cover commercial use, improper care, neglected storage, vandalism, chemicals, acts of nature, fire, oxidation, stains, freeze damage, improper packaging for return and unreasonable or abusive use. Normal discoloration and build-up snow are not covered either.

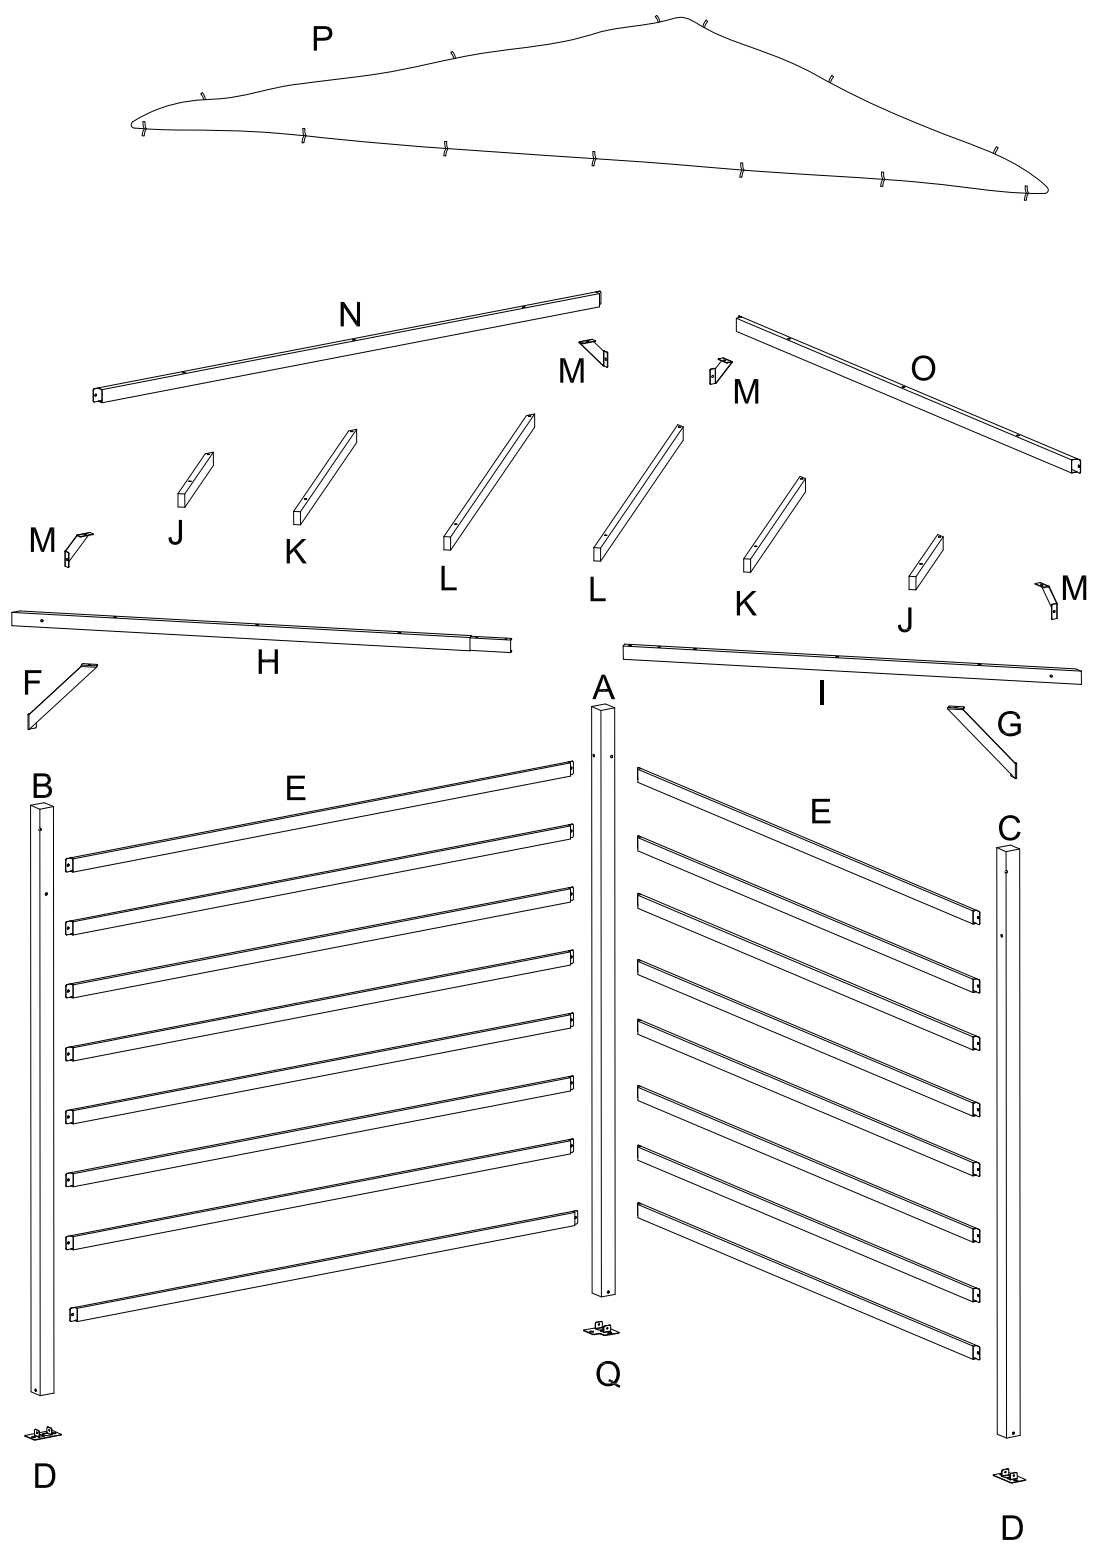
Customer service:

Consumer








For each part request, please contact your retailer with a description of the problem, pictures and consumer invoice copy, to ensure the proper information to proceed.






Seller

In addition to all the information already provided by the consumer, any parts requested must mention the person responsible for the client's file, the retailer name, address, branch if applicable, e-mail address, fax and phone number.







PARTS LIST:

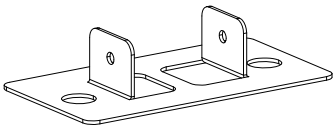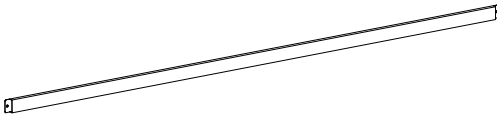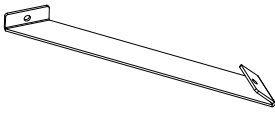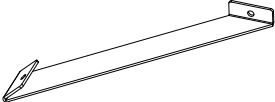NO	Description	Drawing	QTY
A	Post		1
B	Post		1
C	Post		1
D	Base flange		2
E	Decorative tubing		16
F	Brace		1
G	Brace		1
H	Crossbar		1
I	Crossbar		1
J	Roof tube		2
K	Roof tube		2

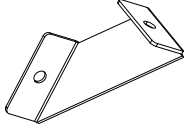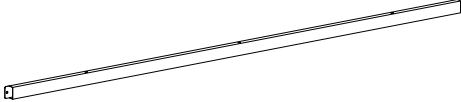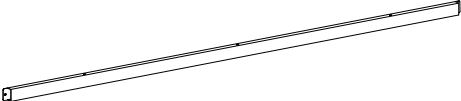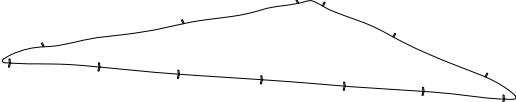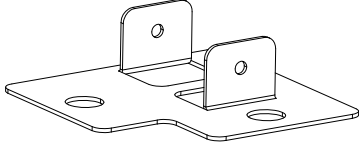NO	Description	Drawing	QTY
L	Roof tube		2
M	Brace		4
N	Crossbar		1
O	Crossbar		1
P	Roof cover		1
Q	Base flange		1


Hardware Kit:


NO	Description	Drawing	QTY
AA	Bolt M6 x 15mm		58
BB	Bolt M6 x 40mm		2
CC	Bolt M6 x 70mm		12
DD	Allen key		1



A  1

C  1

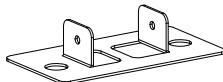B  1

D  2

Q  1

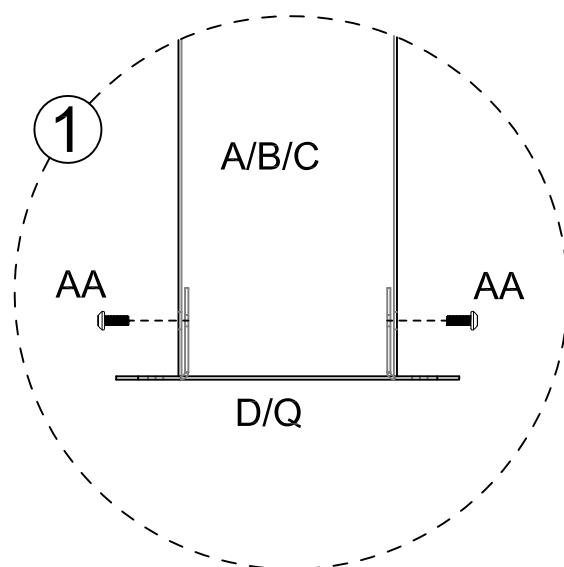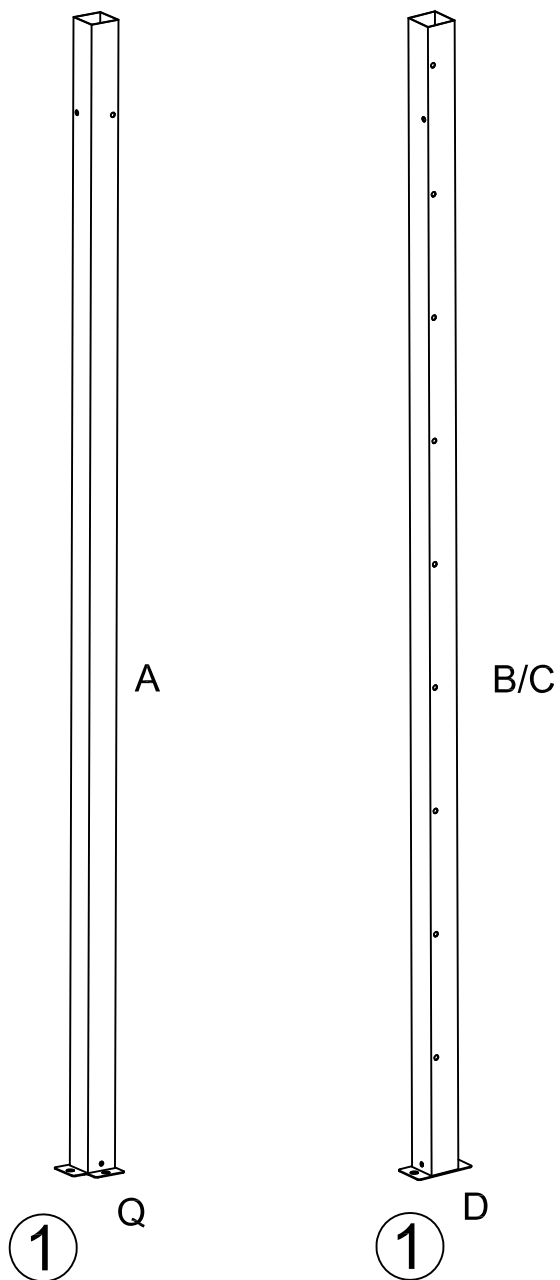

Step 1:

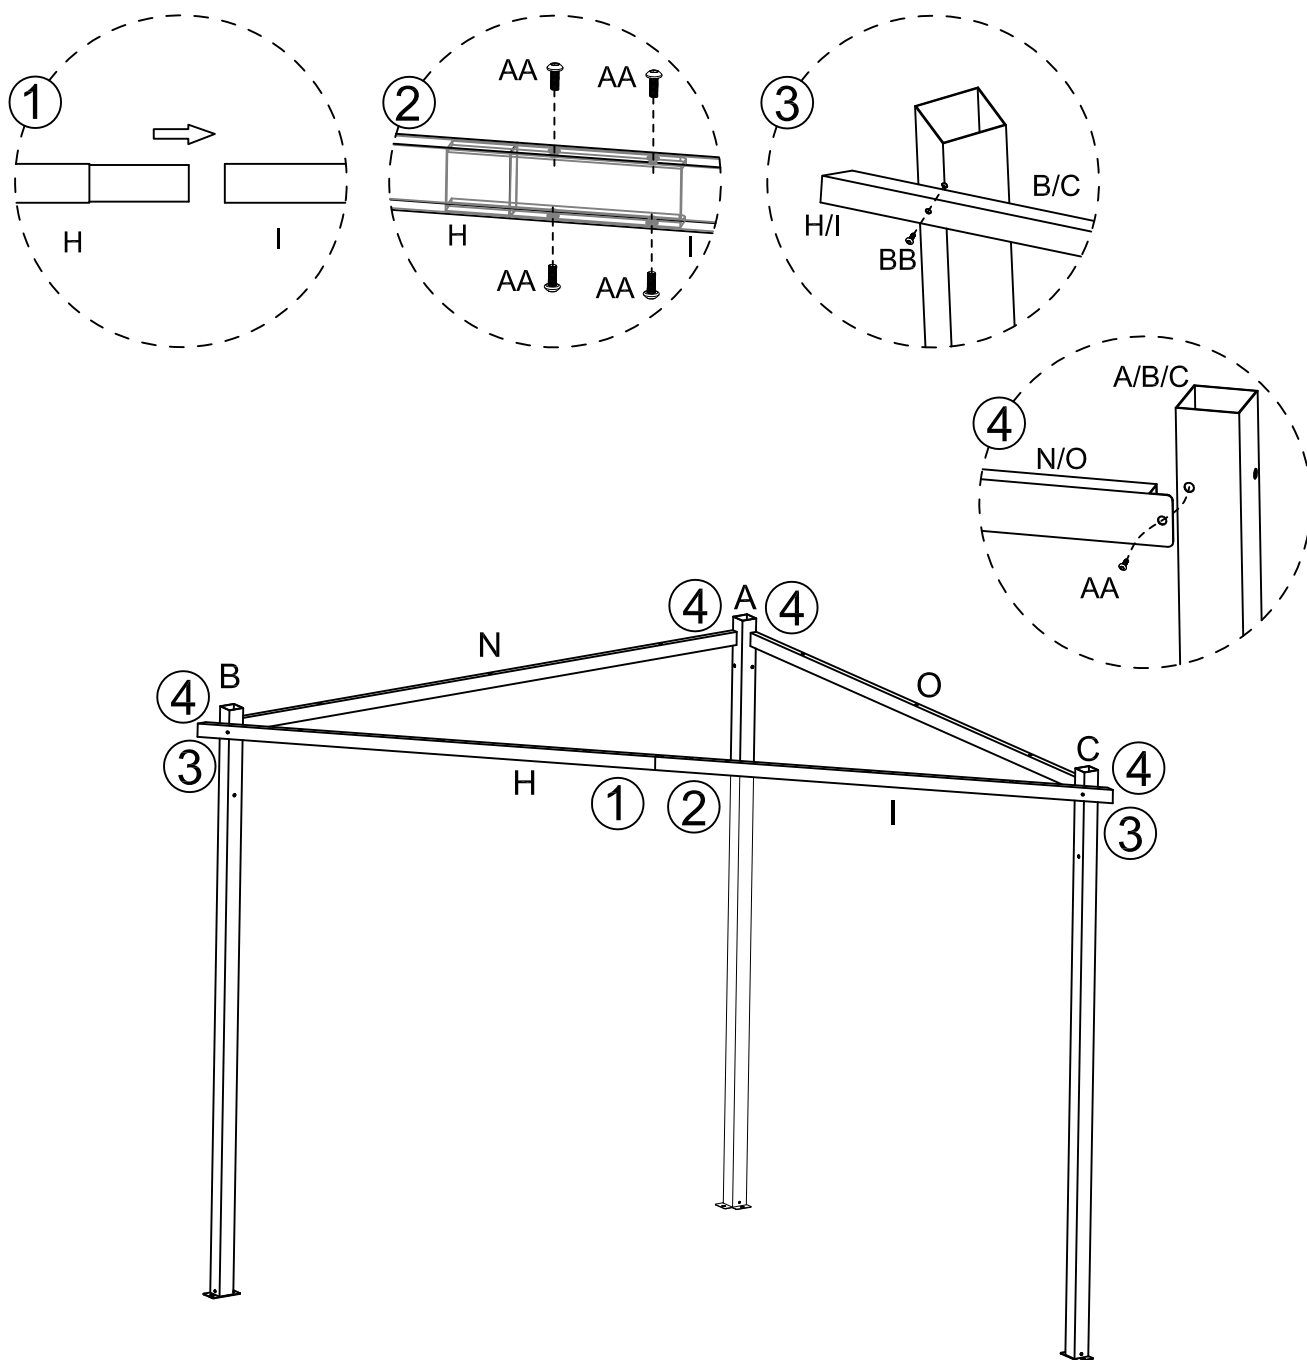
Bolts can be tight completely. Secure base flanges (D & Q) on the bottom of posts (A, B & C) by using bolts (AA) as fig. 1 shown.

H 1

I 1




N 1

O 1






Step 2:

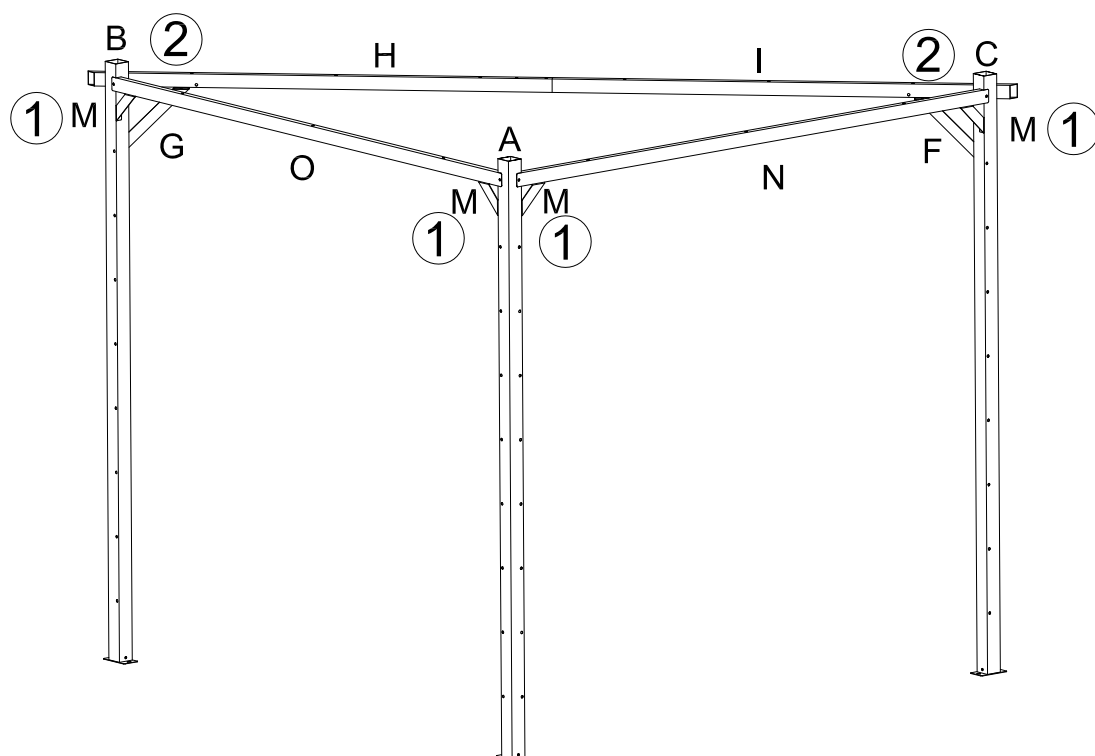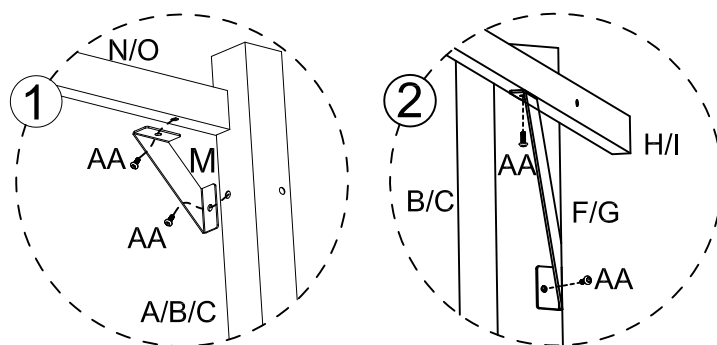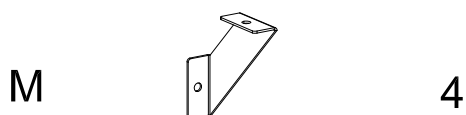1. Bolts can be tight completely. Insert crossbar (H) to the crossbar (I) by using bolts (AA) as fig. 1 & 2 shown.
2. Do not tight bolts completely yet. Secure crossbars (N, O & H / I) on posts (A, B & C) by using bolts (AA & BB) as fig. 3 & 4 shown.



Step 3:

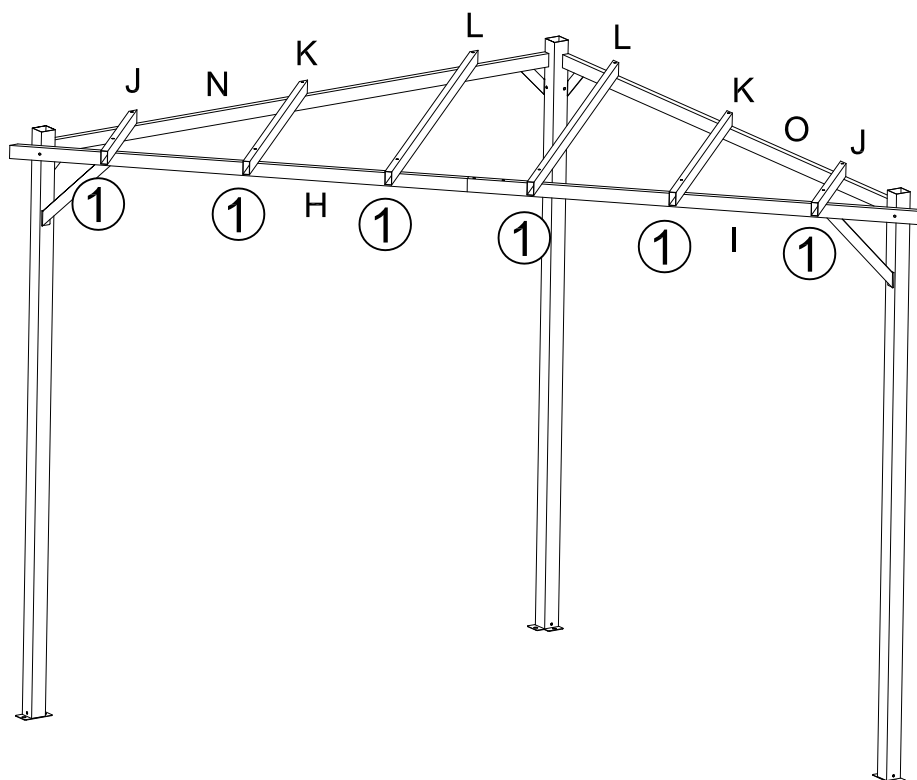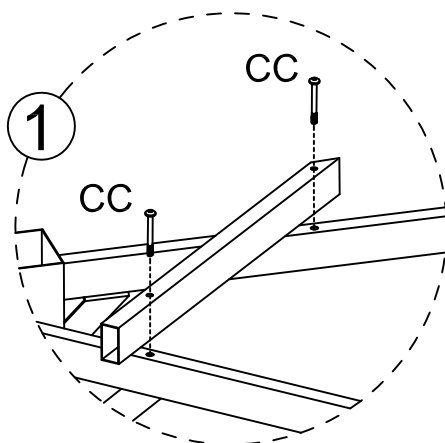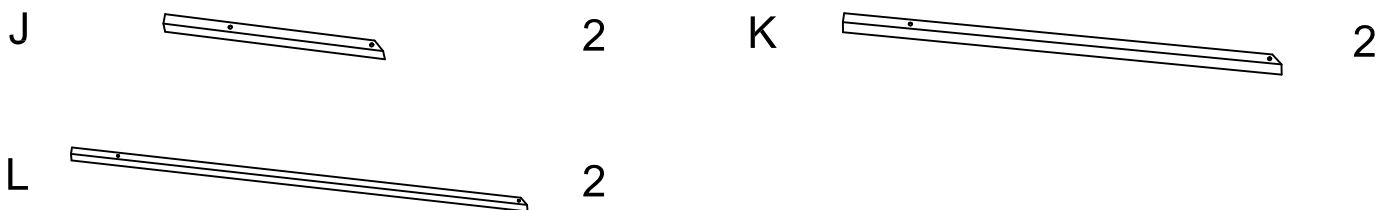
Do not tight bolts completely yet. Secures braces (F, G & M) to posts (A, B & C) by using bolts (AA) as fig. 1 & 2 shown. Then secure the other end of braces (F, G & M) to the crossbars (N, O & H / I) by using bolts (AA) as fig. 1 & 2 shown. Prior to the final tightening, ensure the assembly is fully aligned. Then tight all loose bolts.





Step 4:

Bolts can be tight completely. Secure roof tubes (J, K & L) on top of crossbars (N, O & H / I) by using bolts (CC) as fig. 1 shown.

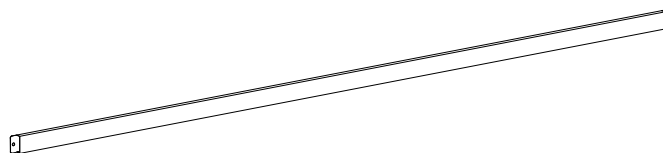E






16

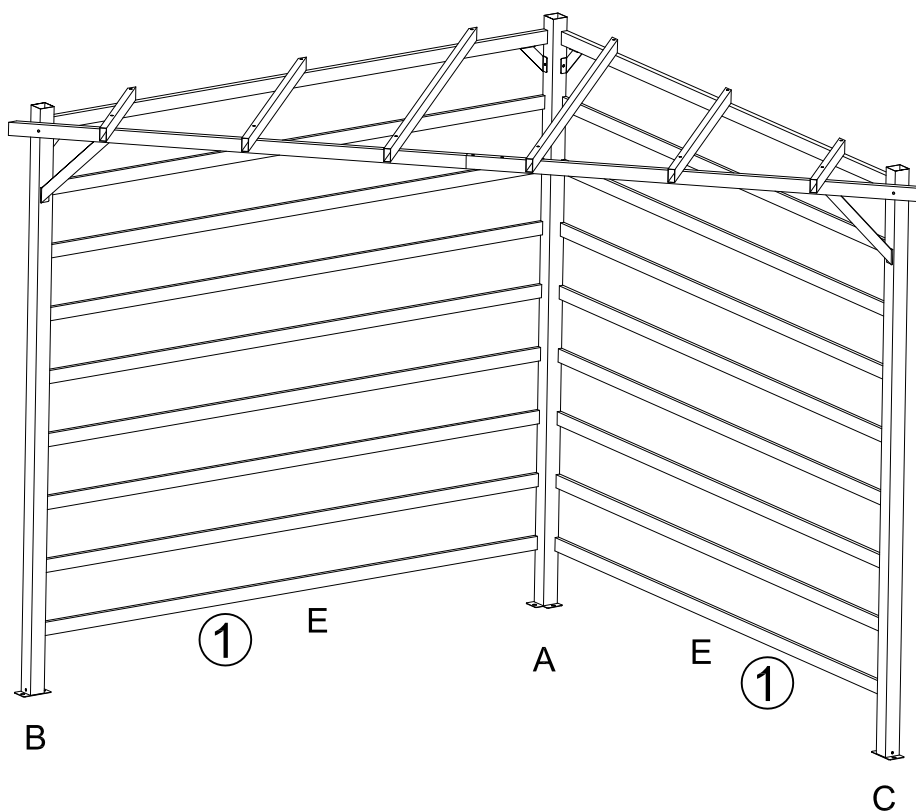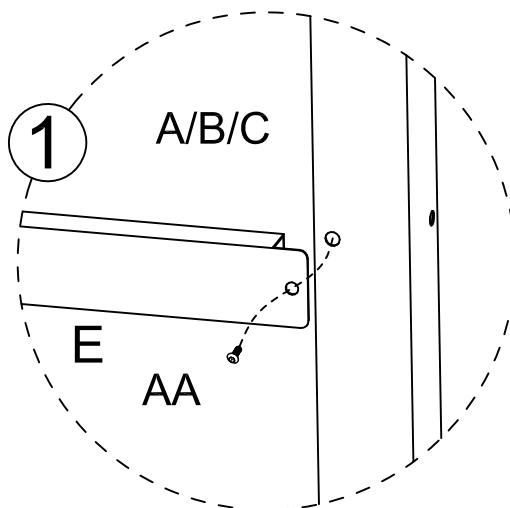

Step 5:

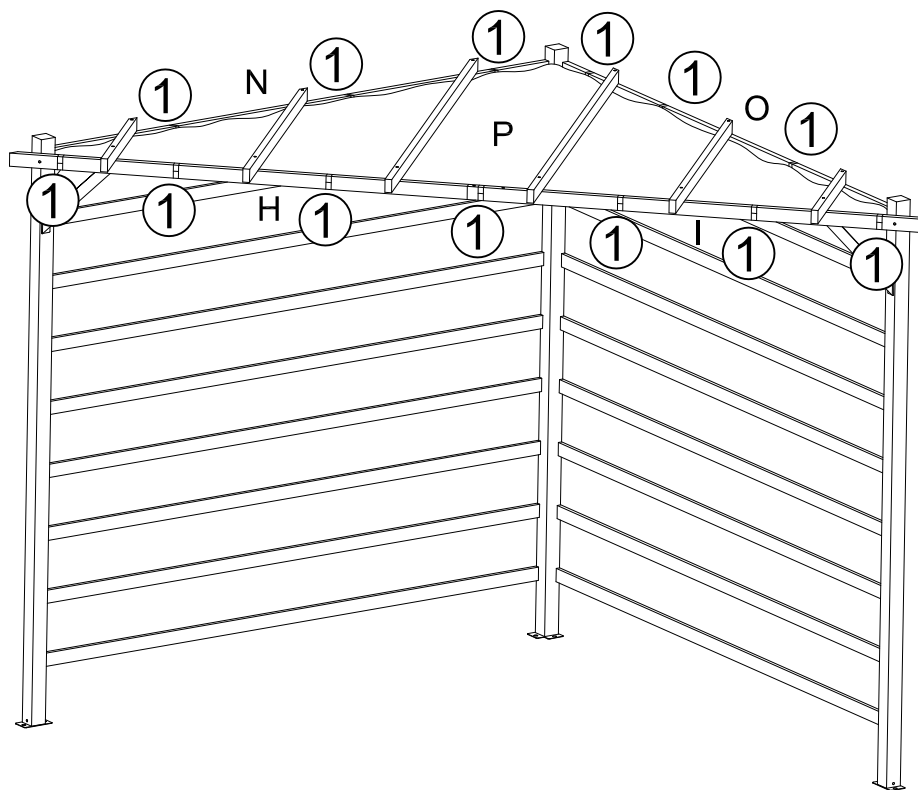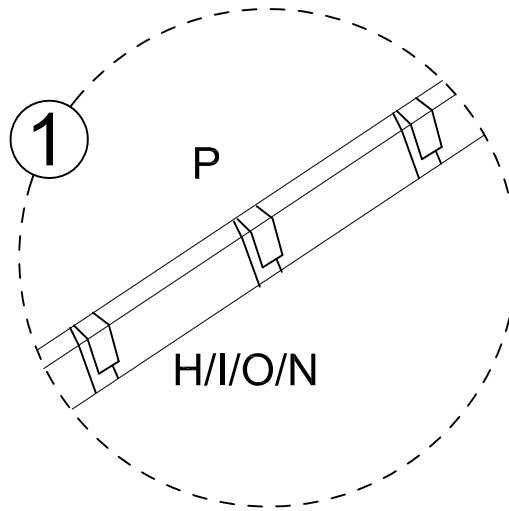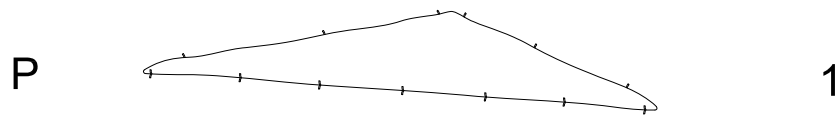Bolts can be tight completely. Secure the decorvative tubing (E) on posts (A, B & C) by using bolts (AA) as fig. 1 shown.



Step 6:

Attach all Velcros of the roof cover (P) to the crossbars (O, N & H / I) .

Please ensure posts and ground are level & perpendicular with each other once the unit is assembled.

We wish you a pleasant moment with your new F. Corriveau pergola!