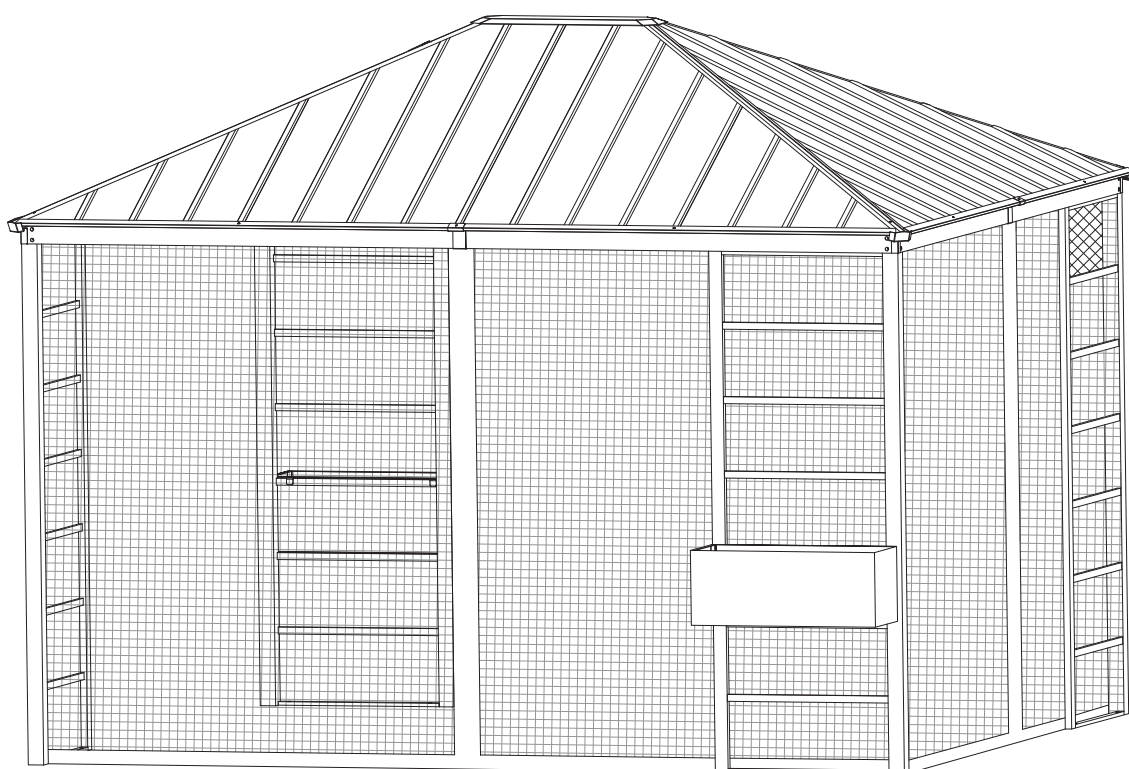


Sky Garden Gazebo 10' x 12' B101232 (2024)

Assembly Instructions



 **CORRIVEAU
ESSENTIELS**

Important notice

Please read and follow all safety statements, warnings, assembly instructions, use & care directions before attempting to assemble. Each of the recommendations must be followed to ensure the utmost solidity.

Security Rules

Warning:

Keep flame and heat sources away from the gazebo fabric. The fabric may burn or melt at direct contact or prolonged exposure with a source of heat. The application of any foreign substance to the gazebo fabric may affect the flame retardant properties.

Regulation

It is the responsibility of the consumer being in accordance with city regulation, construction code, zoning or any limitations and obtaining permit prior assembling the gazebo.

Recommendation

- When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to parts.
- Do not use the gazebo during extreme weather conditions.
- Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.
 - Some parts may contain sharp edges. Use of protective gloves is always recommended.
- When installing and assembling your gazebo, it is recommended that 2 or more adults are involved.
- Considering at least 5 hours to complete installation, even well anchored, a gazebo unit that is not finished assembly can get or create damages to nearby environment.
- Verify that all nuts and bolts are tightly secured before and during use period.
- Use proper tools and equipment for a safe and compliant installation. Never climb, sit or stand on structure while assembling.
- Although this gazebo is built for all year round, the snow must be removed from the roof.
- Mosquito net and curtains (optional) must be removed from the unit in freezing period.
- Anchoring bolts or other anchoring devices are not supplied.
- Keep away from any electric installation or transportation device.
- Always recommended to keep assembly manual for further reference.

Care

Avoid using a pressure washer. The use of a mild soap with warm water is the best solution for the frame only. A clear water rinse is necessary then. Never use soap on fabric, this will reduce their durability, consequently their lifespan and general look. The use of a soft brush and warm water are an excellent solution for cleaning the fabric.

Warranty

Covered

We warrant the frame and fabric to be free of manufacturing defects to the original purchaser for one year.

Not covered

This warranty does not cover commercial use, lack or improper care, neglected storage, vandalism, chemical, acts of nature, fire, oxidation, stains, freeze damage, improper packaging for return and unreasonable or abusive use. Normal discoloration and build-up snow damages are not covered either.

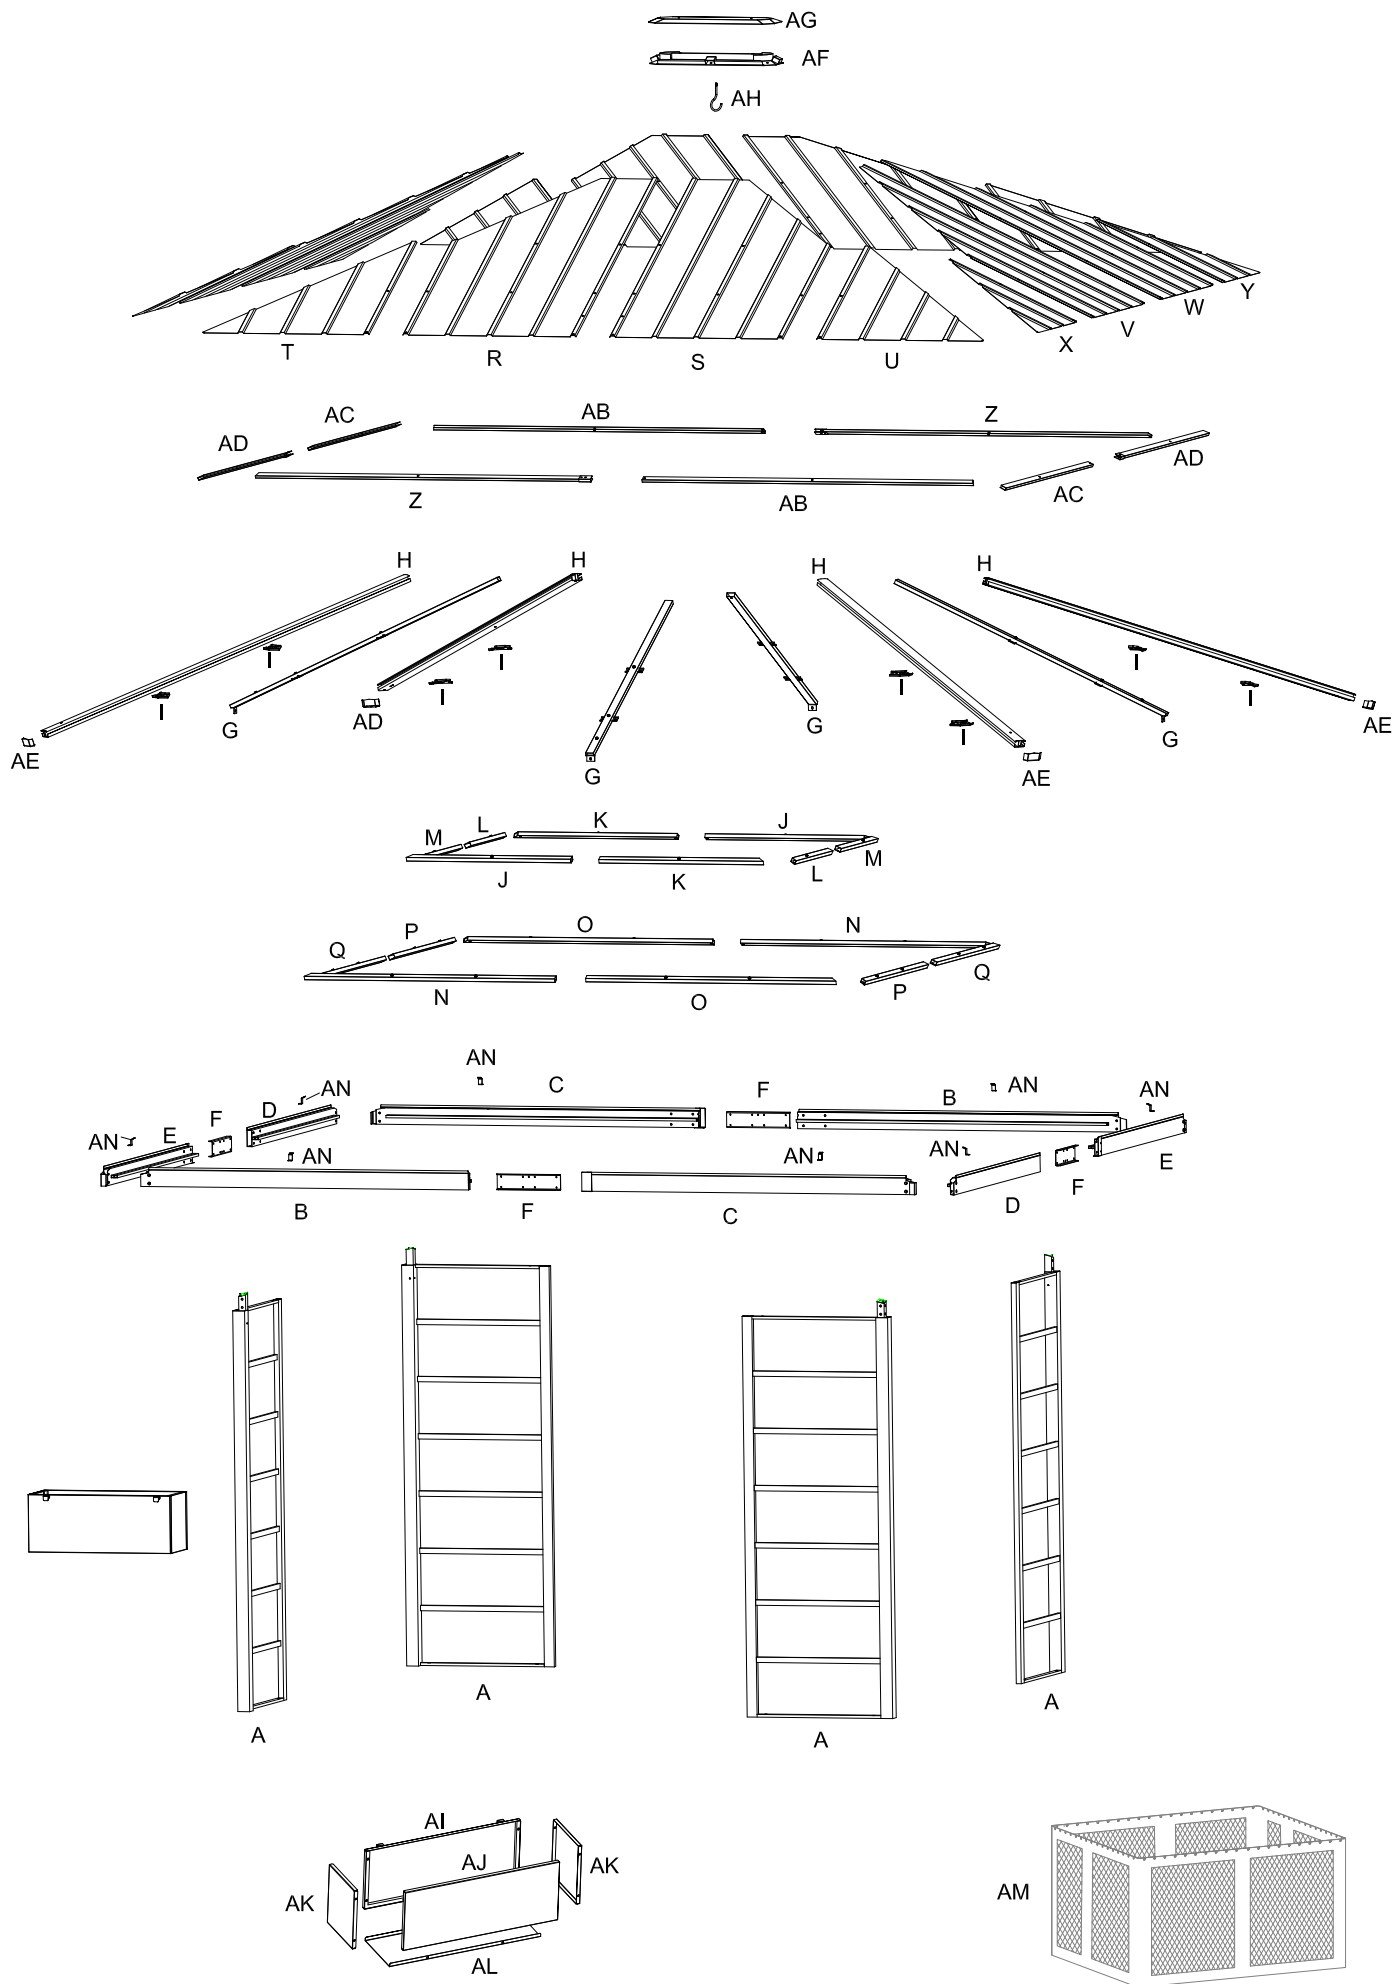
Customer service:

Consumer





For each part request, please contact your retailer with a description of the problem, pictures and consumer invoice copy, to ensure the proper information to be proceed.









Seller





In addition to all the information already provided by the consumer, any parts requested must mention the person responsible for the client's file, the retailer name, address, branch if applicable, e-mail address, fax and phone number.








Parts List :


No.	Description	Drawing	QTY
A	Post		4
B	Crossbar		2
C	Crossbar		2
D	Crossbar		2
E	Crossbar		2
F	Connector		4
G	Middle support tubing		4
H	Corner roof tubing		4
I	Corner connector		8
J	Roof support tubing		2
K	Roof support tubing		2





No.	Description	Drawing	QTY
L	Roof support tubing		2
M	Roof support tubing		2
N	Roof support tubing		2
O	Roof support tubing		2
P	Roof support tubing		2
Q	Roof support tubing		2
R	Roof panel		2
S	Roof panel		2
T	Roof panel		2
U	Roof panel		2
V	Roof panel		2


No.	Description	Drawing	QTY
W	Roof panel		2
X	Roof panel		2
Y	Roof panel		2
Z	Eave profile		2
AB	Eave profile		2
AC	Eave profile		2
AD	Eave profile		2
AE	Corner molding		4
AF	Roof connector		1
AG	Roof cap		1
AH	Hook		1


No.	Description	Drawing	QTY
AI	Flower pot back panel		2
AJ	Flower pot front panel		2
AK	Flower pot side panel		4
AL	Flower pot bottom panel		2
AM	Mosquito nets		1
AN	Bracket		8

Hardware Kit:

No.	Description	Drawing	QTY
AA	Bolt M6 X 15mm		164
BB	Bolt M6 X 20mm		12
CC	Bolt M6 X 30mm		6

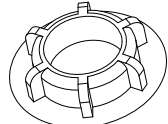No.	Description	Drawing	QTY
DD	Bolt M6 X 50mm		4
EE	Washer		4
FF	Half-threaded bolt M6 X30mm		16
GG	Nut		12
HH	Plastic cap		16
II	Plastic Washer		62
JJ	Allen key		2
KK	Wrench		1


B		x 2	C		x 2
D		x 2	E		x 2
F		x 4	AN		x 8

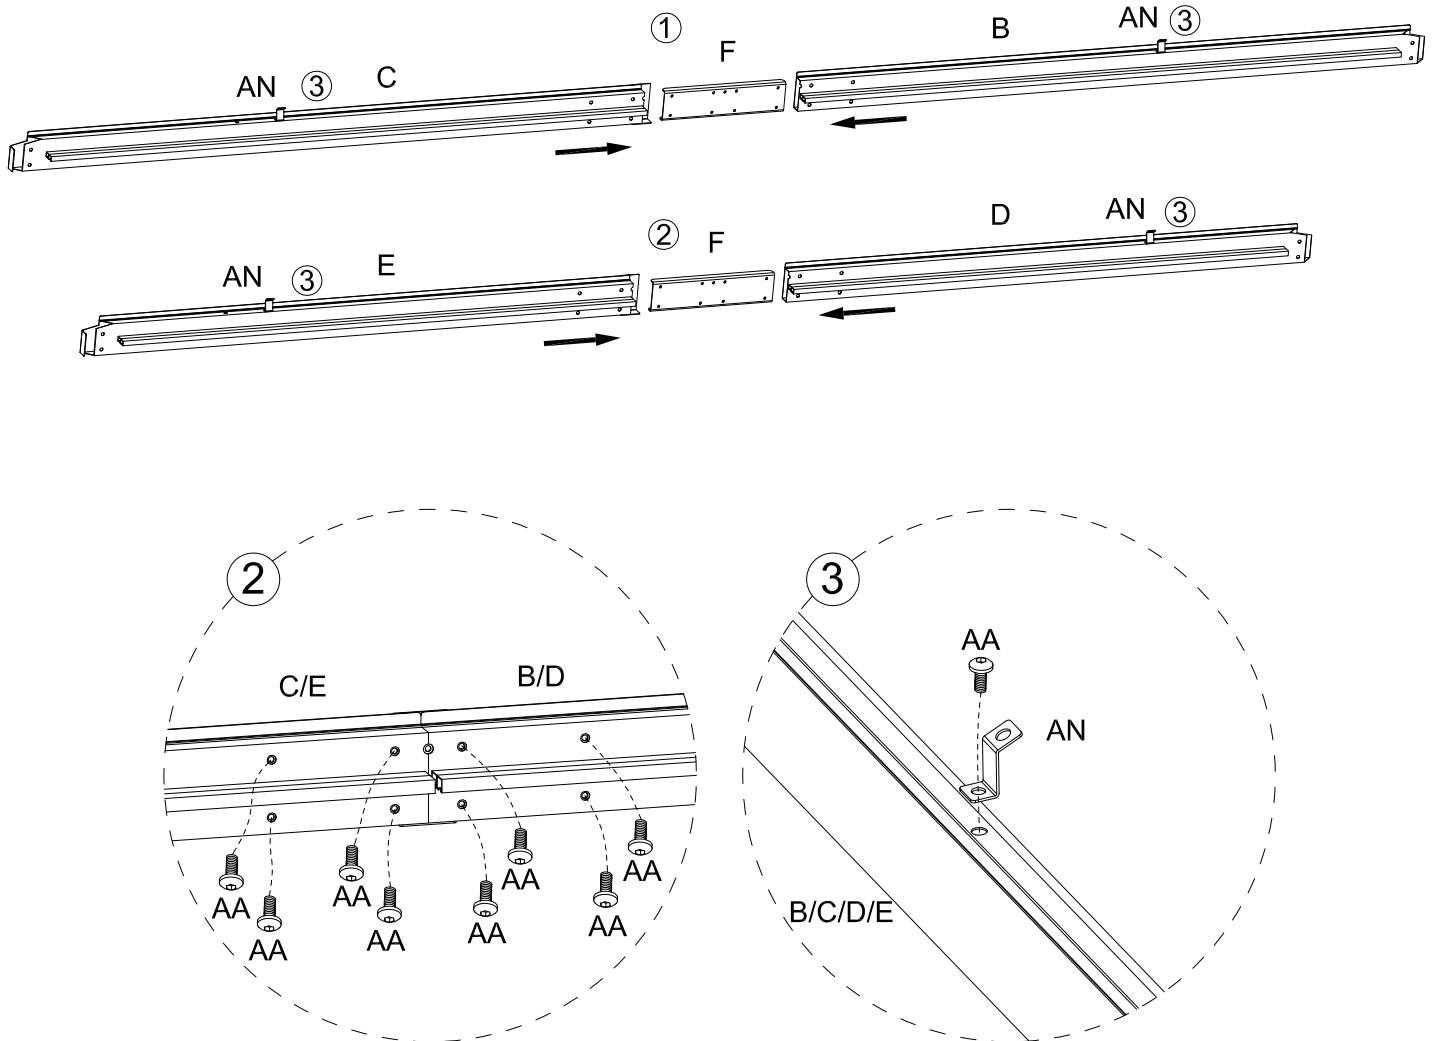





Step 1:

1. Bolts can be tight completely. Fix the connector (F) into the crossbars (B & C) by using the bolts (AA) as shown in fig 1 & 2. Make sure all 5 holes of the connector (F) are aligned. Repeat that step for the other crossbars (B & C).
2. Bolts can be tight completely. Fix the connector (F) into the crossbars (D & E) by using the bolts (AA) as shown in fig 1 & 2. Make sure all 5 holes are aligned. Repeat that step for the other crossbars (D & E).
3. Fix the brackets (AN) on the crossbars (B, C, D & E) by using the bolts (AA) as shown in fig 3.

A



x 4

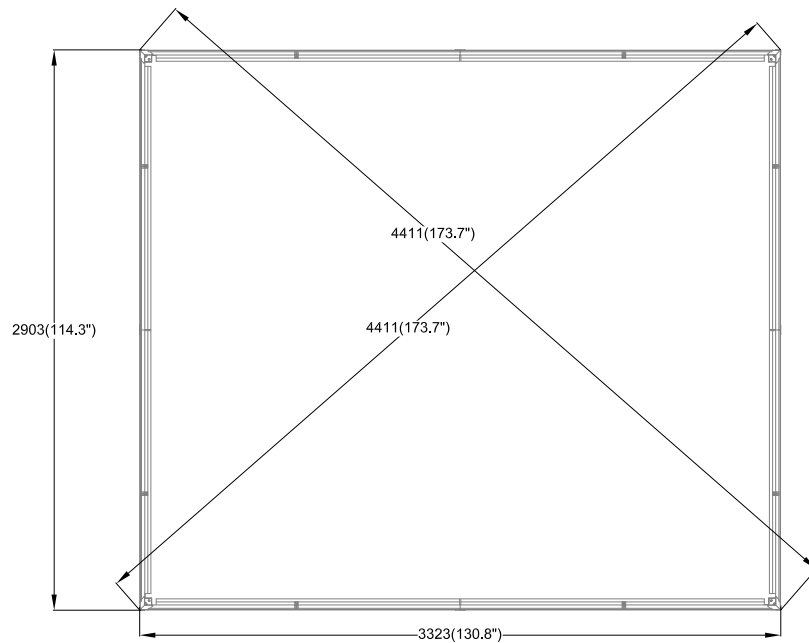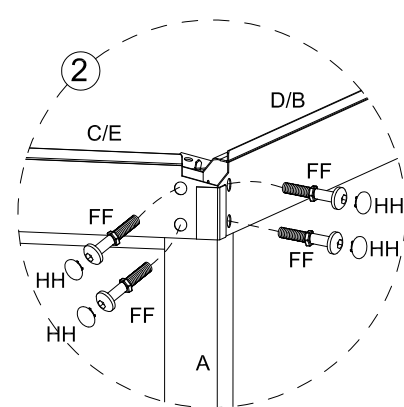
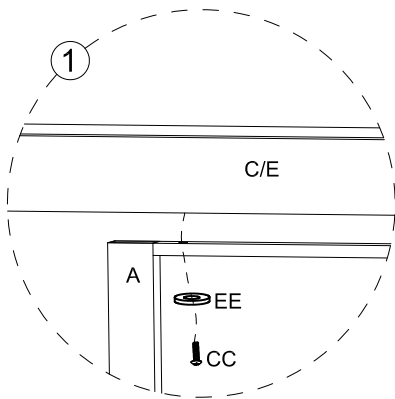
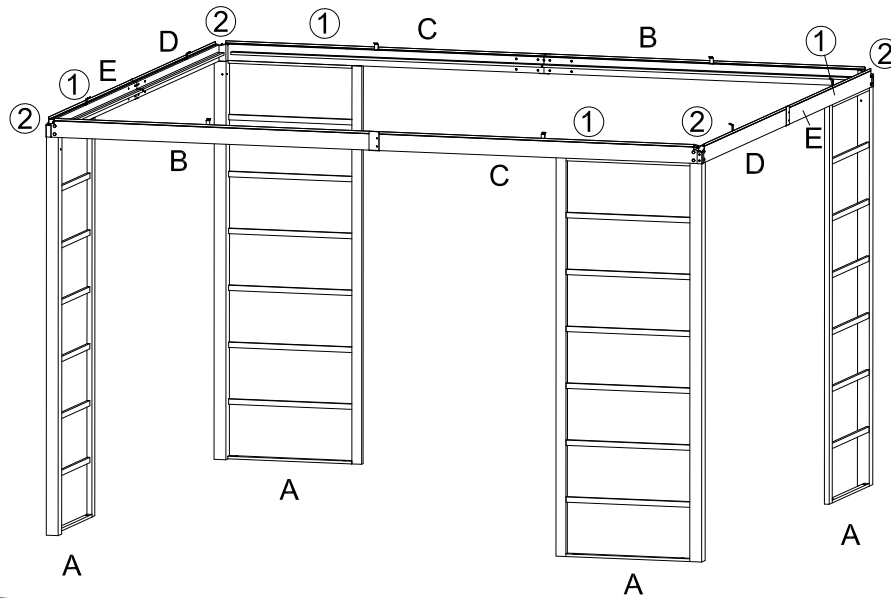


It is important to get square angles in the crossbars corners, so diagonal measurements (X) should be taken on top and bottom of the posts in corners and get the same measurement for all of them. This care refers to get the assembling easier.

Step 2

Note: Please check the above fig. carefully and make sure all parts are in the right position. For your security, you may need 4 persons for this step.






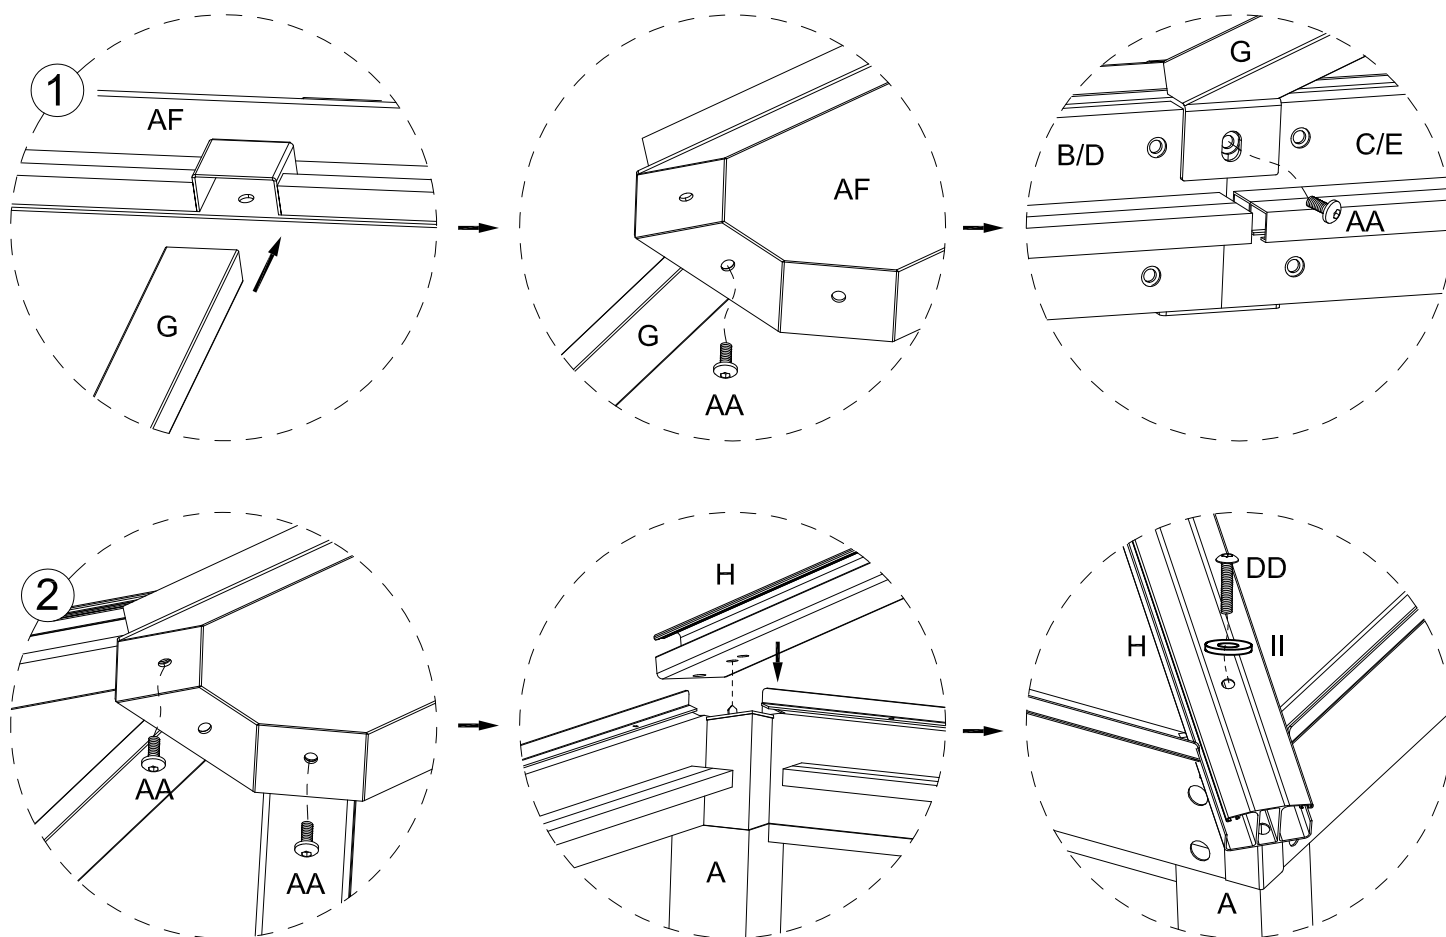
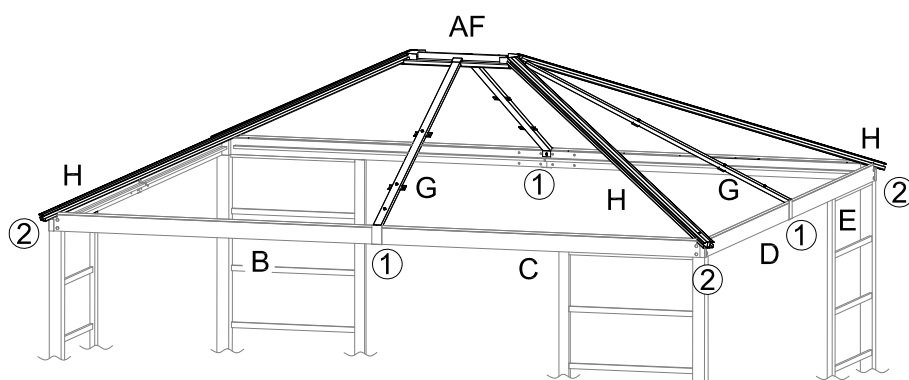
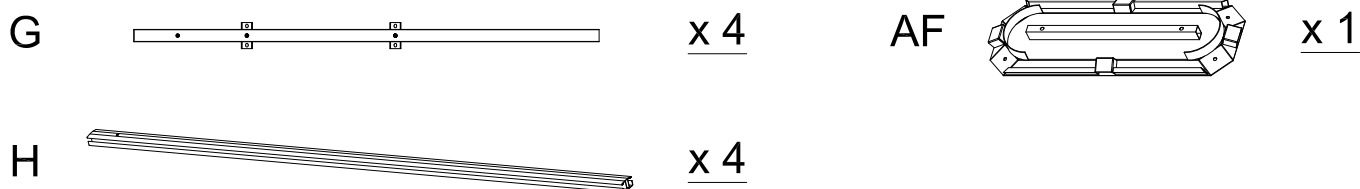
Do not tight the bolts completely yet. Fix the crossbars (C & E) to the posts (A) by using the bolts (CC) with a washer (EE) as shown in fig 1. Then, fix the top of the posts (A) to the crossbars (B, C, D & E) by using the bolts (FF) as shown in fig 2. Make sure the nut on each bolt (FF) are at the top of the bolt. Tightening must be done only once all bolts are installed. Then, install the plastic cap (HH) as shown in fig 2.







Step 3:

1. Do not tight the bolts completely yet. Fix the middle support tubing (G) to the roof connector (AF) by using the bolts (AA). Then, fix to the crossbars (B, C, D & E) by using the bolts (AA) as shown in fig. 1.

2. Do not tight the bolts completely yet. Fix the corner roof tubing (H) to the roof connector (AF) by using the bolts (AA). Then, fix to the crossbars (B, C, D & E) by using the bolts (DD) with a plastic washer (II) as shown in fig 2.



J		x 2	K		x 2
L		x 2	M		x 2
N		x 2	O		x 2
P		x 2	Q		x 2
I		x 8			

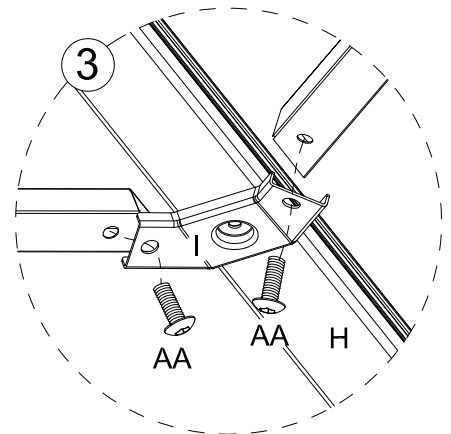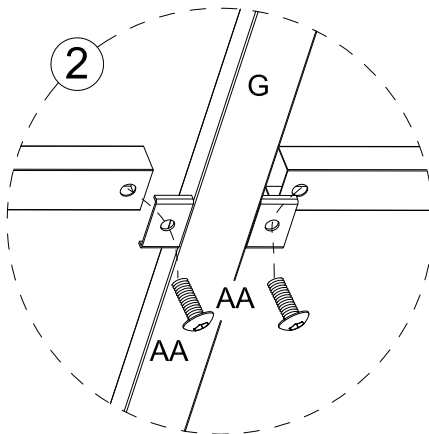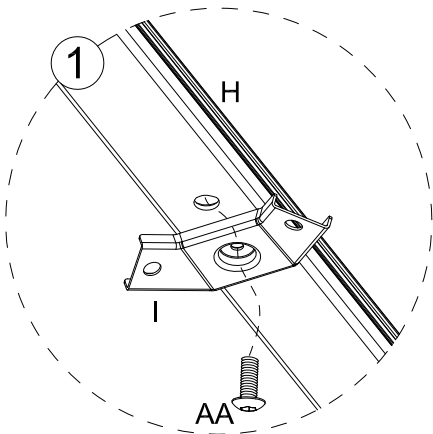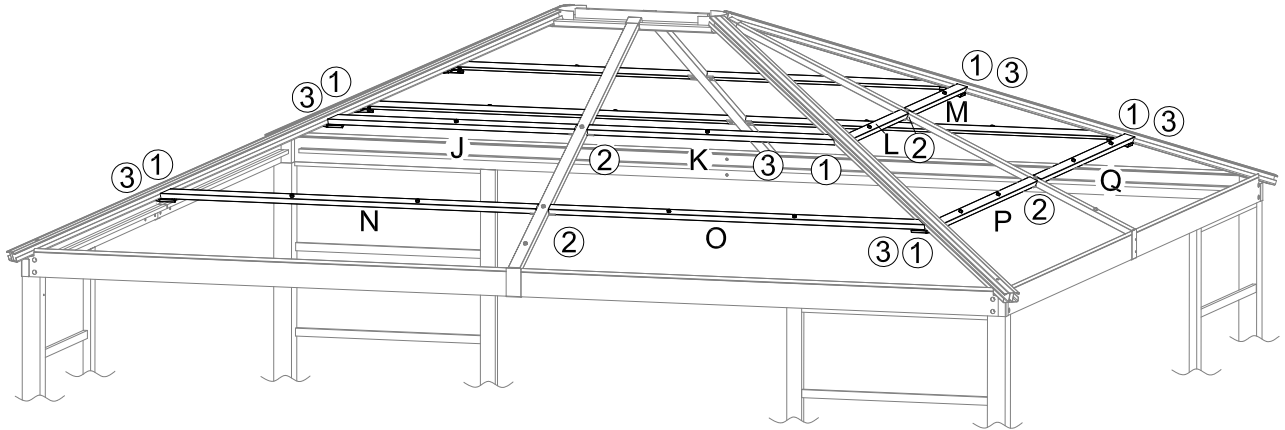



Step 4:

1. Do not tight the bolts completely yet. Fix the 2x corner connectors (I) on a corner roof tubing (H) by using the bolts (AA). Repeat that step for all corner roof tubing (H) & corner connectors (I) remaining. Take note that the corner connectors (I) will be placed as shown in fig 1.

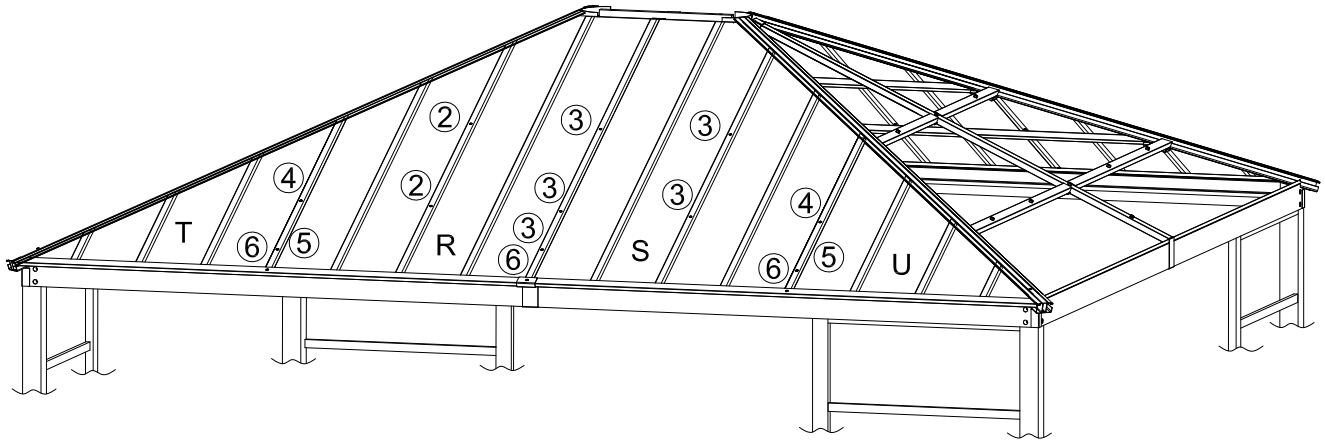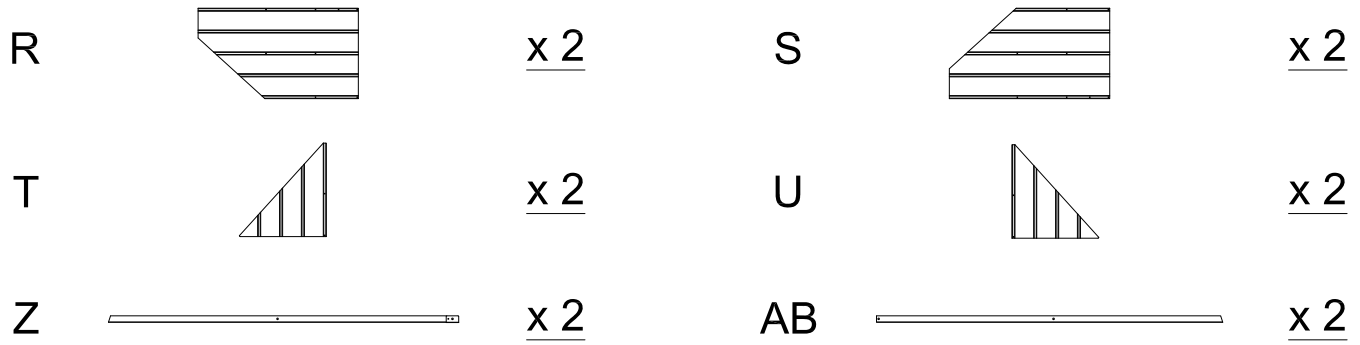2. Do not tight the bolts completely yet. Fix the roof supports (J, K, L, M, N, O, P & Q) on the middle support tubing (G) & corner connectors (I) by using the bolts (AA) as shown in fig. 2 & 3.



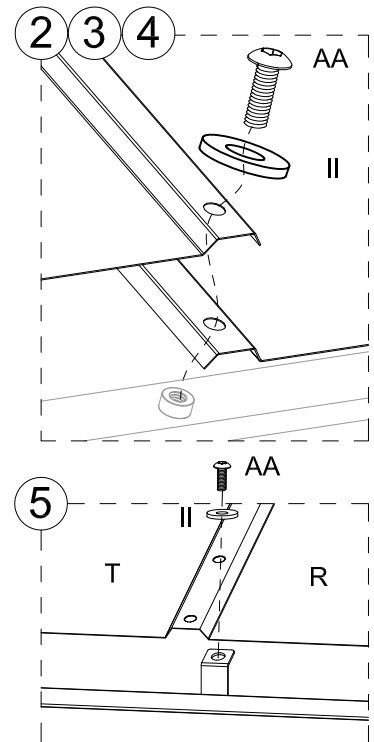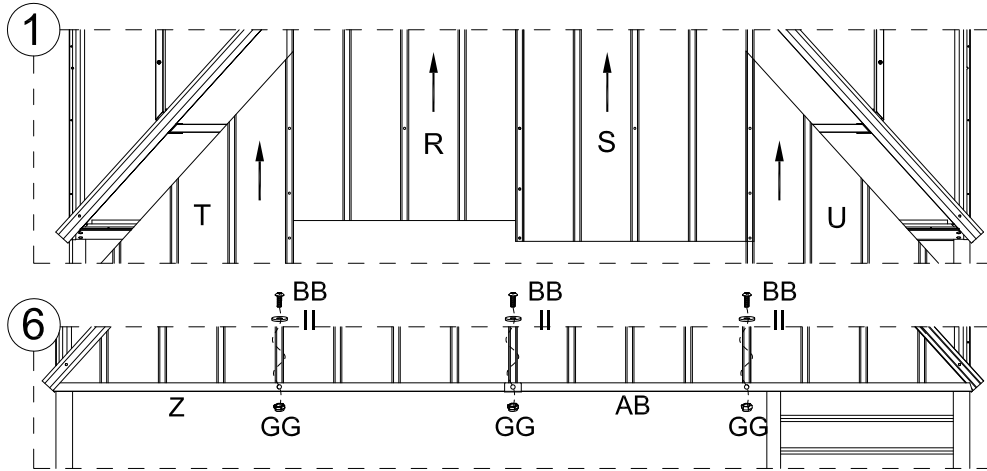Note: Please do the steps simultaneously & install from left to right to prevent the panels sliding off.



Step 5:

1. Do not tight the bolts completely yet. From left to right, insert the roof panels (T & R) in the corner roof tubing (H) groove and fix them onto the middle roof tubing (G), roof supports tubing (J, K, N & O) & brackets (AN) by using the bolts (AA) with plastic washer (II). Note that the roof panels need to overlap each other. Then, repeat this step for the panels (S & U).
2. Do not tight the bolts completely yet. Insert & fix the eave profiles (Z & AB) at the bottoms of the roof panels (R, S, T & U) by using the bolts (BB) with plastic washers (II) and nuts (GG) as shown in the fig. 6. Then tighten all bolts from this step 5.2.


Repeat those steps to the opposite side.

AG






x 1

AH






x 1

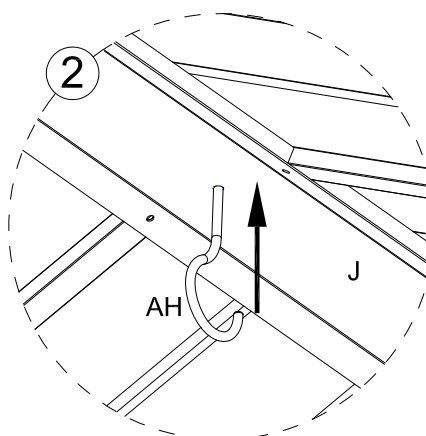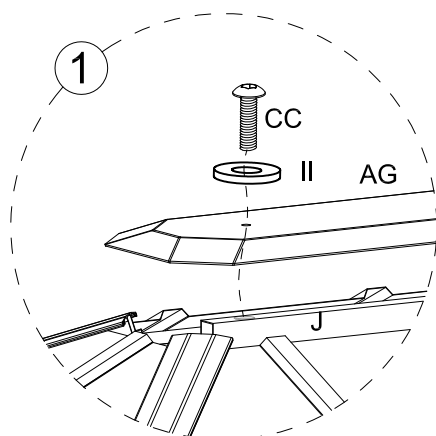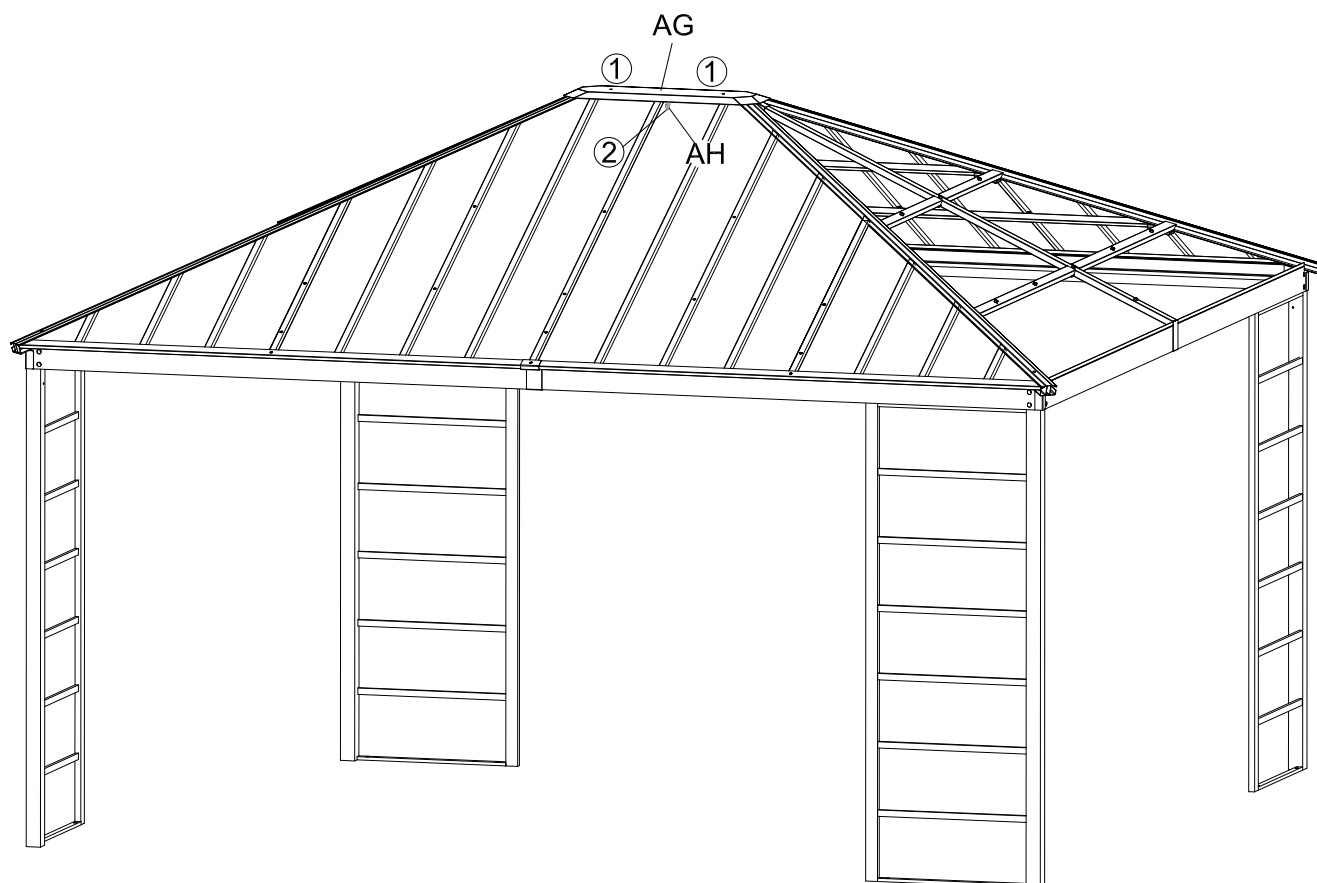



Step 6:

1. Bolts can be tight completely. Fix the roof cap (AG) onto the roof connector (AF) by using the bolts (CC) with plastic washers (II) as shown in fig 1.
2. Fix the hook (AH) under the roof connector (AF) as shown in fig 2.

V		x 2	W		x 2
X		x 2	Y		x 2
AC		x 2	AD		x 2
AD		x 2			

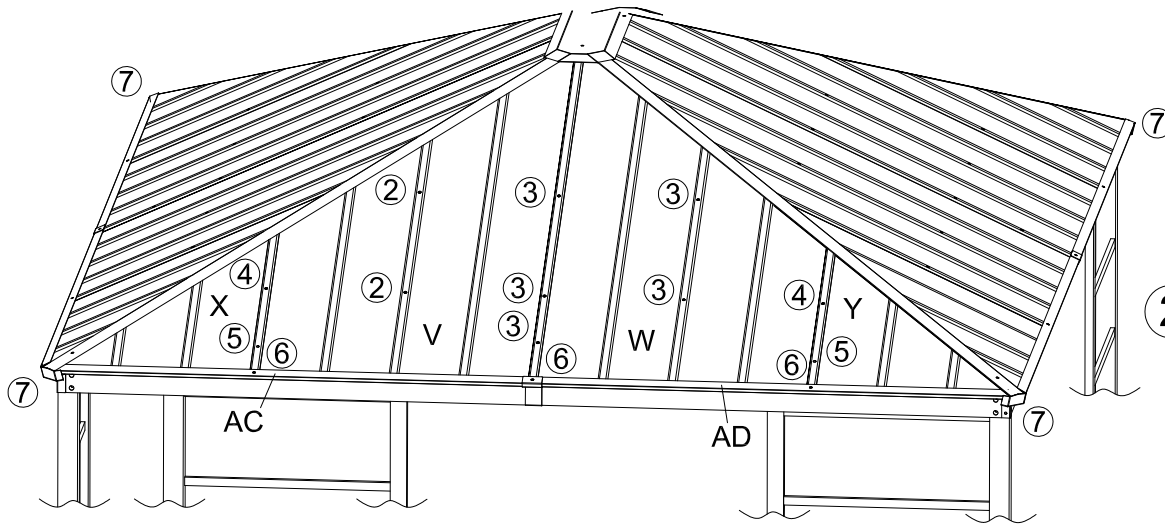

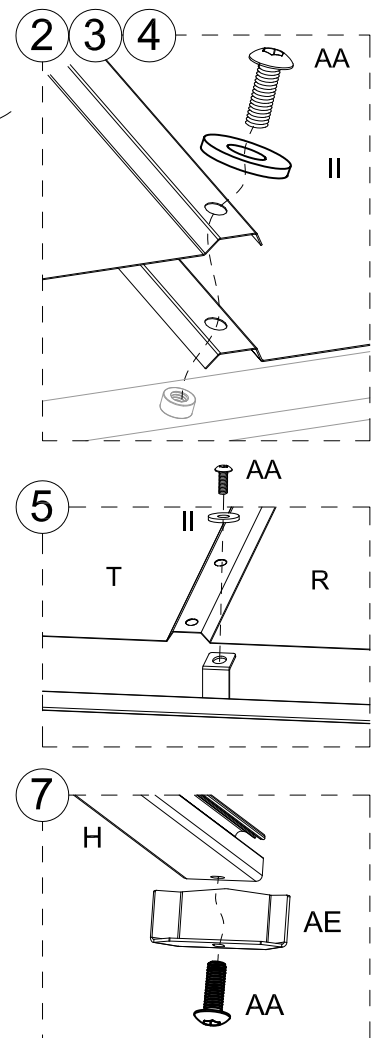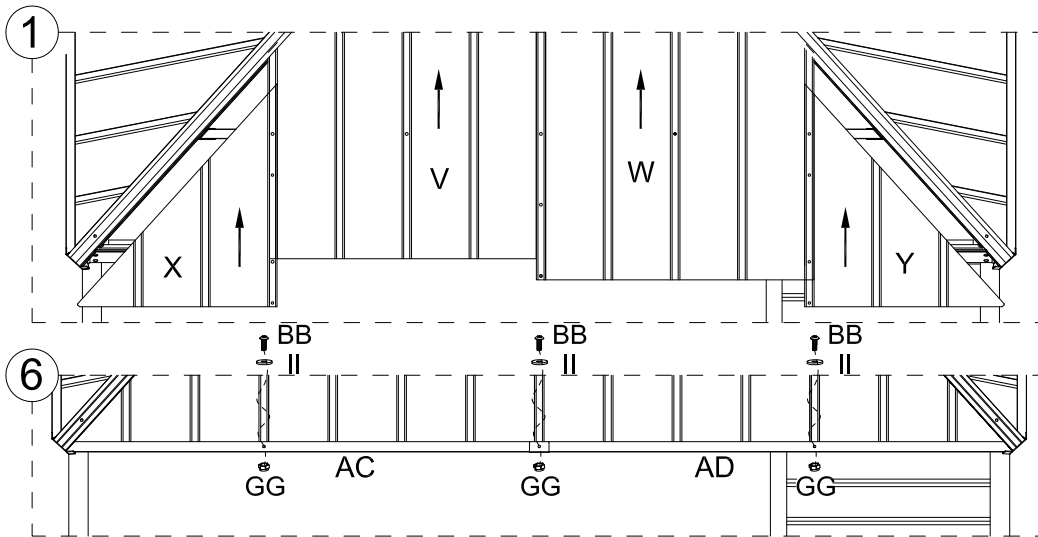Notes: Please do the steps simultaneously & install clockwise to prevent the panels sliding off.



Step 7:

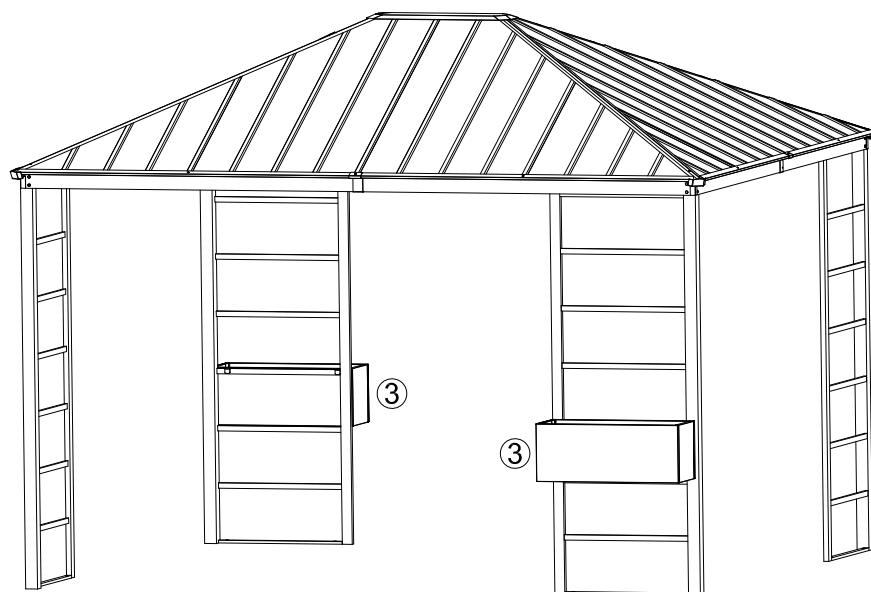
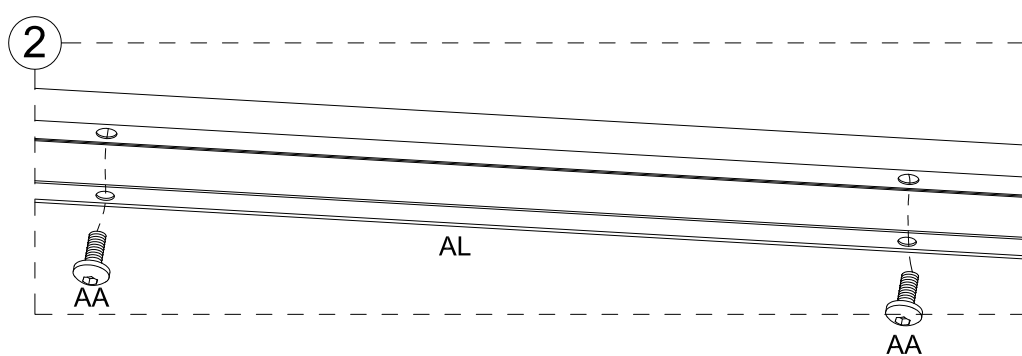
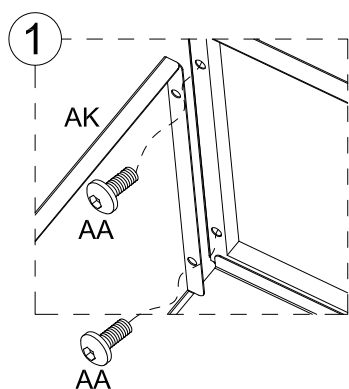
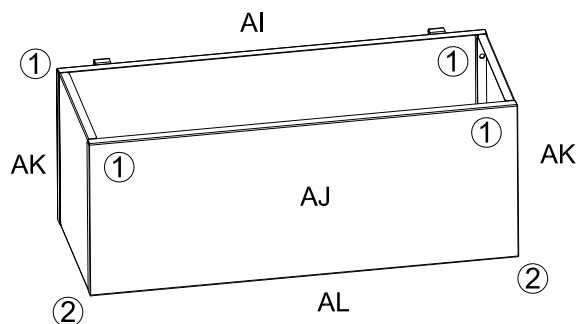
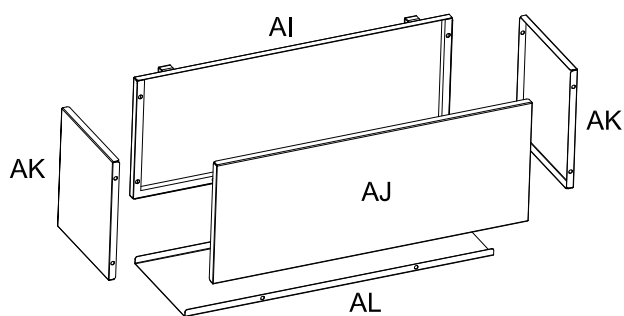
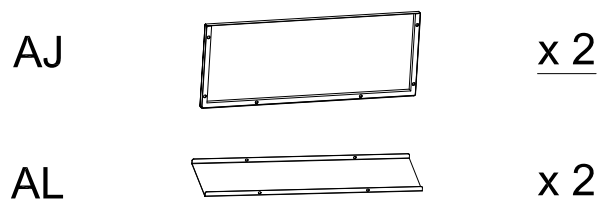
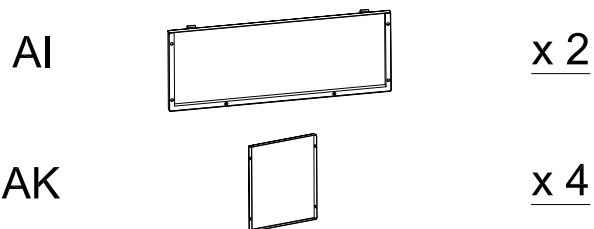
1. Do not tight the bolts completely yet. From left to right, insert the roof panels (X & V) in the corner roof tubing (H) groove and fix them onto the middle roof tubing (G), roof supports tubing (L, M, P & Q) & brackets (AN) by using the bolts (AA) with plastic washer (II). Note that the roof panels need to overlap each other. Then, repeat this step for the panels (W & Y).

2. Do not tight the bolts completely yet. Insert & fix the eave profiles (AC & AD) at the bottoms of the panels (X, V, W & Y) by using the bolts (BB) with plastic washers (II) and nuts (GG) as shown in the fig. 6. Then tighten all bolts from this step 7.2.

Repeat those steps for the opposite side.

3. Bolts can be tight completely. Fix the corner moldings (AE) to the corner roof tubing (H) by using the bolts (AA) as shown in fig 7.

4. Tight all remaining loose bolts.




Step 8:



1. Do not tight the bolts completely yet. Fix the flower pot side panel (AK) to the flower pot back panel (AI) by using the bolts (AA) as shown in fig. 1. Then fix the flower pot bottom panel (AL) the flower pot back panel (AI) by using the bolts (AA) as shown in fig 2. Fix the flower pot front panel (AJ) by using the bolts (AA) as shown in fig. 1. Then, fix all the bolts completely. Repeat this step for all remaining panels.

2. Hang the flower pots at the place desired.

AM



x 1

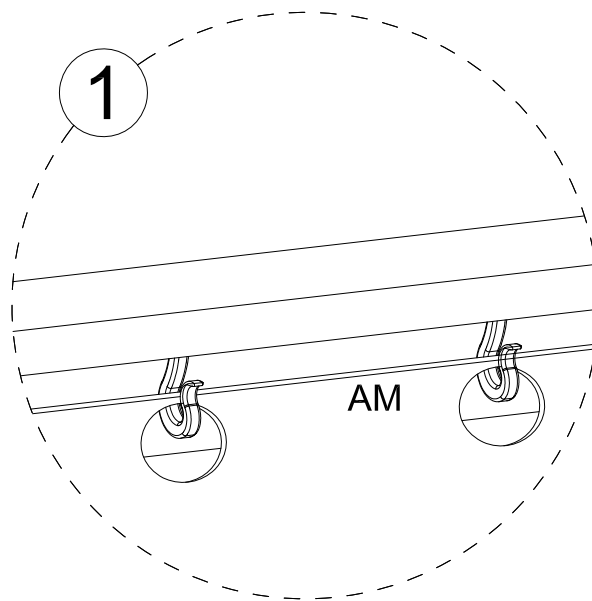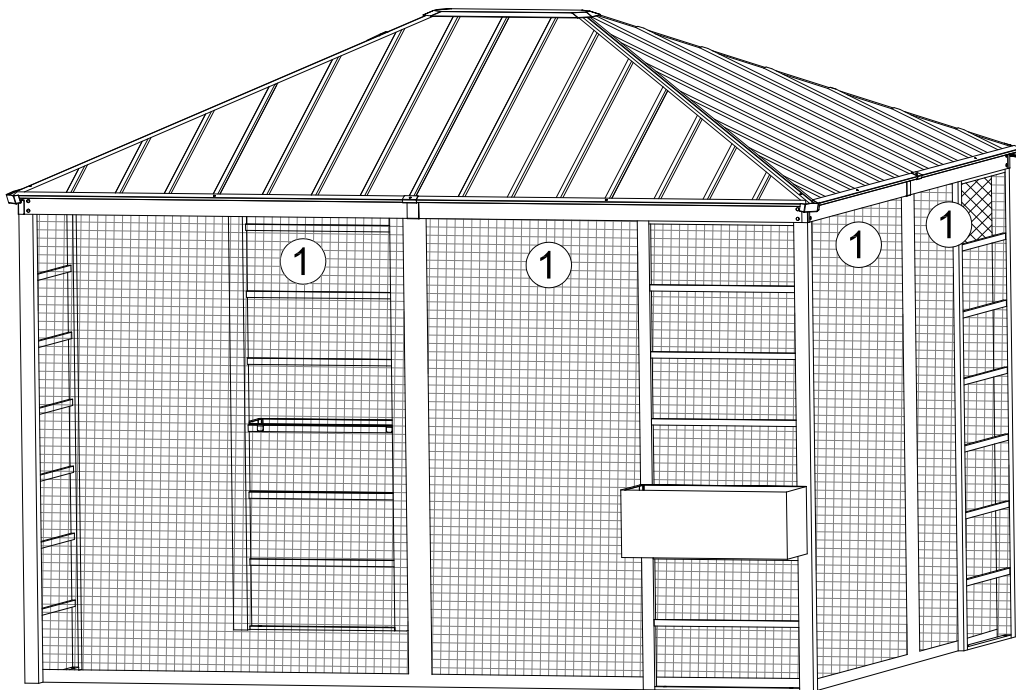

Step 9:

1. Hang the mosquito net (AM) on the hooks properly.
2. Depending on the ground surface, use the proper anchoring devices. Anchors are not supplied.
3. Remove all gazebo assembling stickers.

Please ensure that the posts and the ground is level & perpendicular with each other once the unit is assembled.

We wish you a lot of good moments with your new Corriveau Essentiels gazebo!

Leave us your comments on the Corriveau Outdoor furniture website. We look forward to hearing from you!