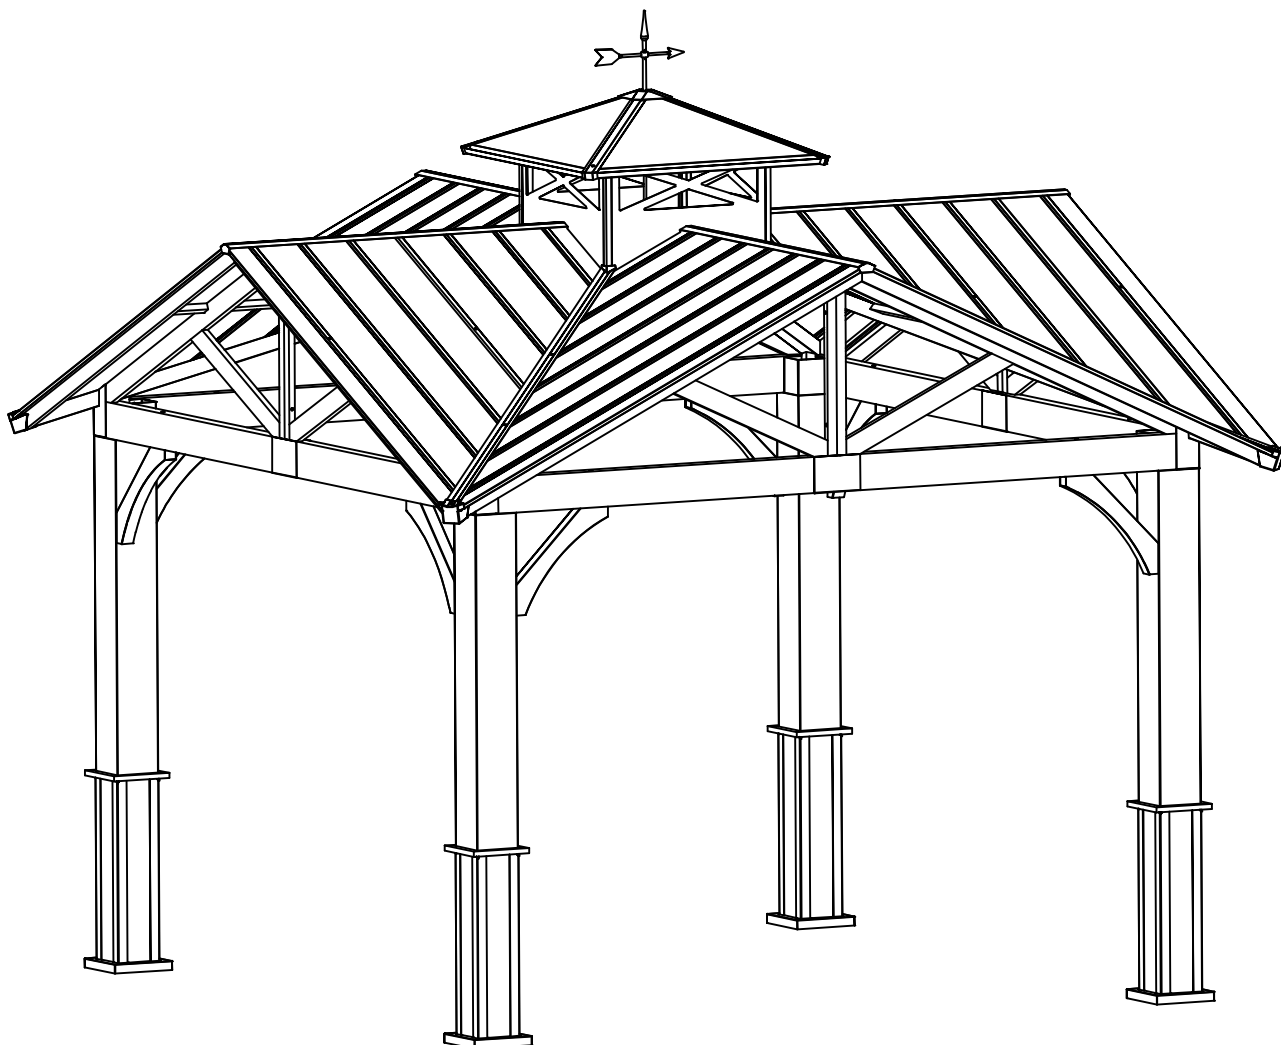


Assembly instructions
12' x 12' Cottage gazebo
B121230-



MEUBLES DE JARDIN
CORRIVEAU
OUTDOOR FURNITURE

Important notice

Please read and follow all safety statements, warnings, assembly instructions, use & care directions before attempting to assemble. Each of the recommendations must be followed to ensure the utmost solidity.

Security Rules

Warning:

Keep flame and heat sources away from the gazebo fabric. The fabric may burn or melt at direct contact or prolonged exposure with a source of heat. The application of any foreign substance to the gazebo fabric may affect the flame retardant properties.

Regulation

It is the responsibility of the consumer being in accordance with city regulation, construction code, zoning or any limitations and obtaining permit prior assembling the gazebo.

Recommendation

- When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to parts.
- Do not use the gazebo during extreme weather conditions.
- Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.
- Some parts may contain sharp edges. Use of protective gloves is always recommended.
- When installing and assembling your gazebo, it is recommended that 2 or more adults are involved.
- Considering at least 5 hours to complete installation, even well anchored, a gazebo unit that is not finished assembly can get or create damages to nearby environment.
- Verify that all nuts and bolts are tightly secured before and during use period.
- Use proper tools and equipment for a safe and compliant installation. Never climb, sit or stand on structure while assembling.

- Although this gazebo is built for all year round, the snow must be removed from the roof.
- Mosquito net and curtains (optional) must be removed from the unit in freezing period.
- Anchoring bolts or other anchoring devices are not supplied.
- Keep away from any electric installation or transportation device.
- Always recommended to keep assembly manual for further reference.

Care

Avoid using a pressure washer. The use of a mild soap with warm water is the best solution for the frame only. A clear water rinse is necessary then. Never use soap on fabric, this will reduce their durability, consequently their lifespan and general look. The use of a soft brush and warm water are an excellent solution for cleaning the fabric.

Warranty

Covered

We warrant the frame and fabric to be free of manufacturing defects to the original purchaser for one year.

Not covered

This warranty does not cover commercial use, lack or improper care, neglected storage, vandalism, chemical, acts of nature, fire, oxidation, stains, freeze damage, improper packaging for return and unreasonable or abusive use. Normal discoloration and build-up snow damages are not covered either.

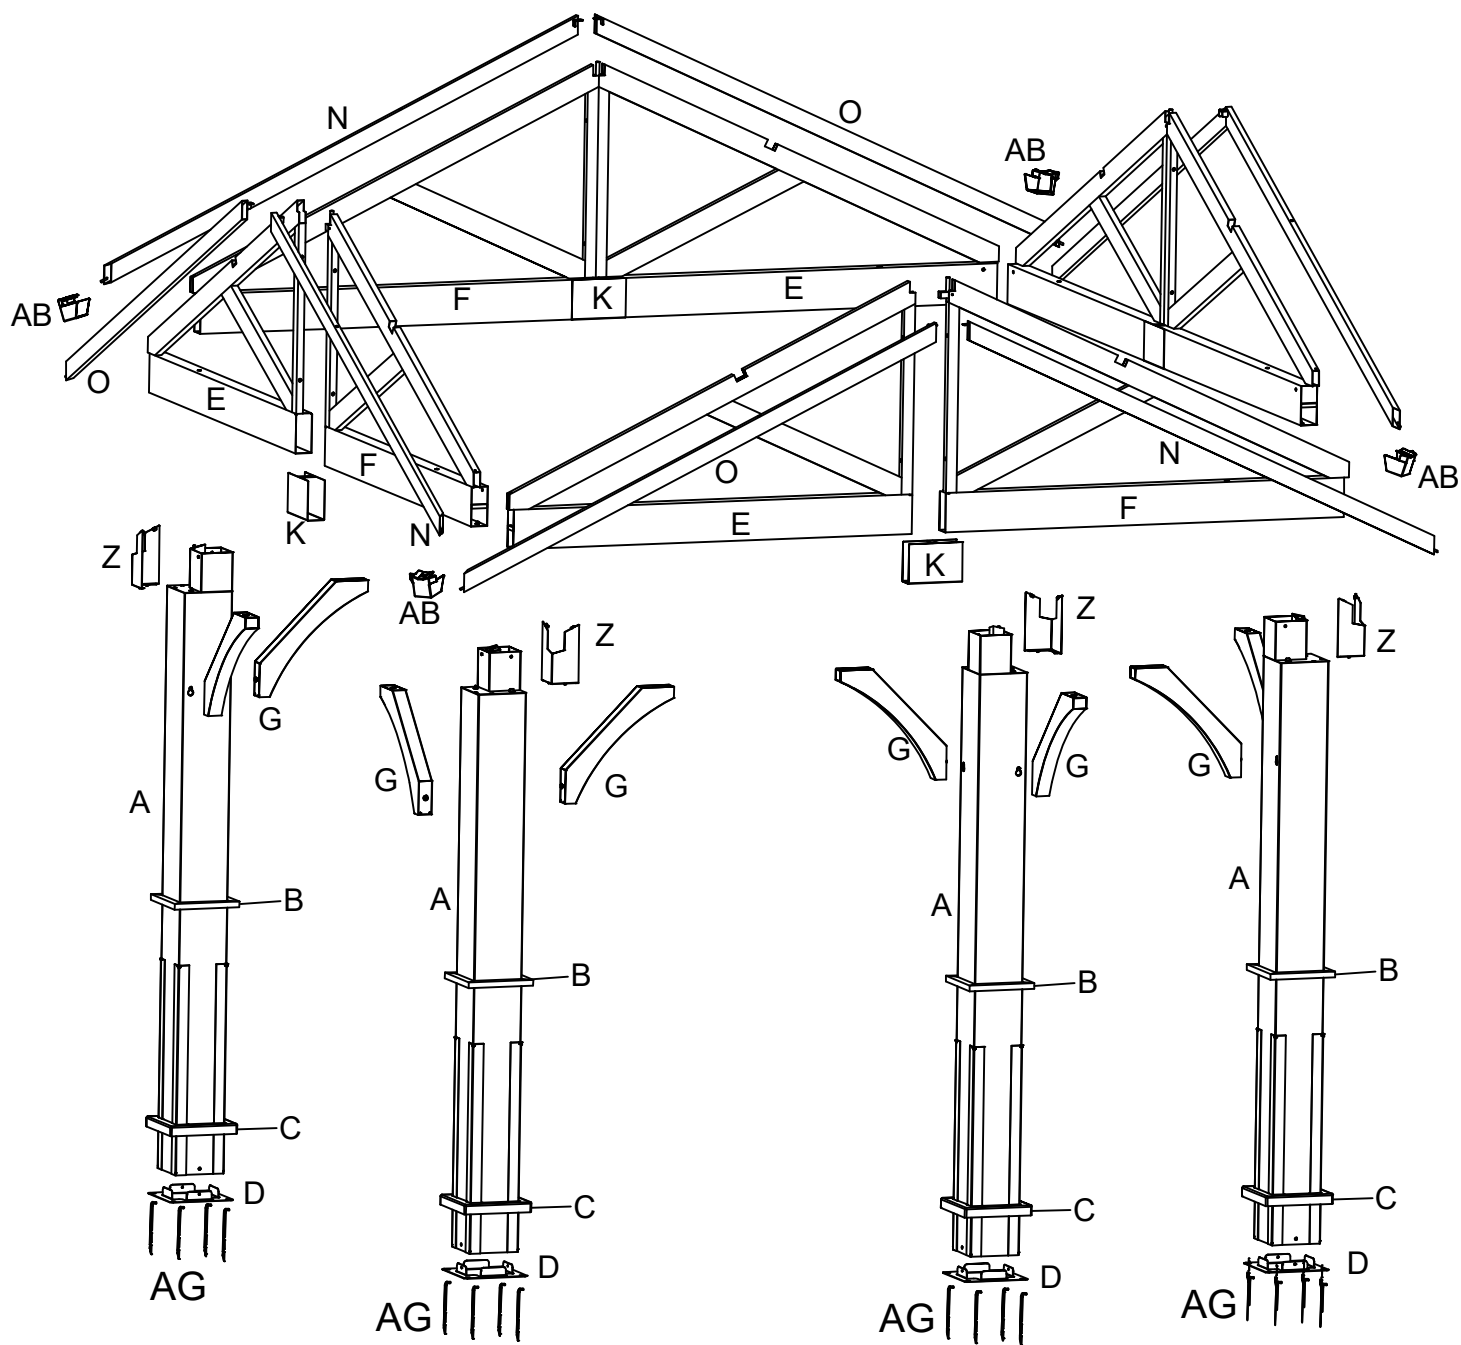
Customer service:

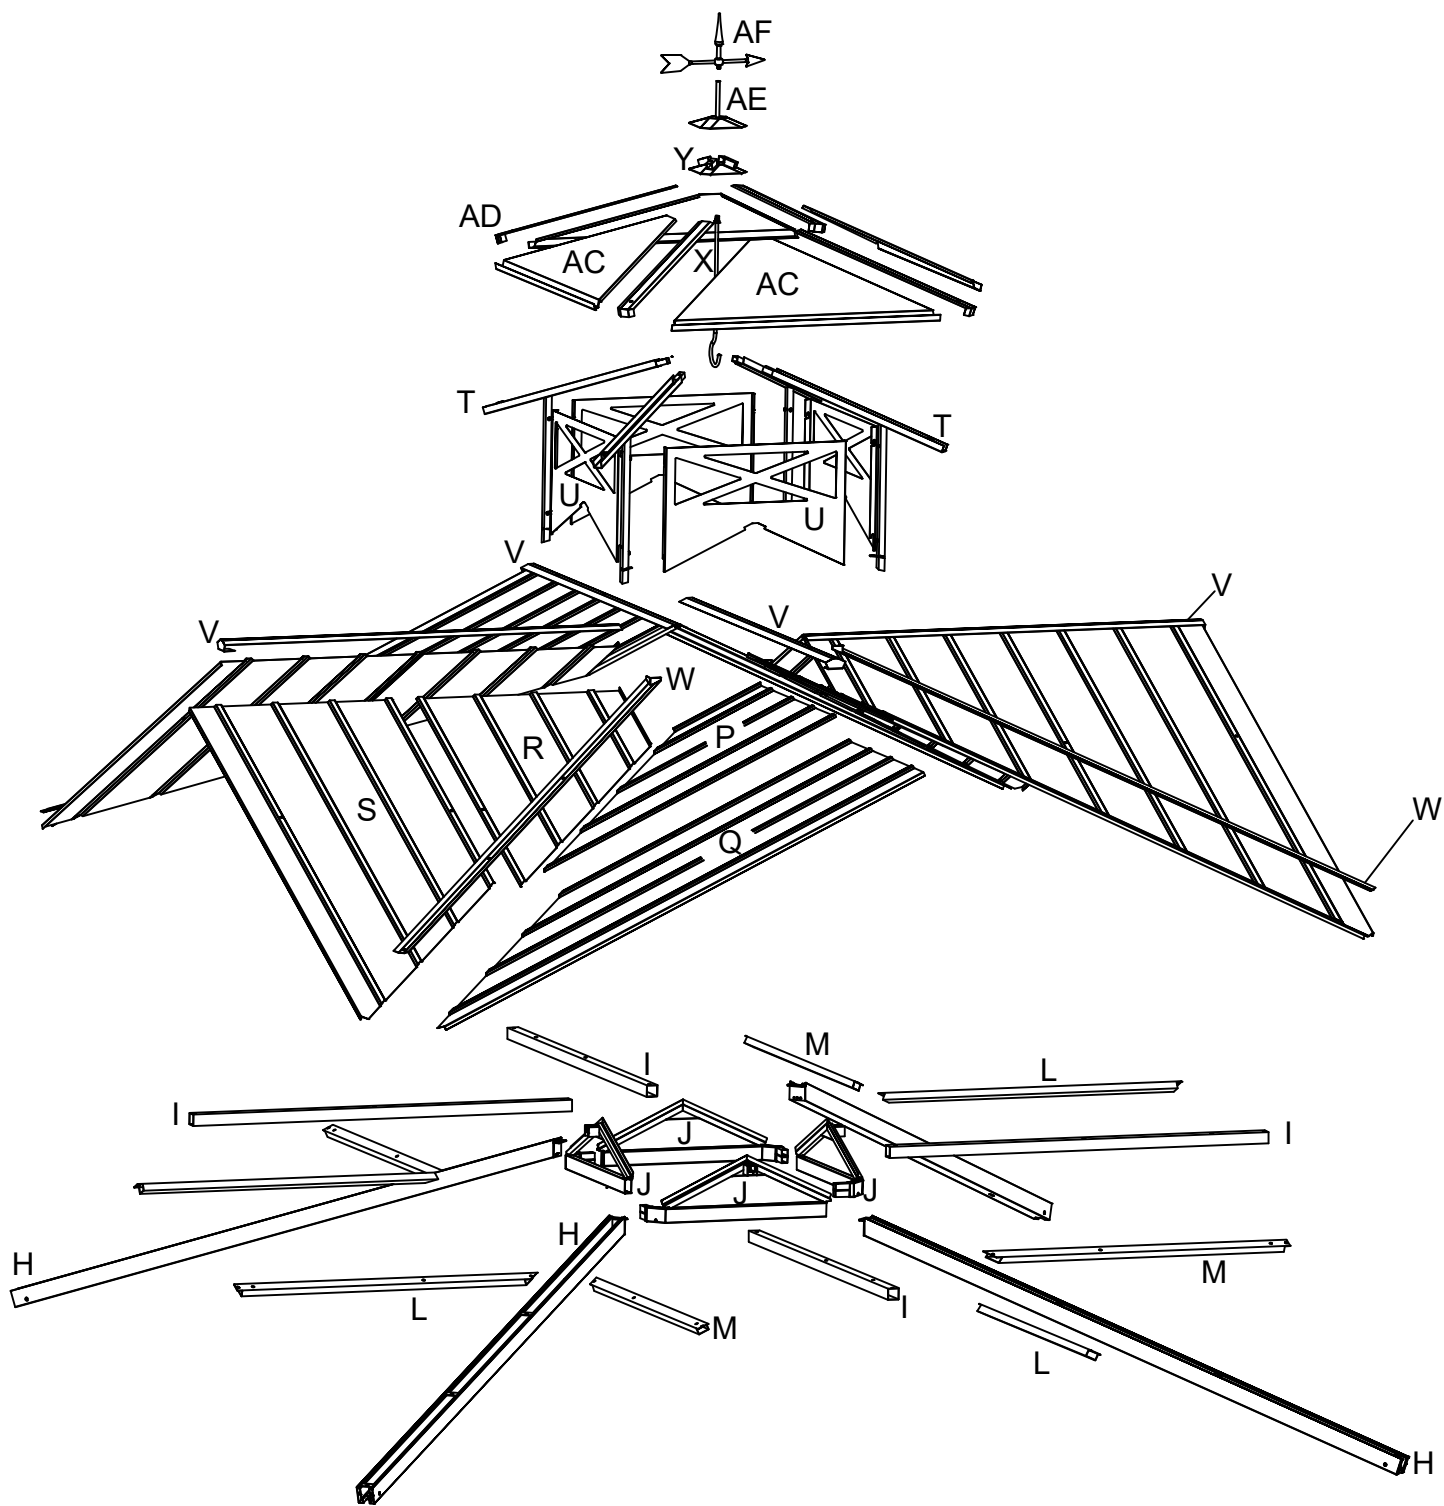
Consumer

For each part request, please contact your retailer with a description of the problem, pictures and consumer invoice copy, to ensure the proper information to be proceed.




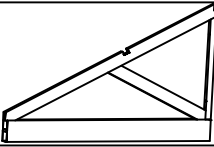
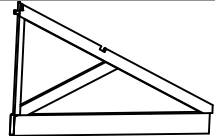



Seller



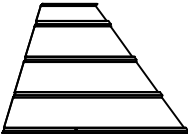
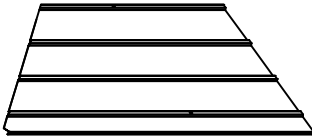
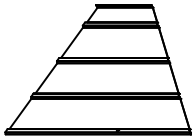
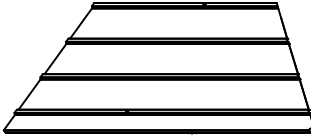
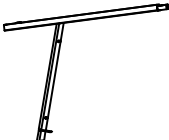
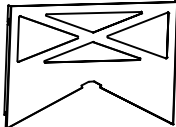




In addition to all the information already provided by the consumer, any parts requested must mention the person responsible for the client's file, the retailer name, address, branch if applicable, e-mail address, fax and phone number.

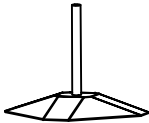
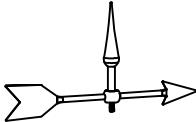









PARTS LIST:


NO.	Description	Q'TY	Drawing
A	Post	4	
B	Decor molding	4	
C	Base cover	4	
D	Base plate	4	
E	Left crossbar	4	
F	Right crossbar	4	
G	Corner bracket	8	
H	Corner roof tubing	4	
I	Center roof tubing	4	
J	Roof bracket	4	
K	Crossbar connector	4	
L	Roof support	4	
M	Roof support	4	

NO.	Description	Q'TY	Drawing
N	Right eave	4	
O	Left eave	4	
P	Roof panel	4	
Q	Roof panel	4	
R	Roof panel	4	
S	Roof panel	4	
T	Air vent corner tube	4	
U	Air vent side panel	4	
V	Roof cover	4	
W	Corner roof cover	4	
X	Hook	1	
Y	Roof connector	1	
Z	Corner cover	4	


NO.	Description	Q'TY	Drawing
AB	Roof corner molding	4	
AC	Air vent roof panel	4	
AD	Air vent roof cover	4	
AE	Roof cover	1	
AF	Weathervane	1	
AG	Stake	16	

Hardware Kit:

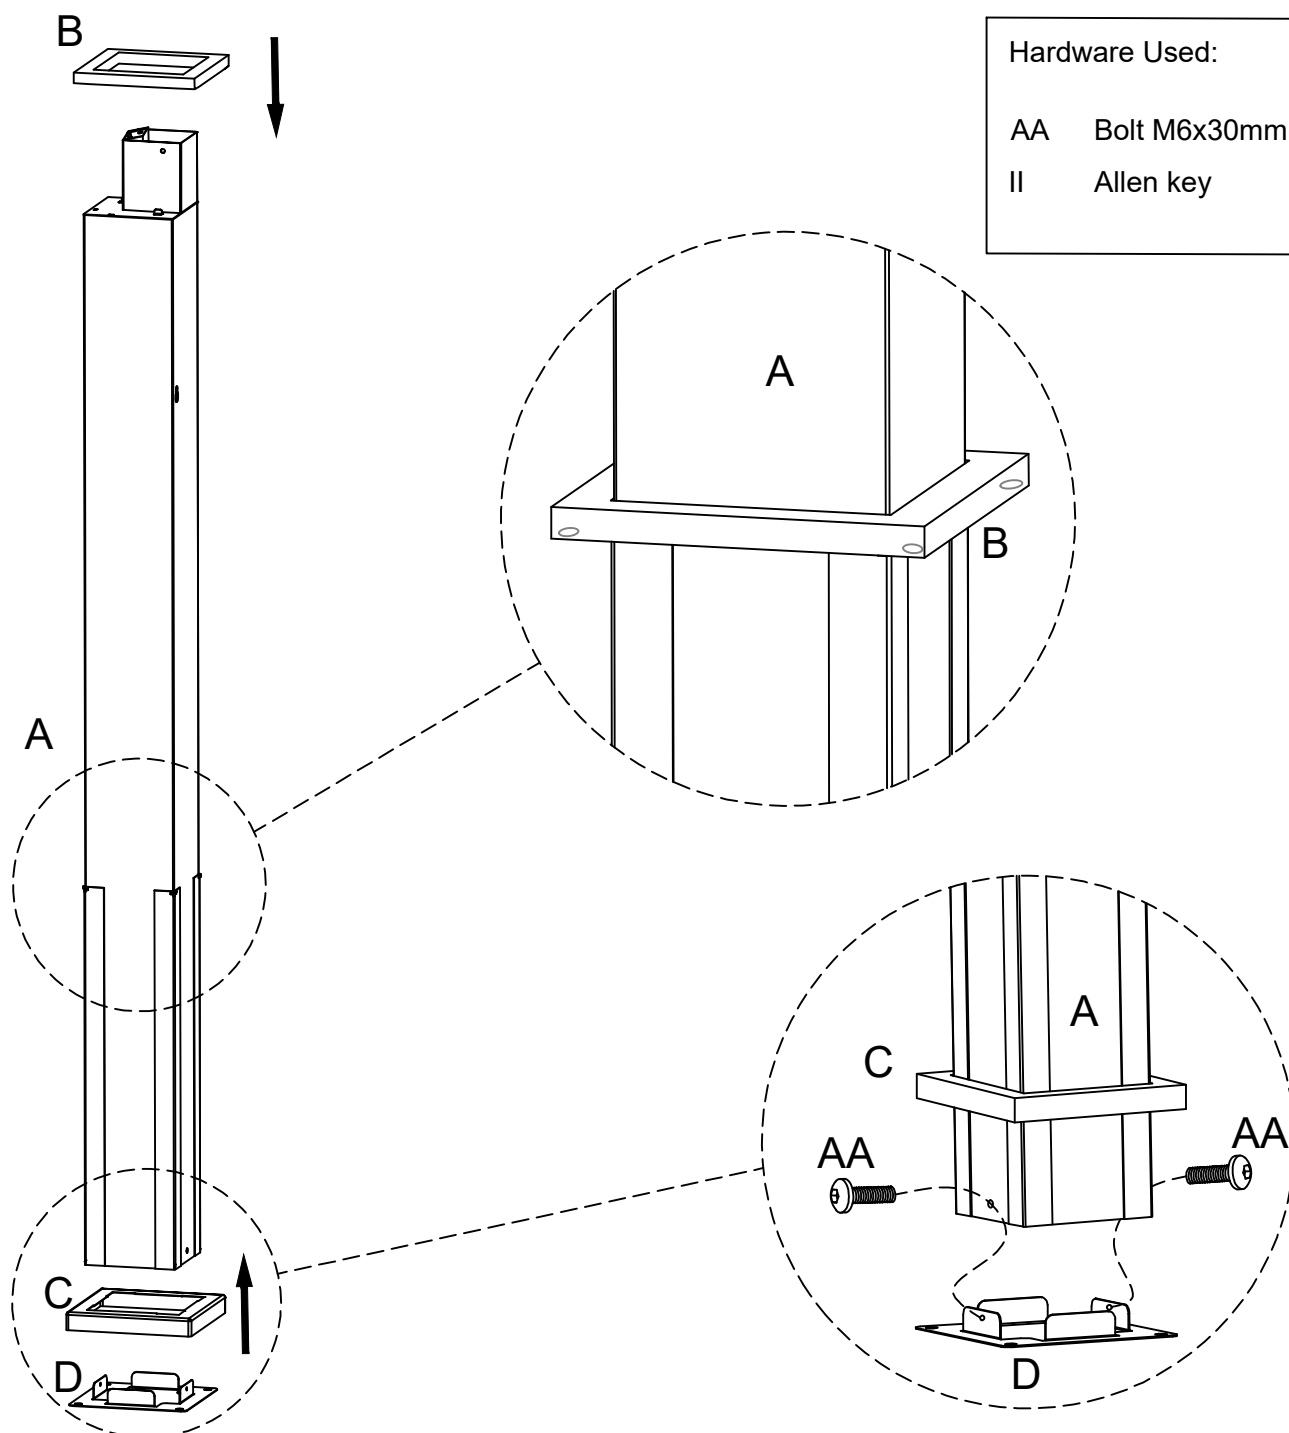
NO.	Description	Q'TY	Drawing
AA	Bolt M6*30MM	80 + 8 Extra	 M6 X 30mm
BB	Bolt M6*75MM	4 + 2 Extra	 M6 X 75mm
CC	Bolt M8*95MM	8 + 2 Extra	 M8 X 95mm
DD	Bolt M8*155MM	8 + 2 Extra	 M8 X 155mm
EE	Nut M8	8 + 2 Extra	 M8
FF	Metal washer	24 + 4 Extra	 M8
GG	Plastic washer	44 + 6 Extra	 M6
HH	Plastic cap	8 + 2 Extra	 M8
II	Allen key	2	
JJ	Spanner	1	 M8
KK	Bolt M6*40MM	4 + 2 Extra	 M6 X 40mm

A  X 4

B  X 4

C  X 4

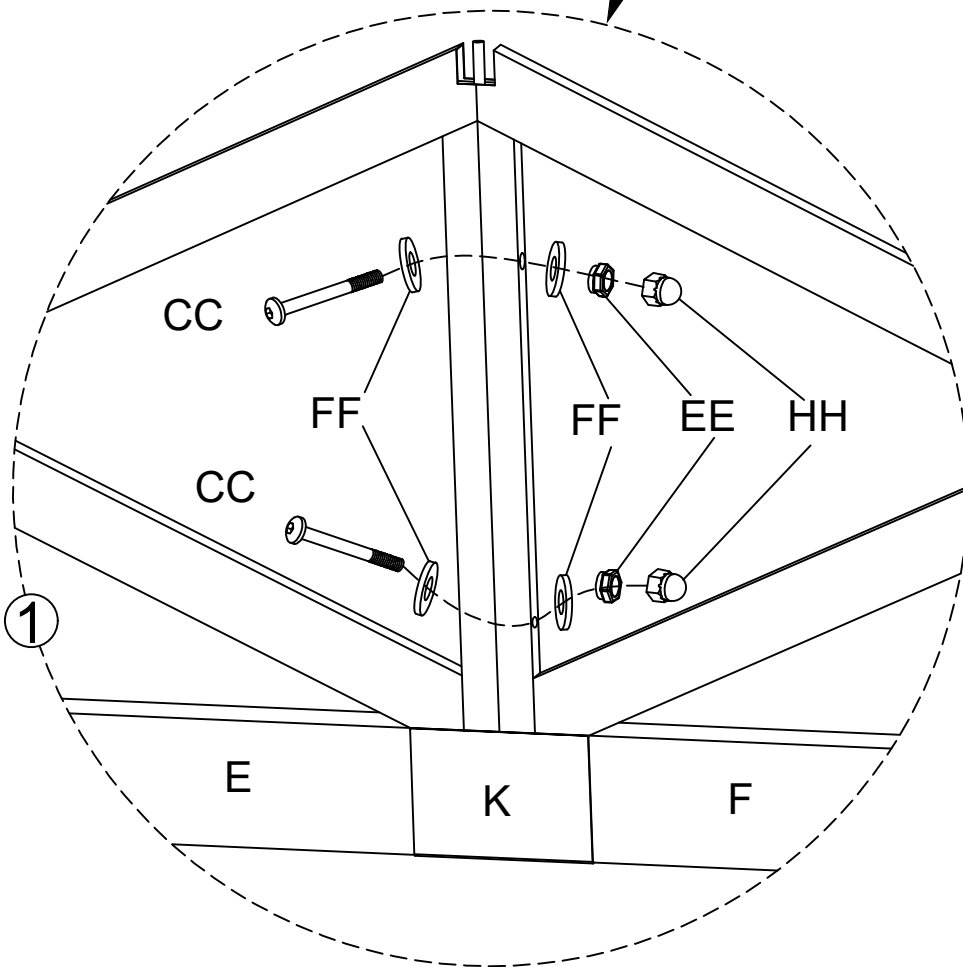
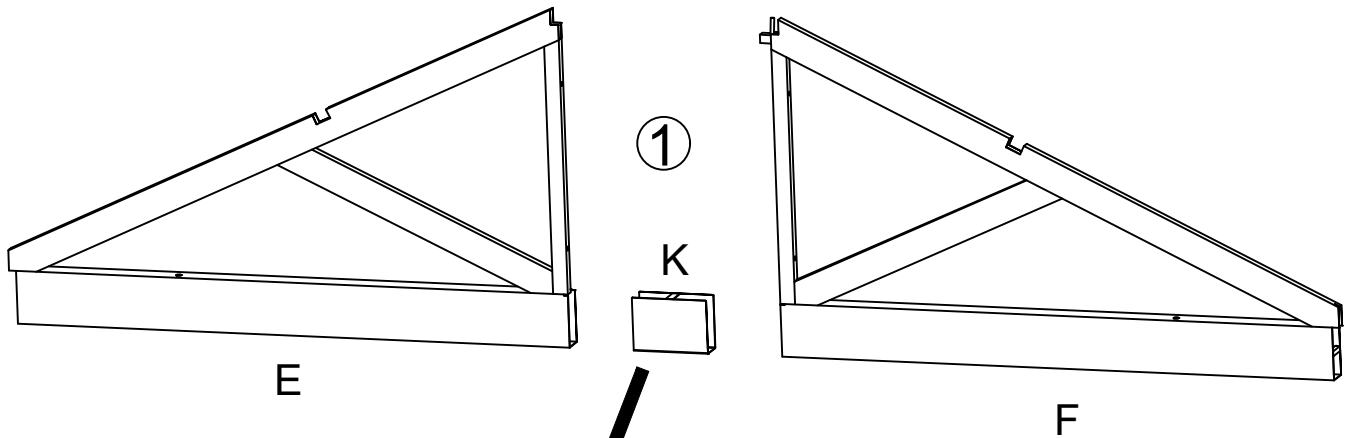
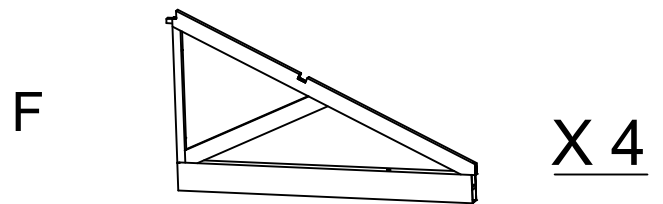
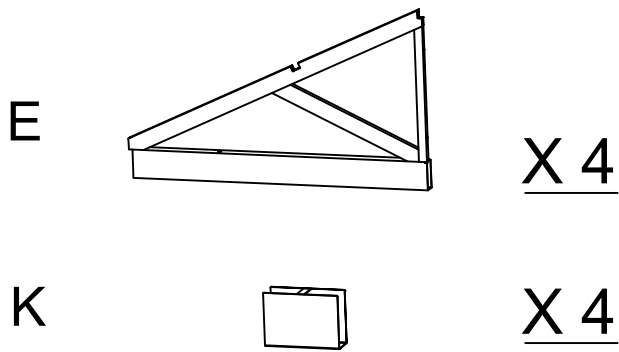
D  X 4



Step 1

Insert the base cover (C) onto the post (A). Fix the base plate (D) underneath the post (A) by using two bolts (AA) but do not over tight the bolts. Then put the decor molding (B) onto the post (A) by sliding it from the top.

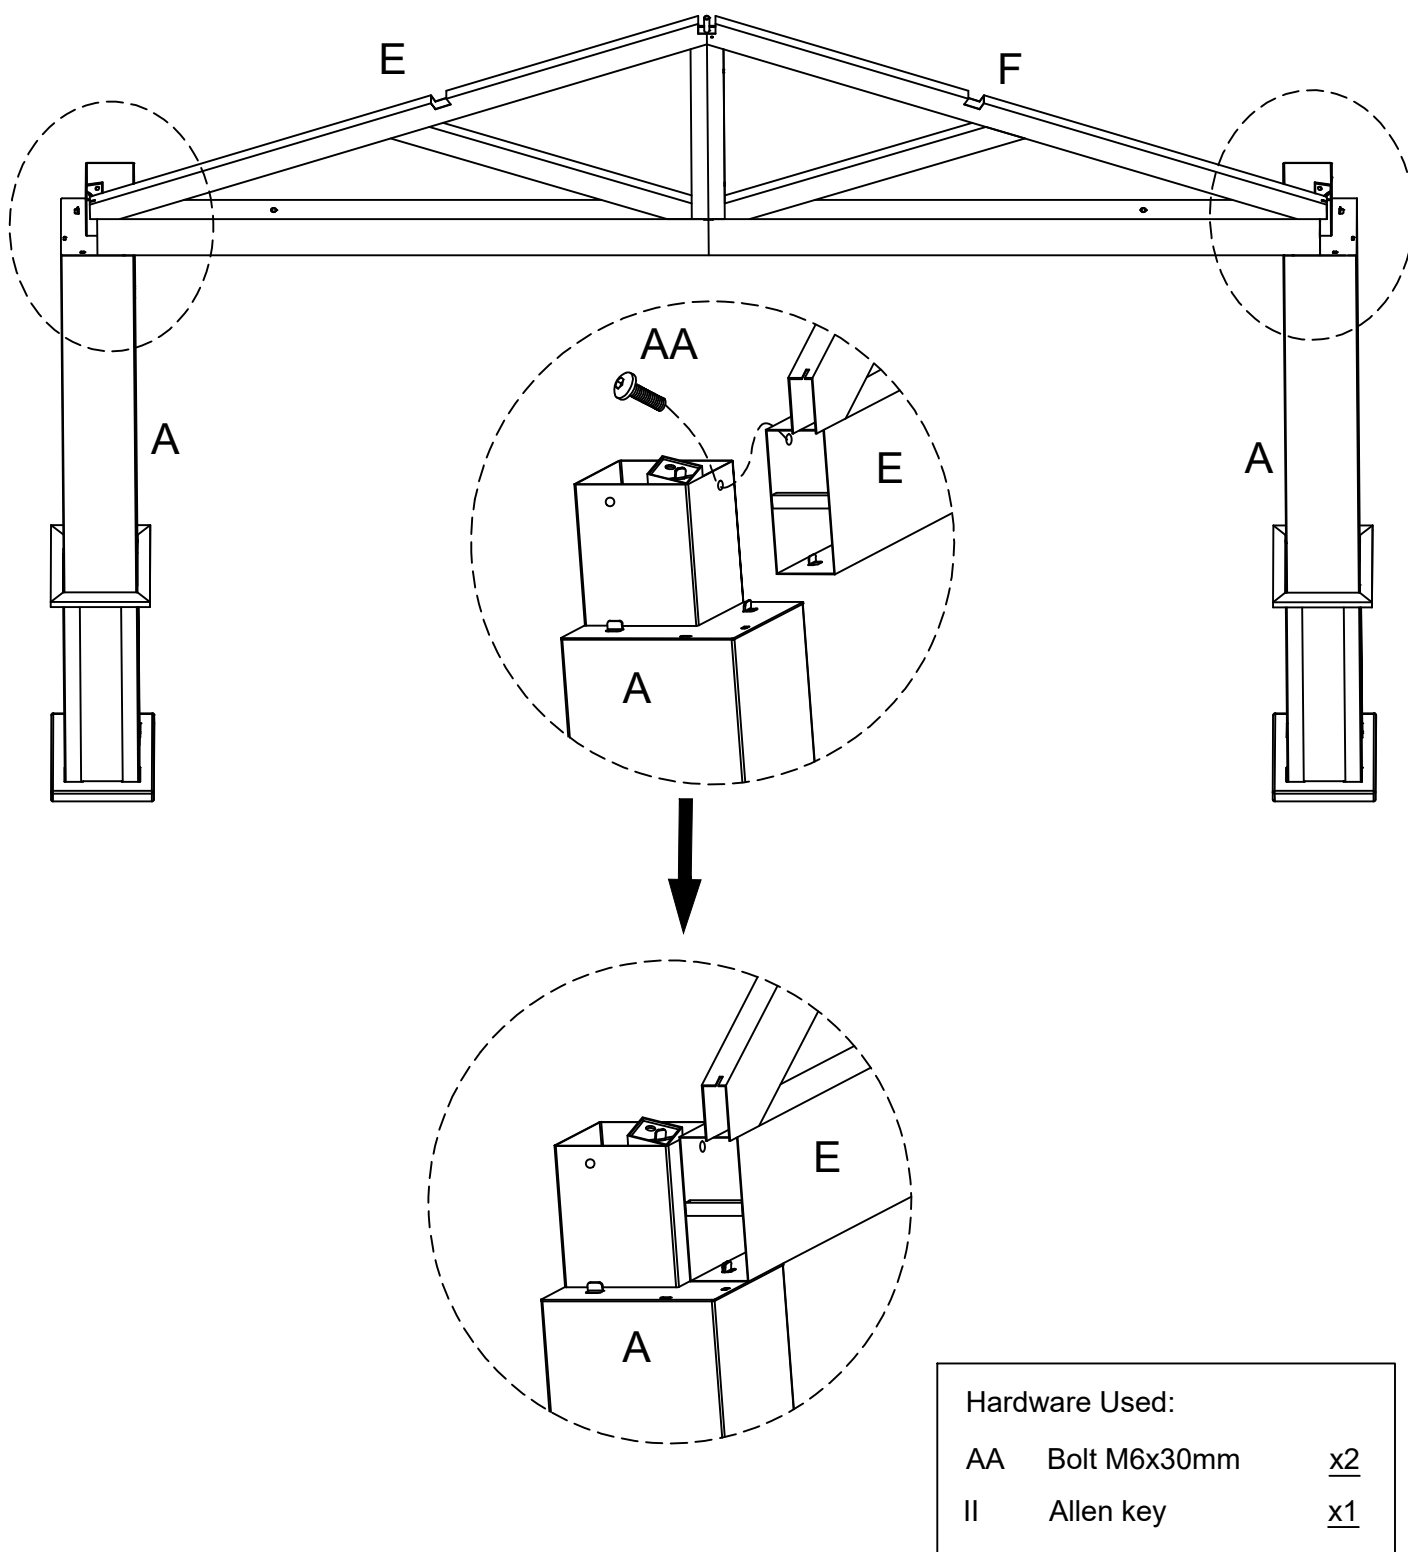
Repeat this step for the remaining posts (A).



Hardware Used:		
CC	Bolt M8x95mm	<u>x8</u>
EE	Nut M8	<u>x8</u>
FF	Metal washer	<u>x16</u>
HH	Plastic cap	<u>x8</u>
II	Allen Key	<u>x1</u>
JJ	Spanner	<u>x1</u>

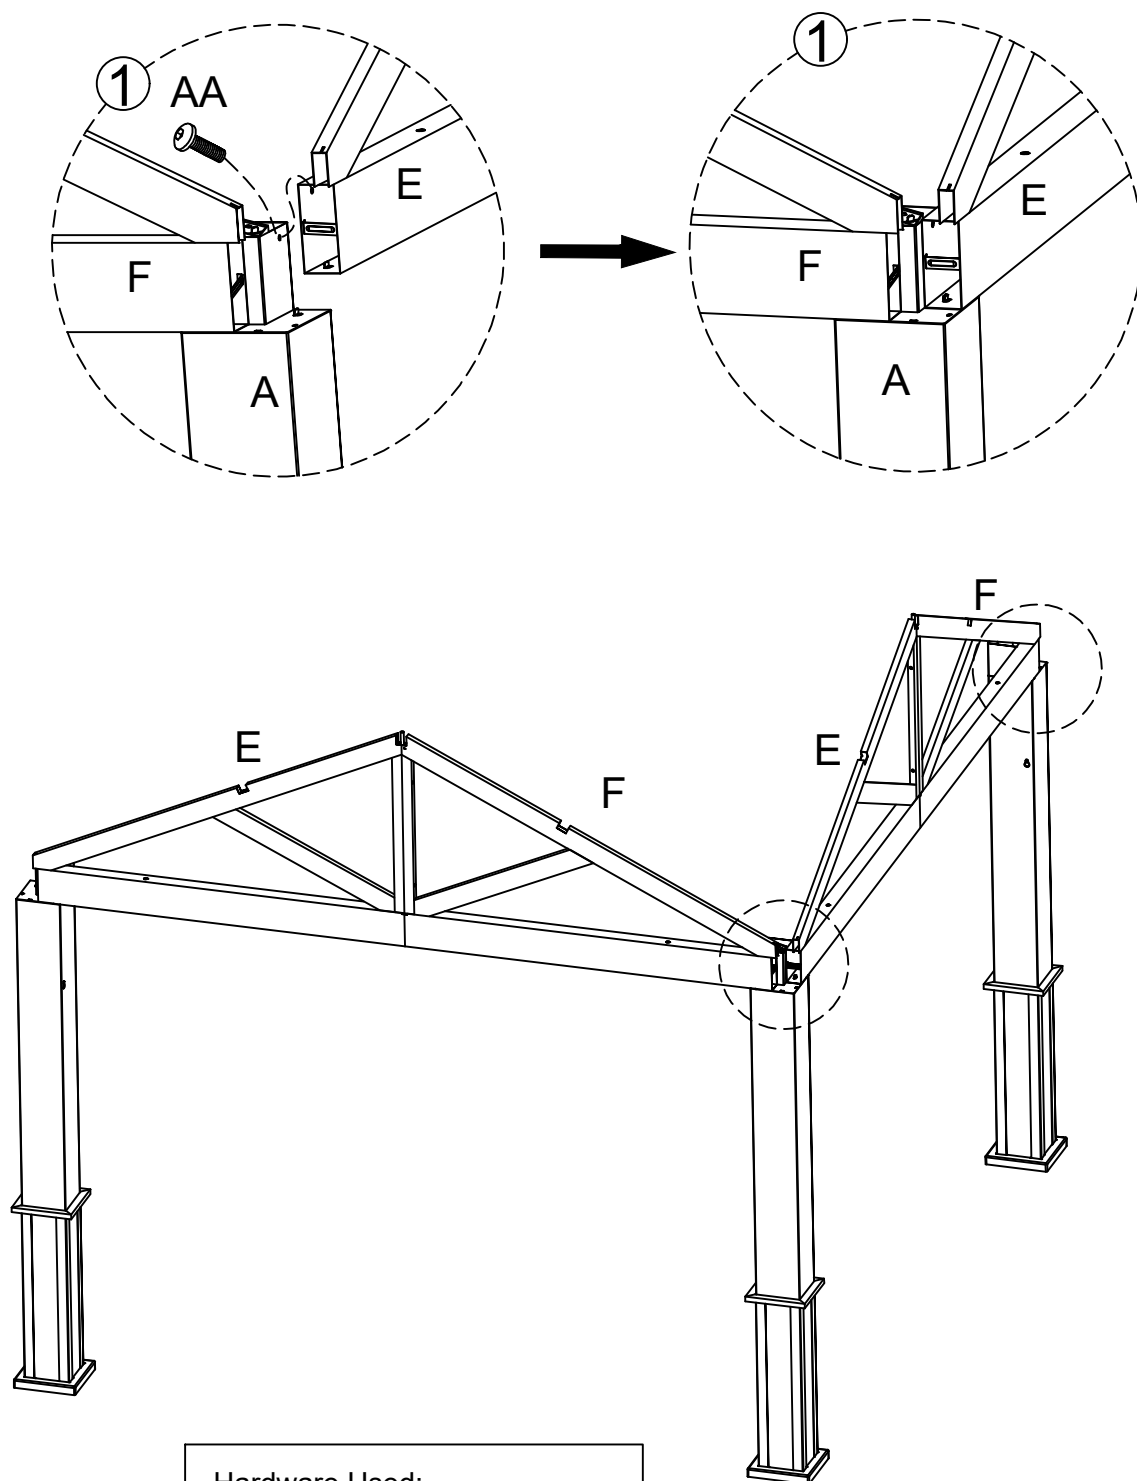
Step 2

Insert the left crossbar (E) and the right crossbar (F) into the crossbar connector (K). Fix the assembly by using the bolts (CC), metal washers (FF) (2 by bolts) and the nuts (EE). Bolts can be tightened completely. Repeat those steps for all the crossbars (E & F) left. Then install all the plastic cap (HH) on each nuts (EE).



Step 3

Bolts can be tightened completely. Fix the crossbar set (E & F) onto two posts (A) by using the bolts (AA).



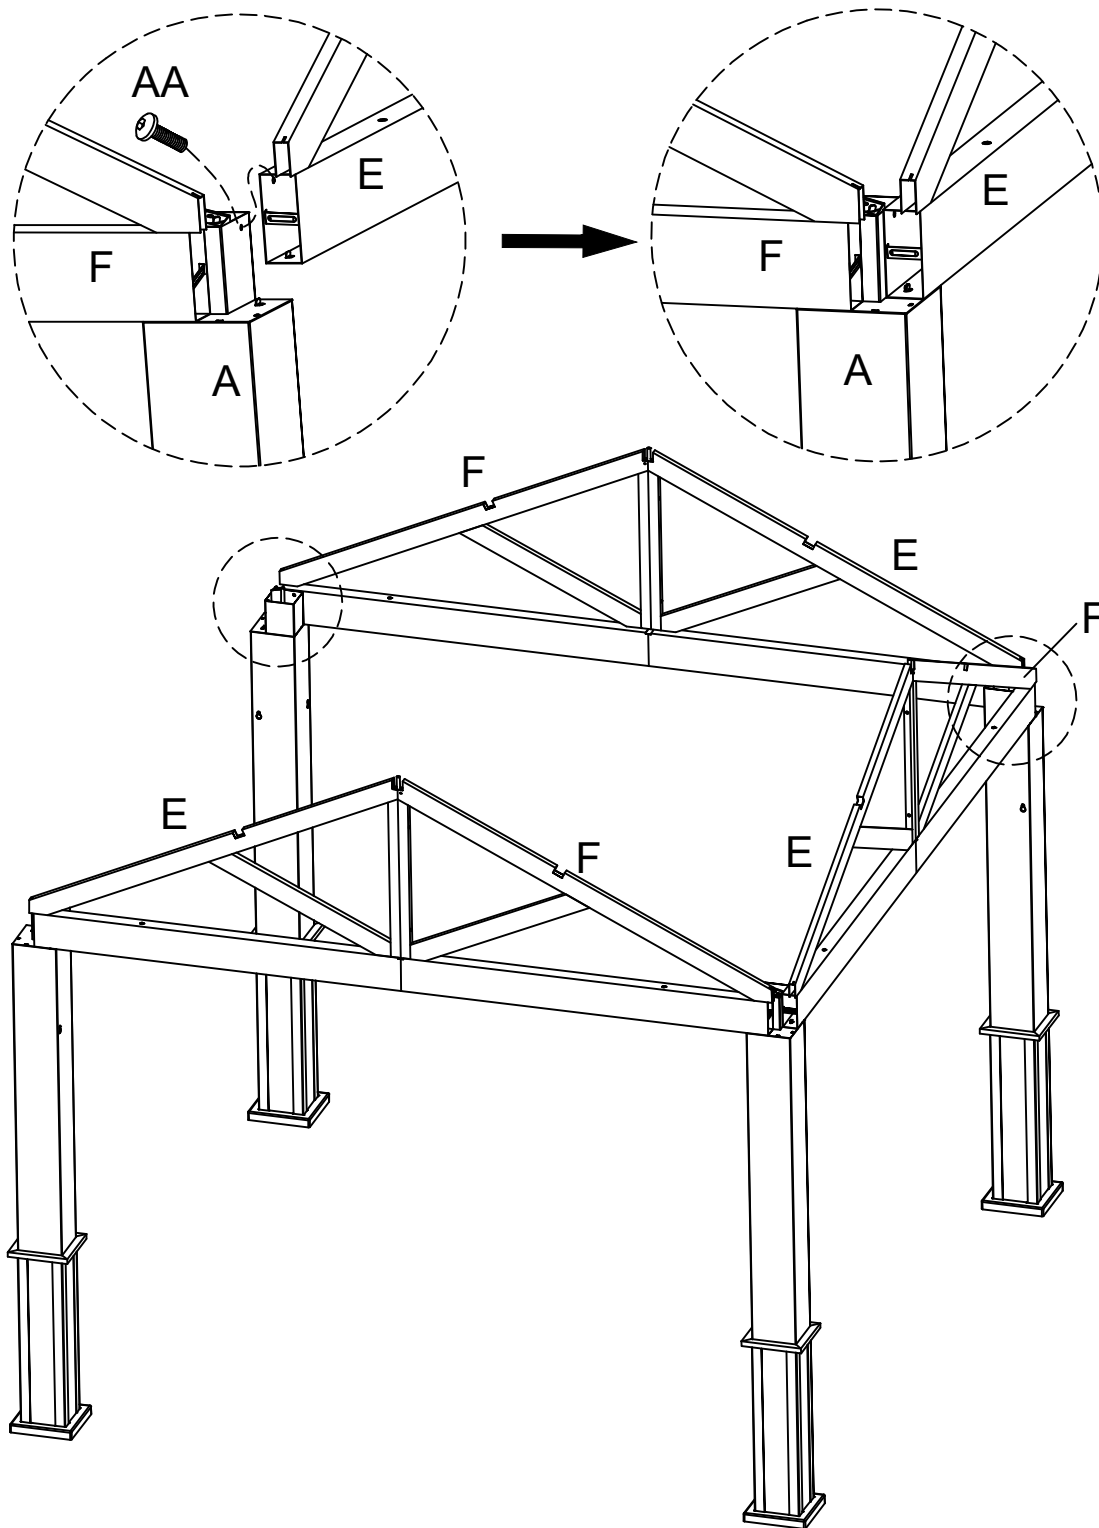
Hardware Used:

AA Bolt M6x30mm x2

II Allen key x1

Step 4

Bolts can be tightened completely. Fix another crossbar set (E & F) by using another post (A) and the post (A) use in step 3 by using the bolts (AA).

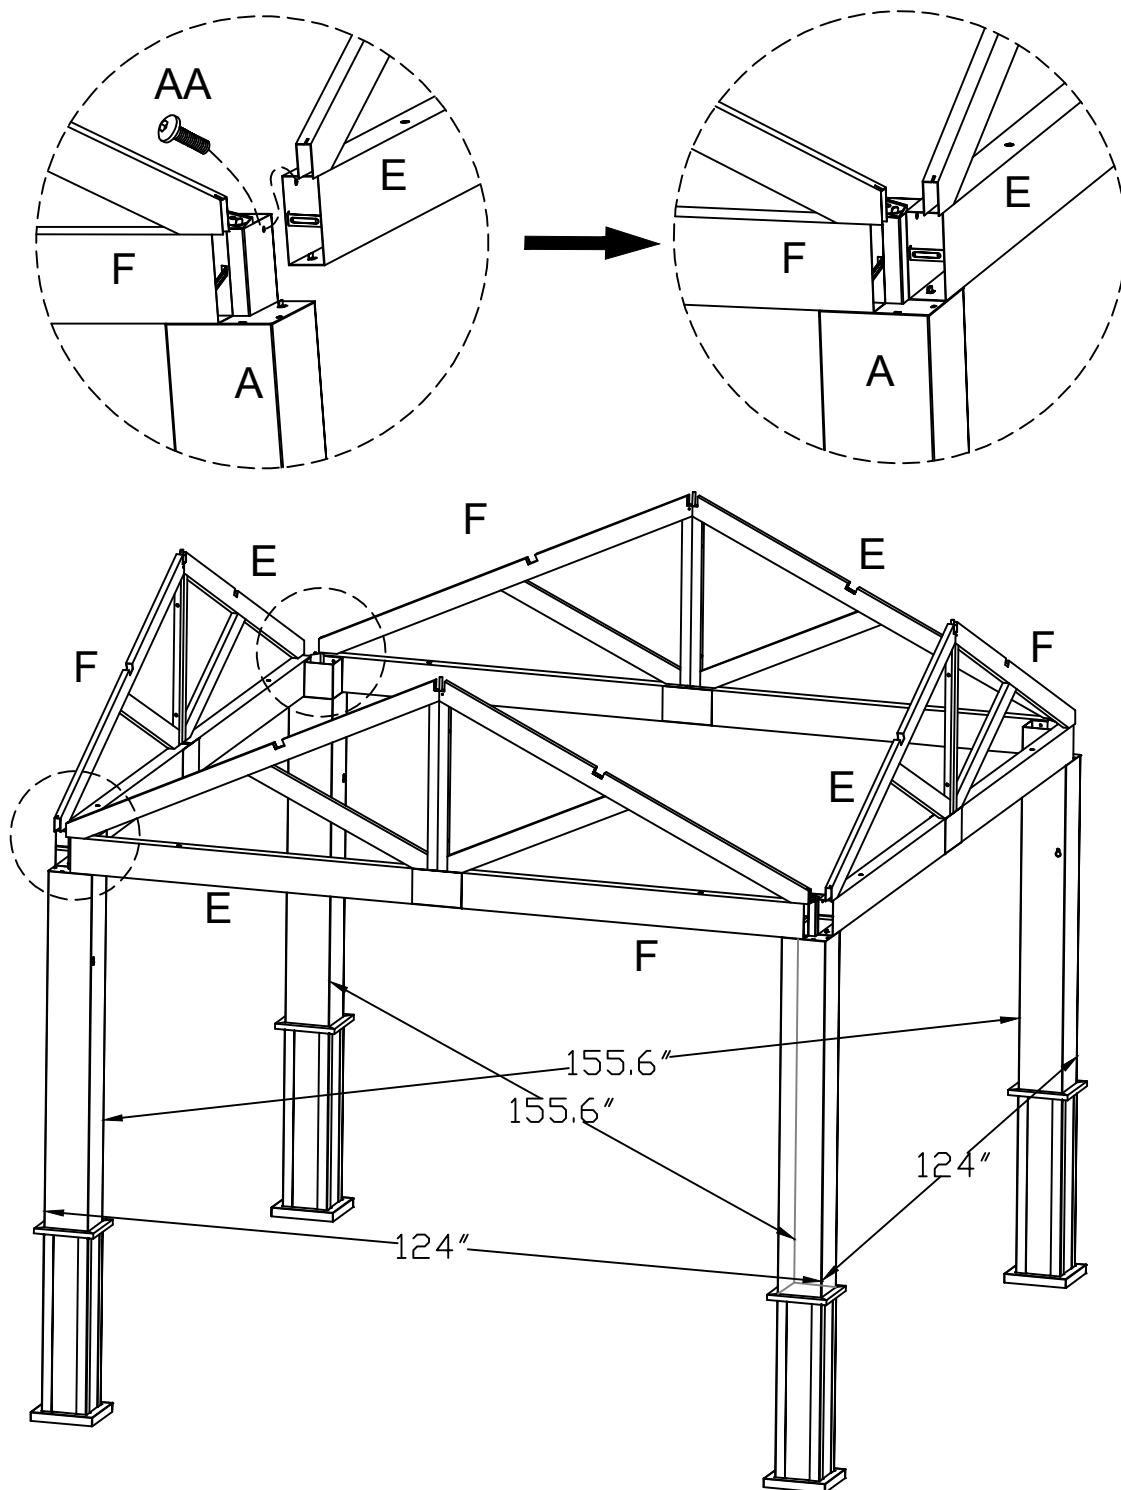


Hardware Used:

AA	Bolt M6x30mm	<u>x2</u>
II	Allen key	<u>x1</u>

Step 5

Bolts can be tightened completely. Fix another crossbar set (E & F) by using another post (A) and the post (A) use in step 3 by using the bolts (AA).



Hardware Used:

AA	Bolt M6x30mm	<u>x2</u>
II	Allen key	<u>x1</u>

Step 6

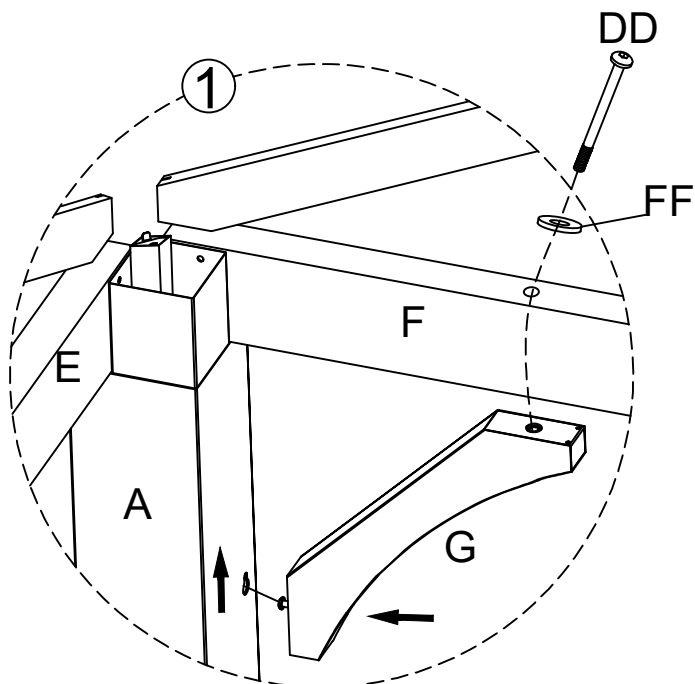
Bolts can be tightened completely. Fix the remaining crossbar set (E & F) onto the posts (A) use in step 4 & 5 by using the bolts (AA).

ATTENTION: Please measure the distance between all 4 posts (A) and make sure the dimensions are the same as shown in the illustration.

G

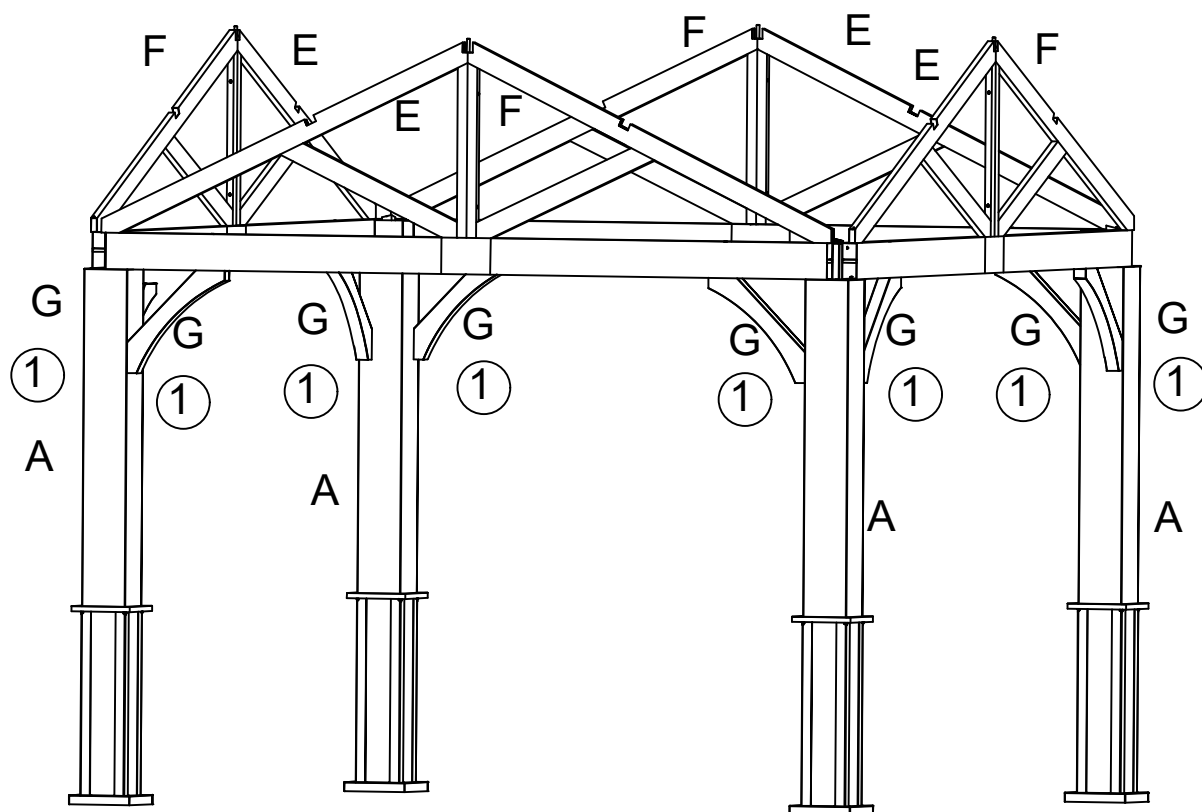


X 8



Hardware Used:

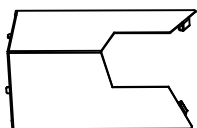
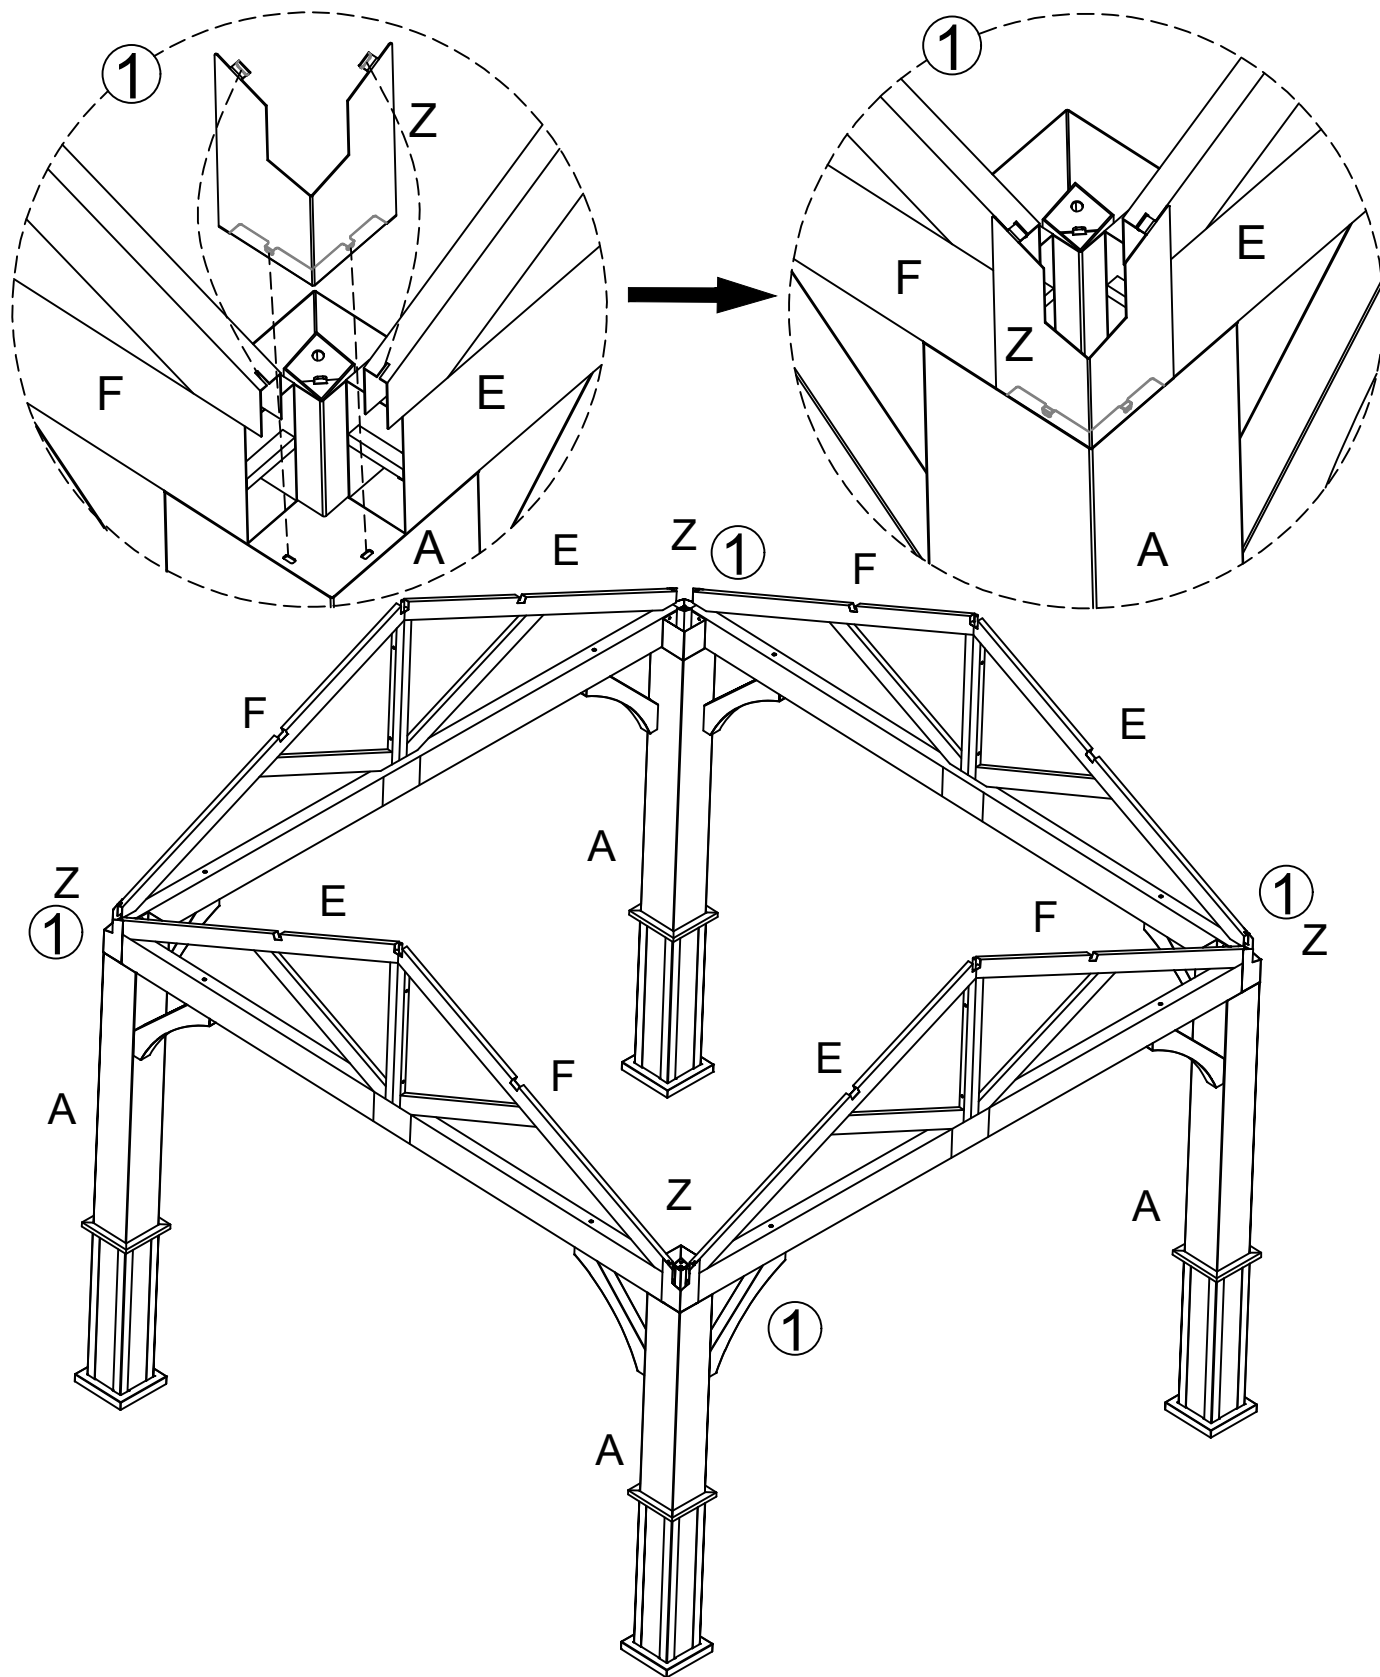
DD	Bolt M8x155mm	<u>x8</u>
FF	Metal washer	<u>x8</u>
II	Allen key	<u>x1</u>



Step 7

Bolts can be tightened completely. Install the support corner brackets (G) onto each post (A) (2 by post) and fix the corner brackets (G) onto the crossbar set (E & F) by using the bolts (DD) and metal washers (FF).

Z

X 4

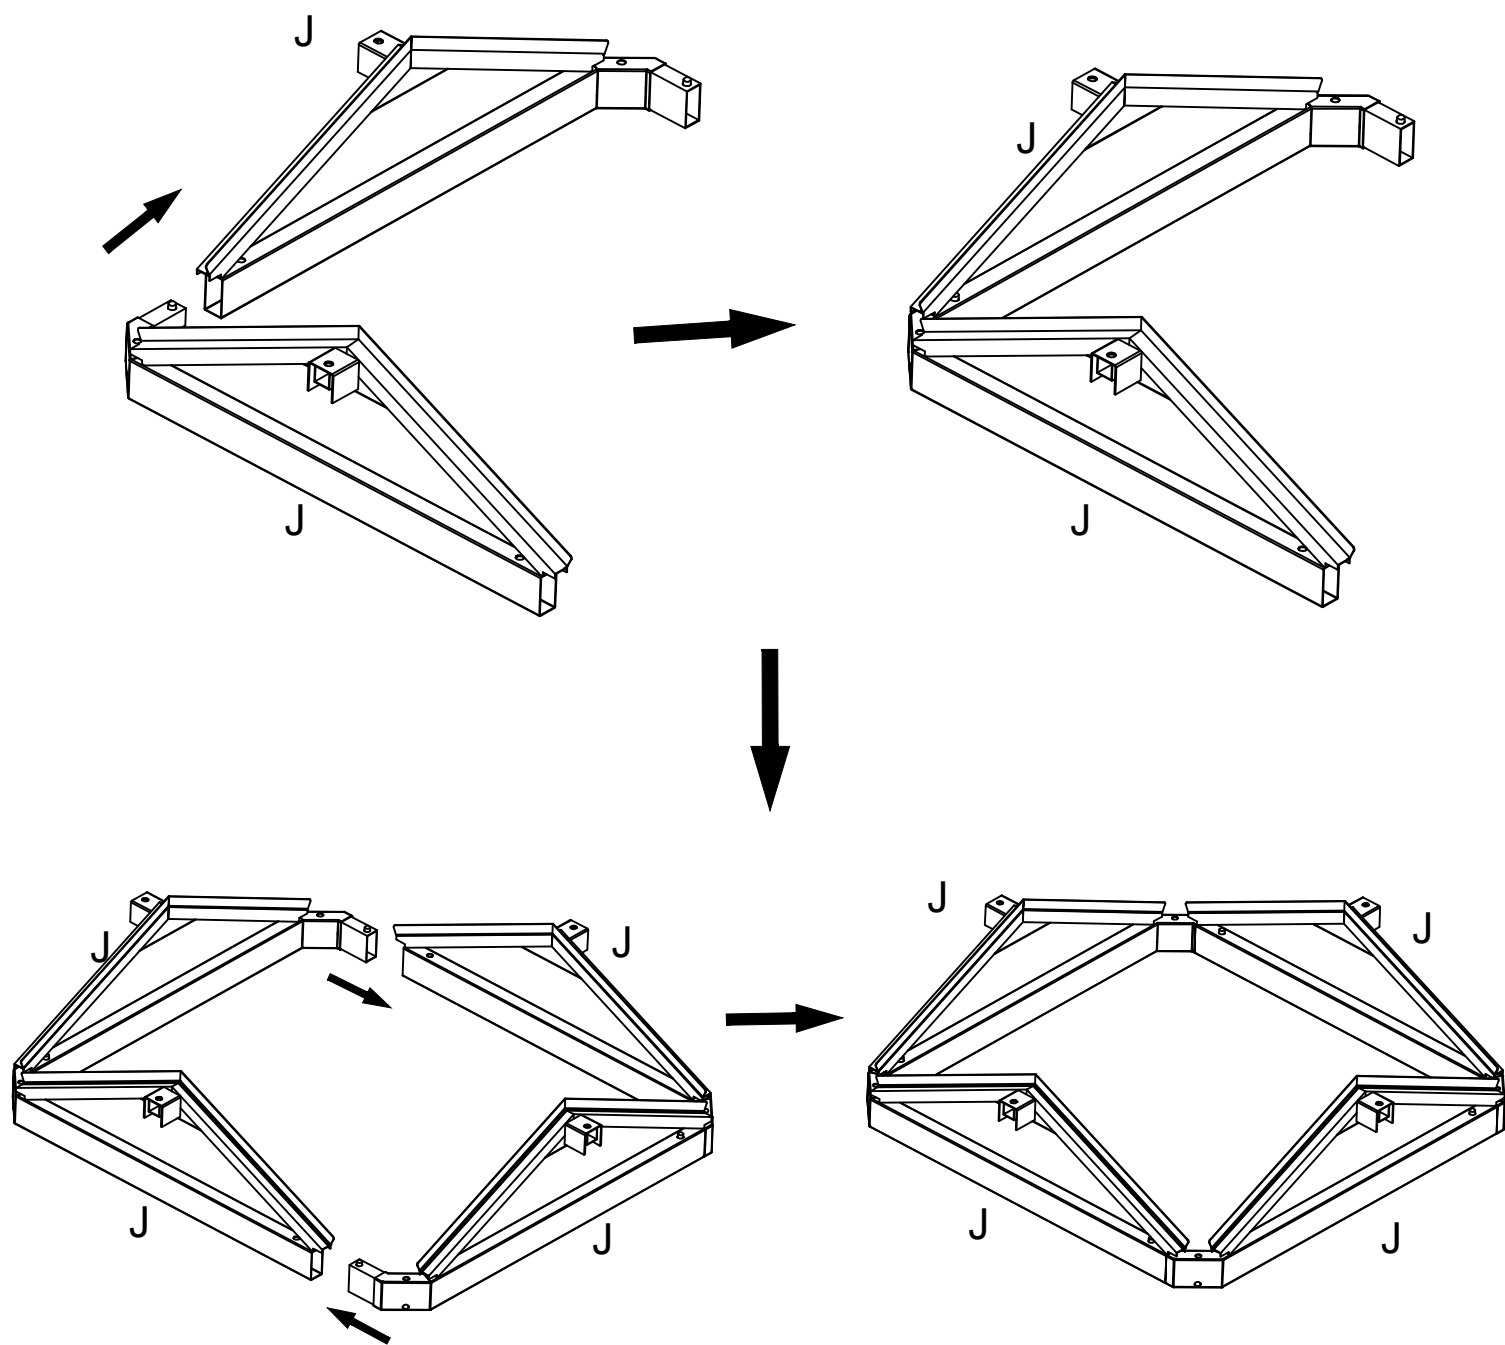
Step 8

Insert the corner cover (Z) into the post (A) as shown in the illustration, then secure with the crossbar set (E & F). Repeat this step for all corner covers (Z).

J




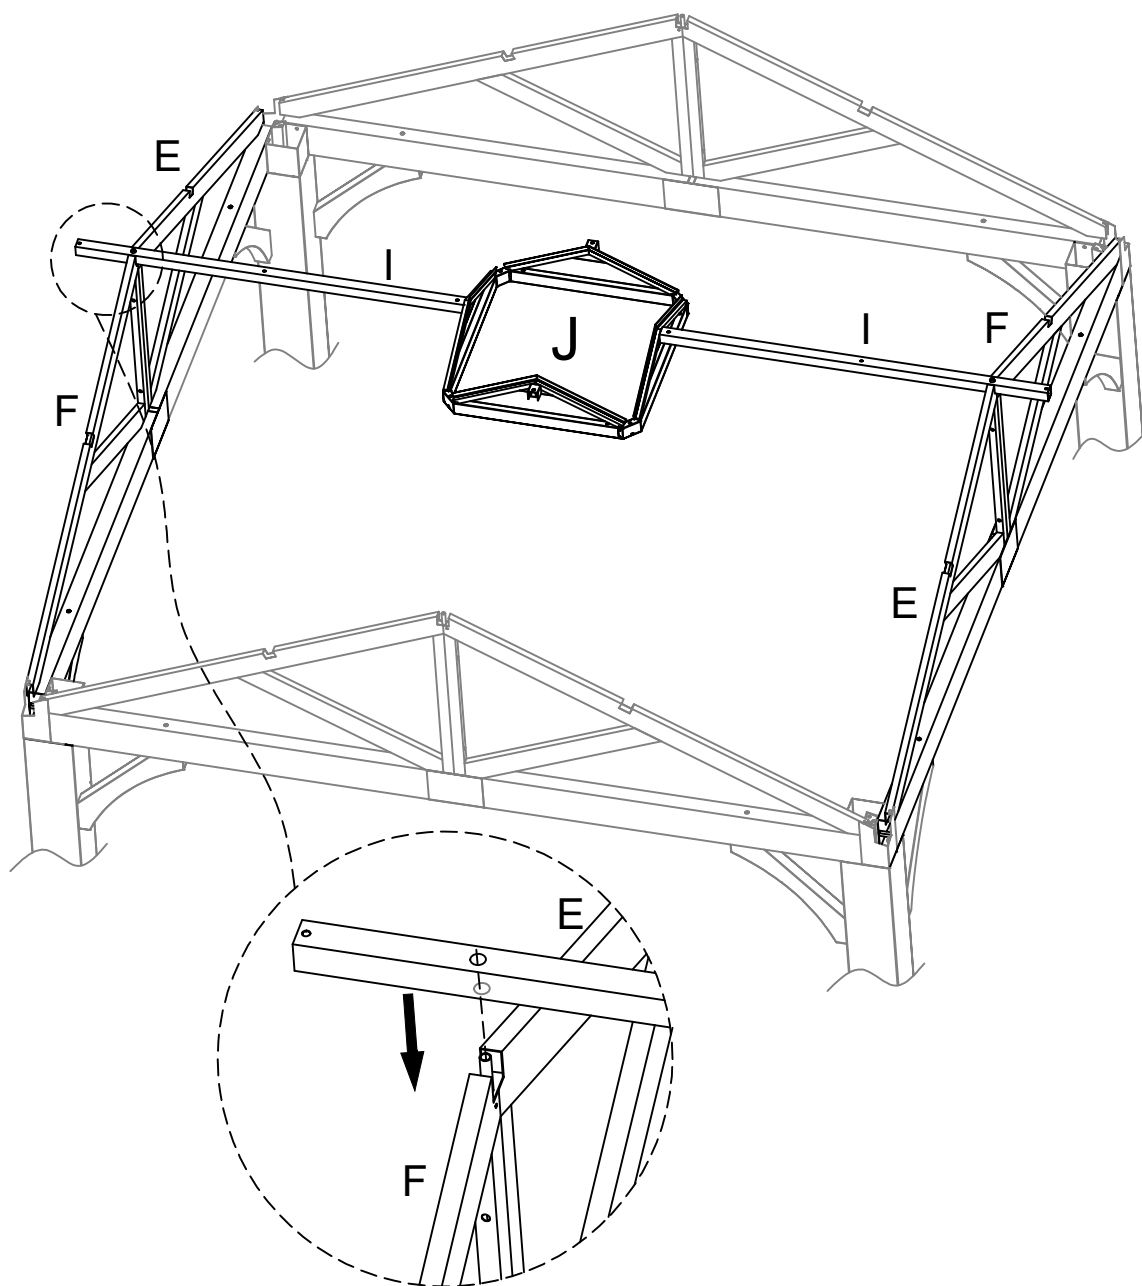
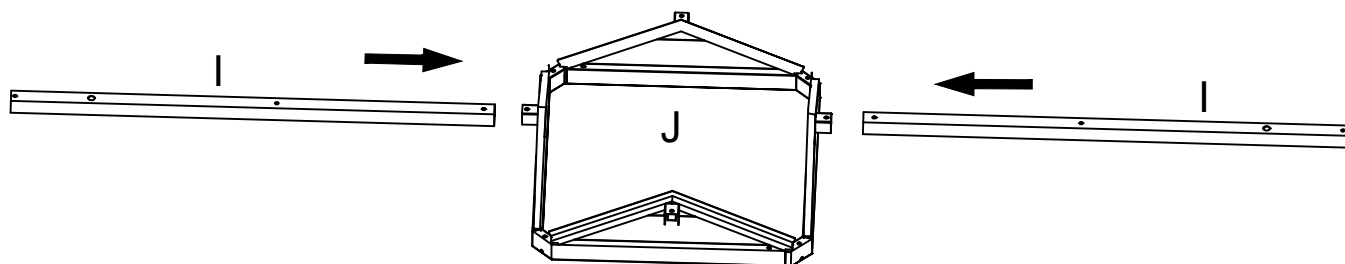
X 4



Step 9

Secure the roof brackets (J) together as shown in the illustration.


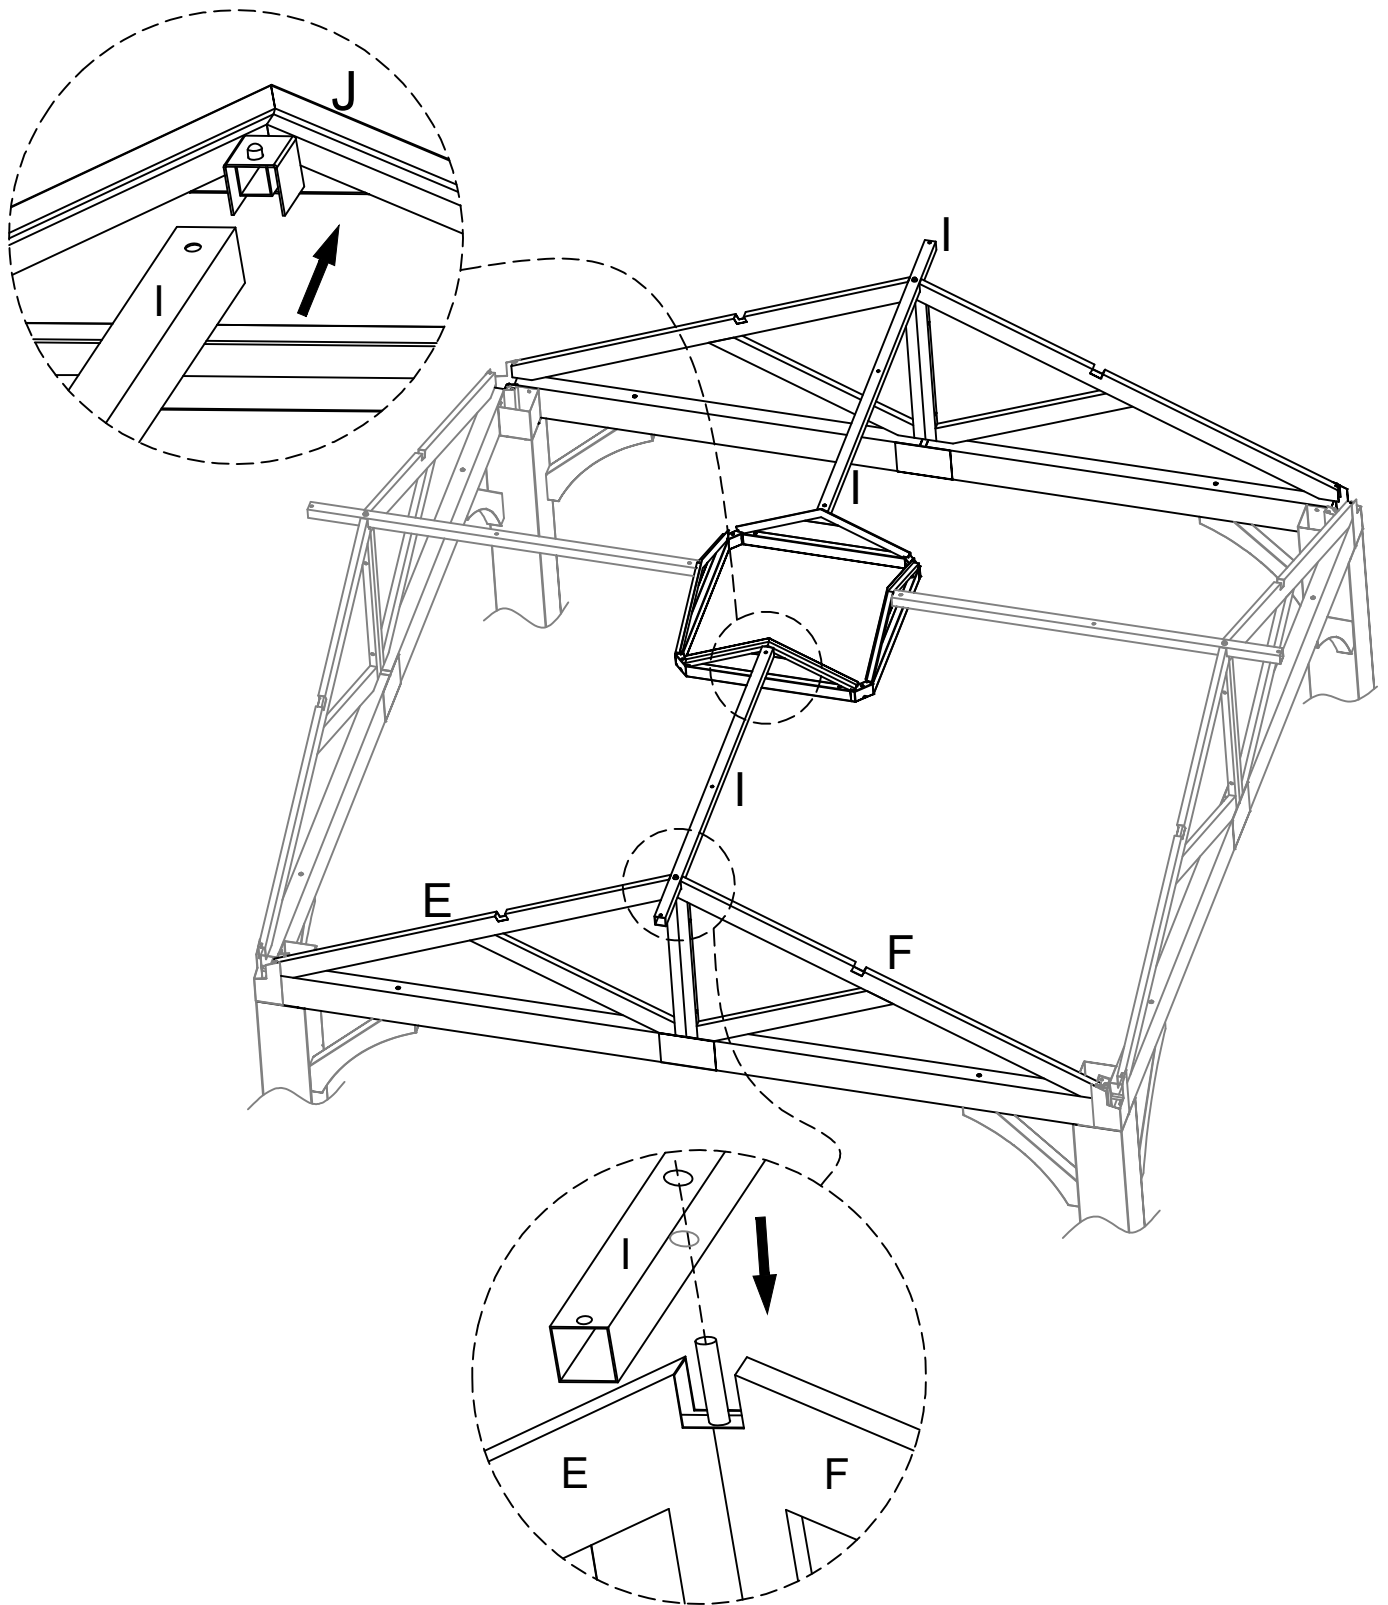
I

X2

Step 10

Insert the center roof tubing (I) into the roof brackets set (J), then insert the other end into the crossbar set (E & F). Repeat this step to the other side (180°) as shown in the illustration.


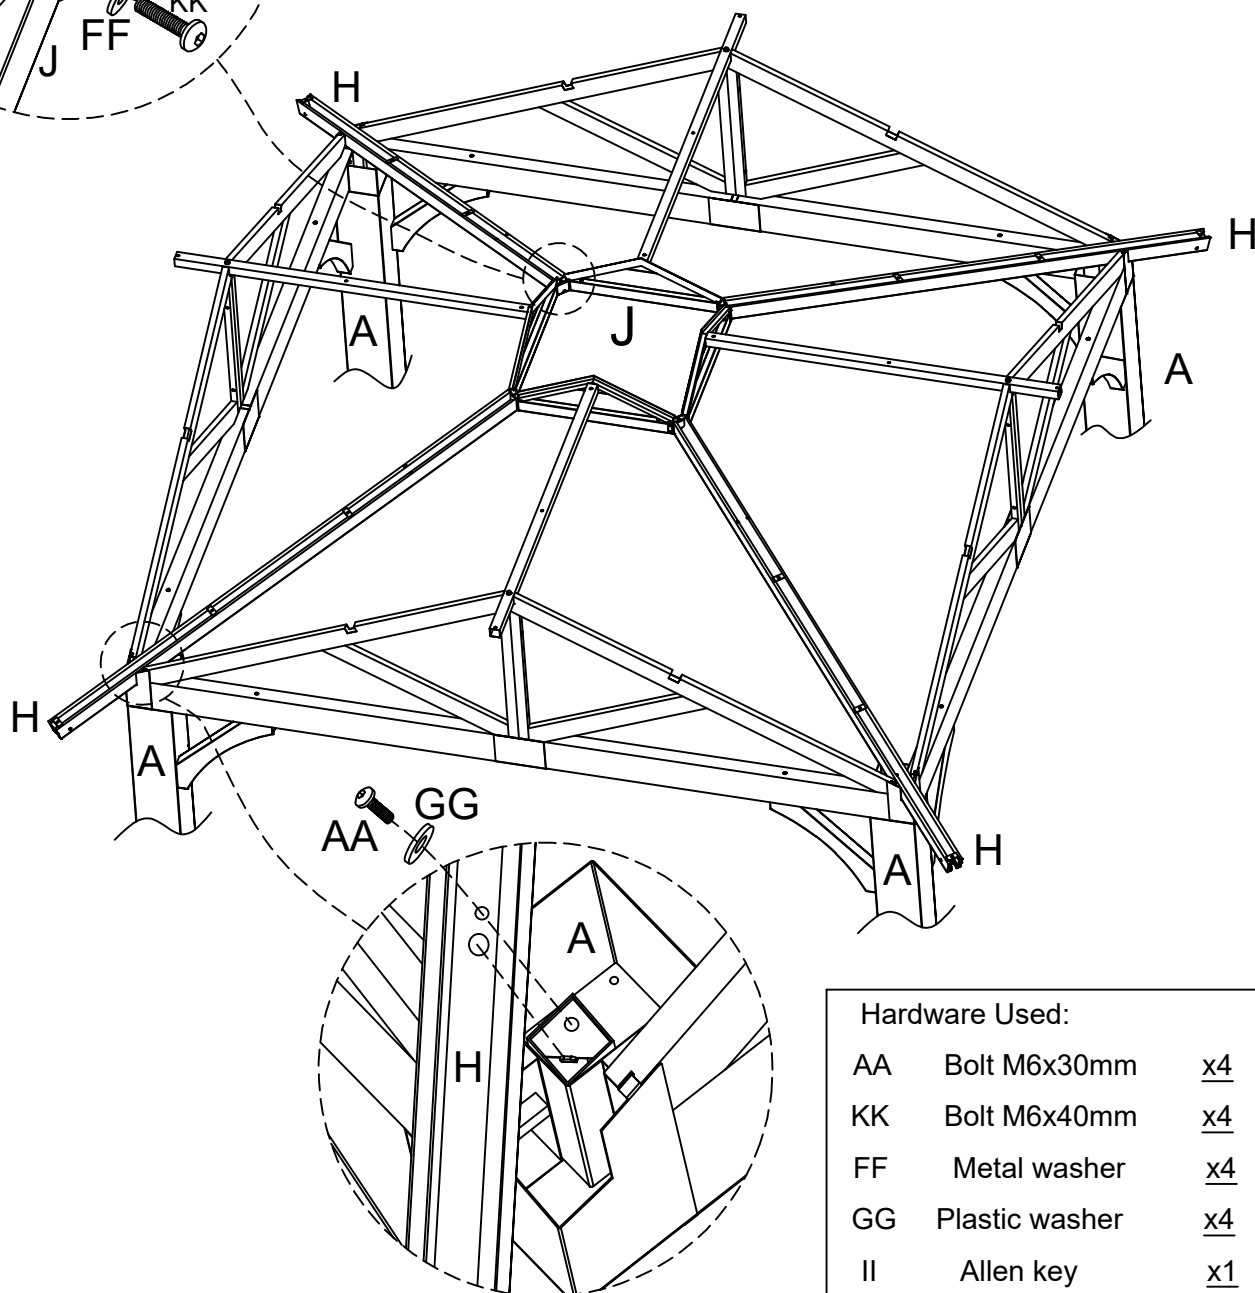
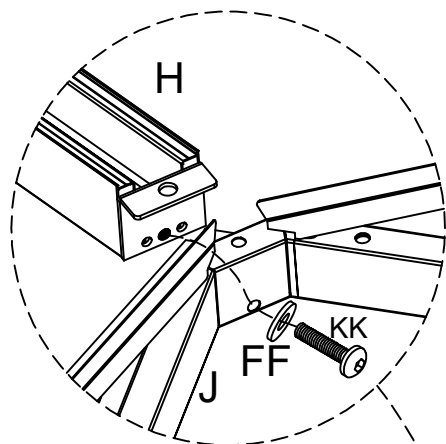
I

X2

Step 11

Insert the center roof tubing (I) into the roof brackets set (J), then insert the other end into the crossbar set (E & F). Repeat this step to the other side (180°) as shown in the illustration.

H

X 4

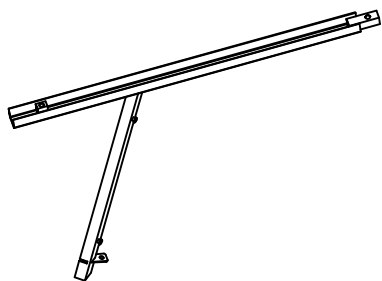
Hardware Used:

AA	Bolt M6x30mm	<u>x4</u>
KK	Bolt M6x40mm	<u>x4</u>
FF	Metal washer	<u>x4</u>
GG	Plastic washer	<u>x4</u>
II	Allen key	<u>x1</u>

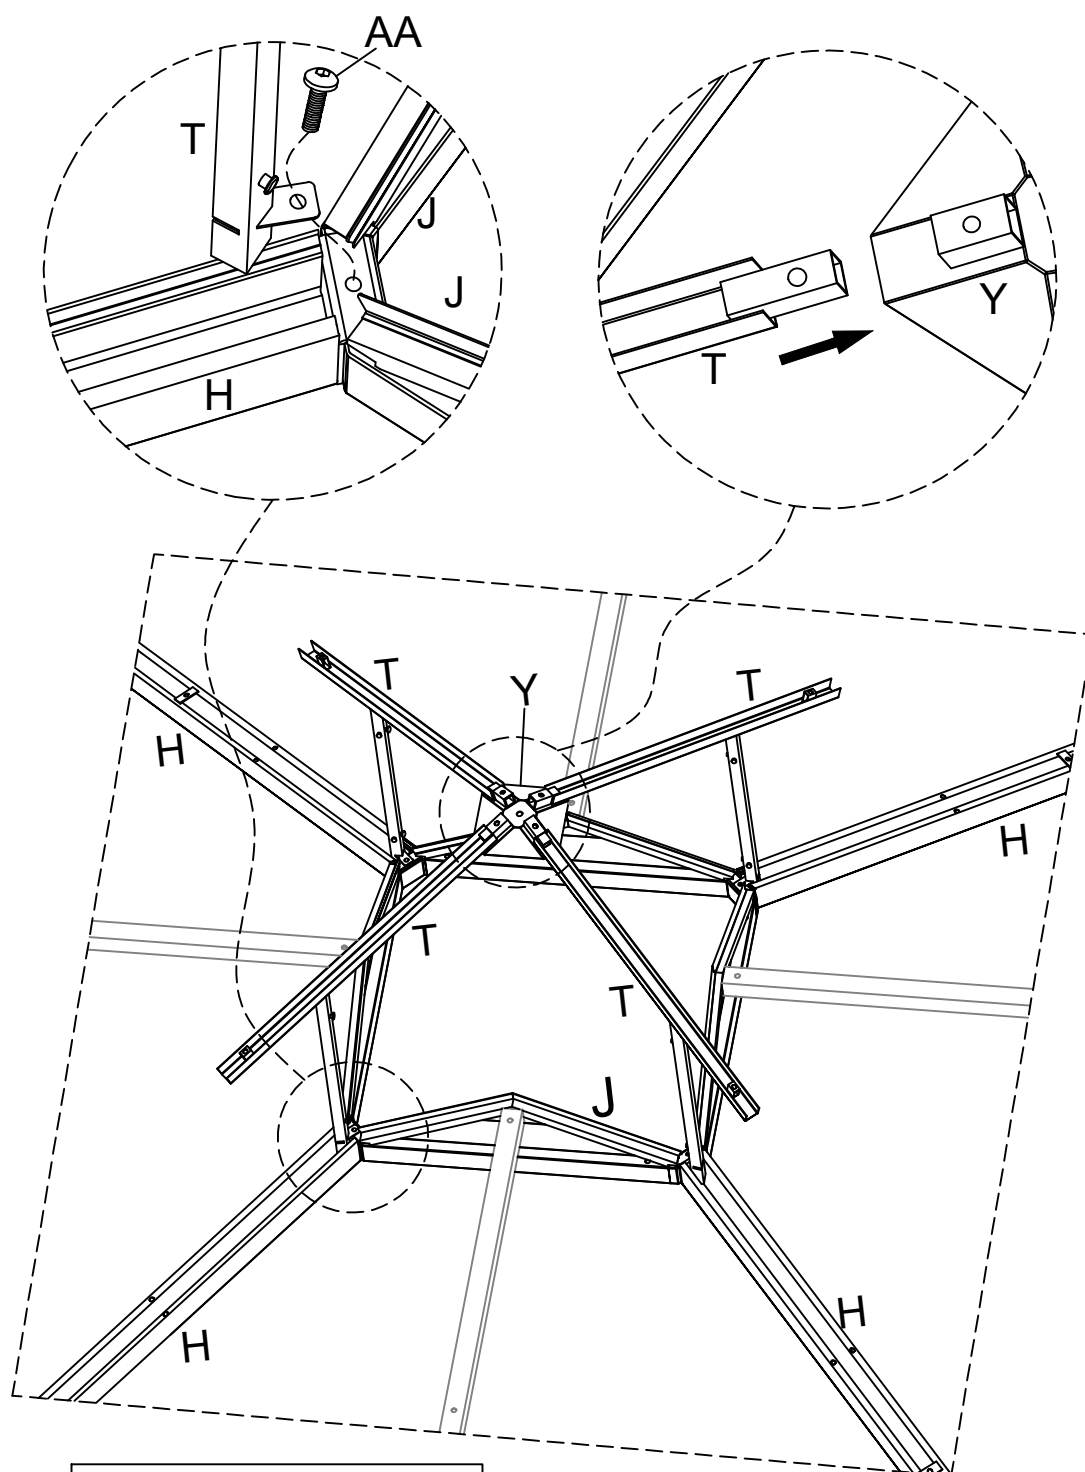
Step 12

Do not over tight to bolts. Fix the corner roof tubing (H) to roof brackets (J) by using the bolts (KK) and washers (FF). Then fix the corner roof tubing (H) to the crossbar set (E & F) & post (A) by using the bolts (AA) and the plastic washers (GG). Repeat this step for all corner roof tubing (H).

T

X 4

Y


X 1


Hardware Used:

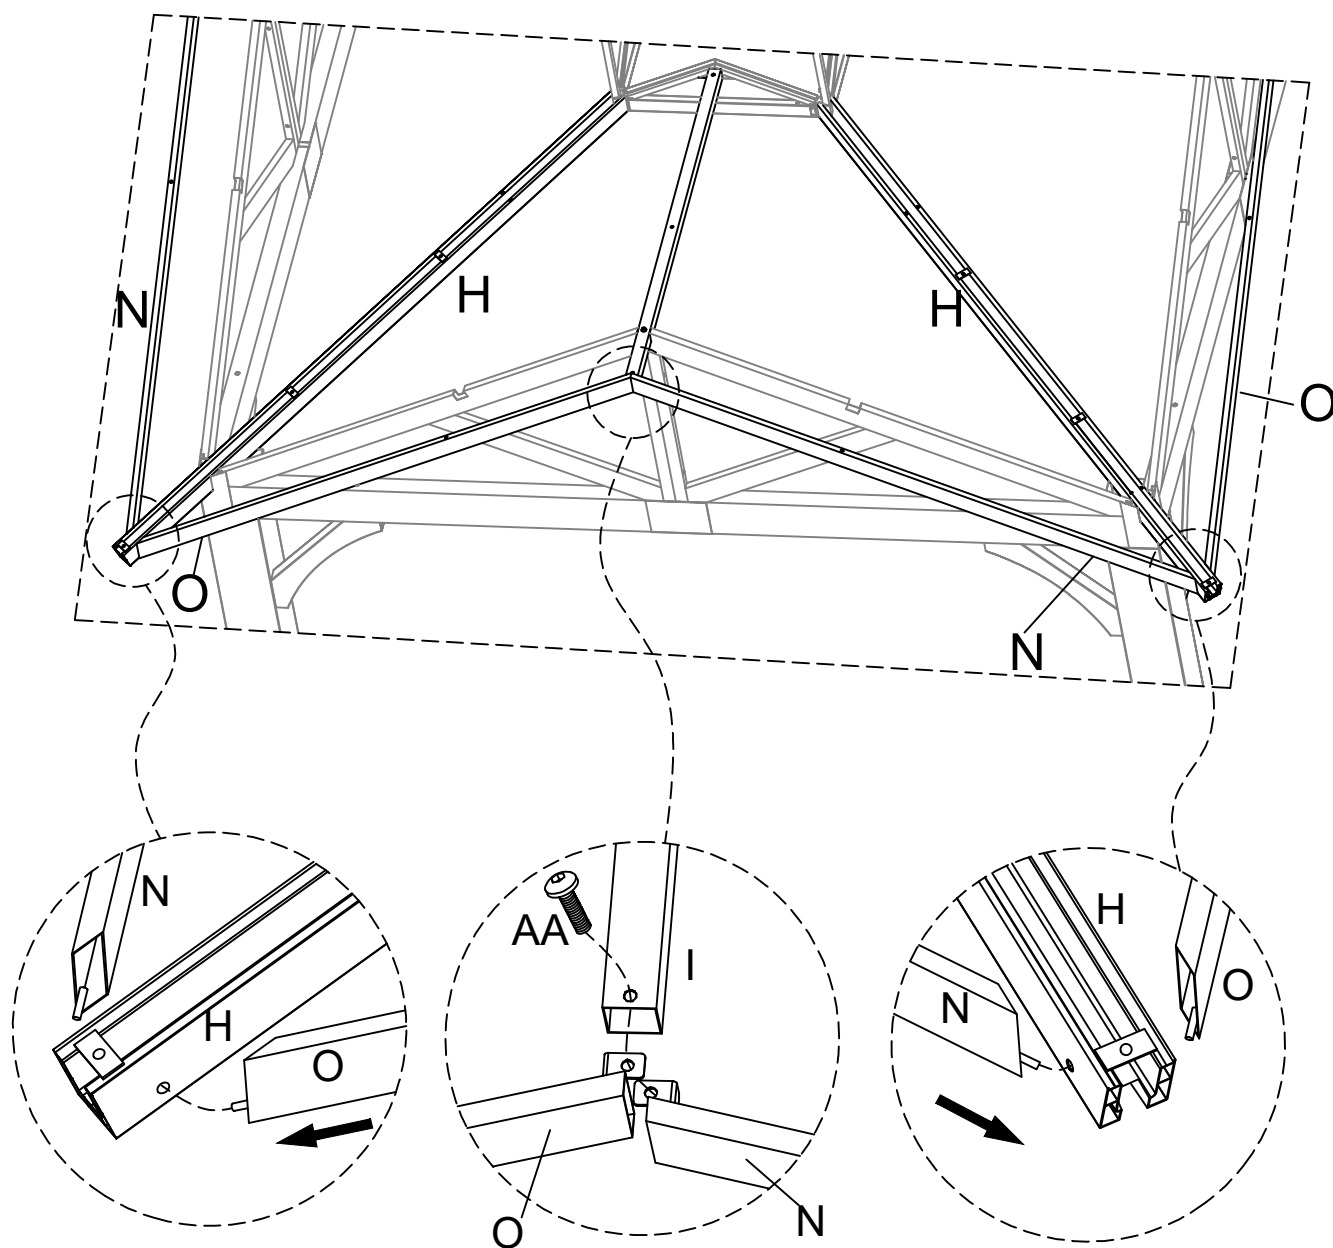
AA Bolt M6x30mm x4II Allen key x1

Step 13

Bolts can be tightened completely. Insert the air vent corner tube (T) into the roof connector (Y), then secure the other end of the air vent corner tube (T) with the corner roof tubing (H). Then fix all the parts previously by using the bolts (AA).

N  X 4

O  X 4





Hardware Used:

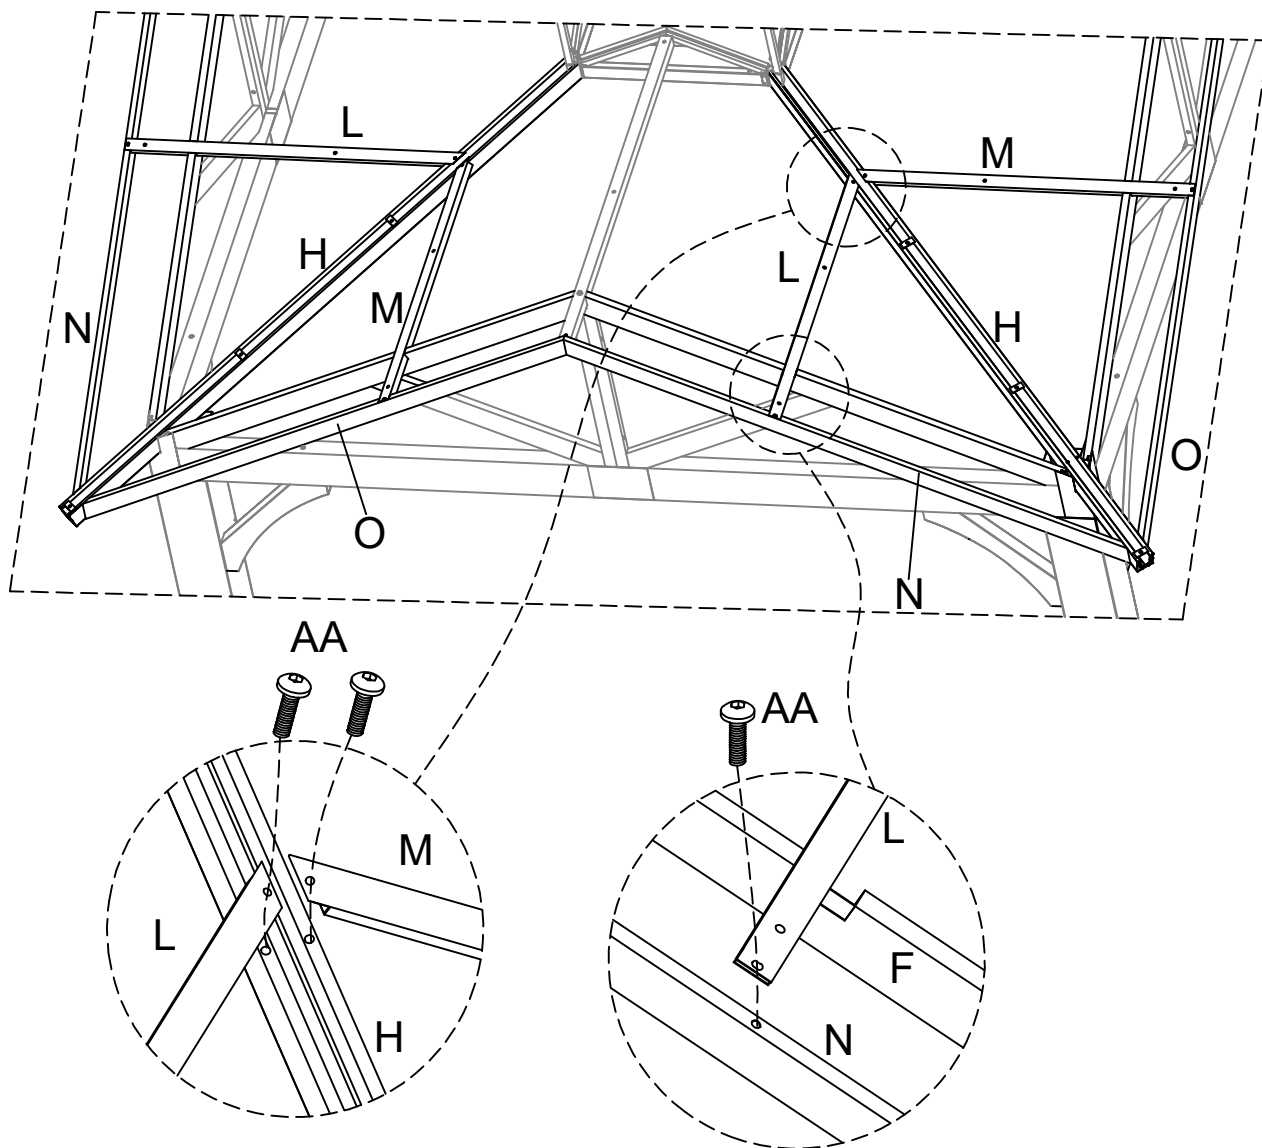
AA	Bolt M6x30mm	<u>x4</u>
II	Allen key	<u>x1</u>

Step 14

Do not tight the bolts completely. Install the left eave (O) into the corner roof tubing (H). Then install the right eave (N) into the corner roof tubing (H). Fix each eave (N & O) with the center roof tubing (I) by using the bolts (AA). Repeat those steps for all eaves.

L  X 4

M  X 4



Hardware Used:

AA	Bolt M6x30mm	<u>x16</u>
II	Allen key	<u>x1</u>


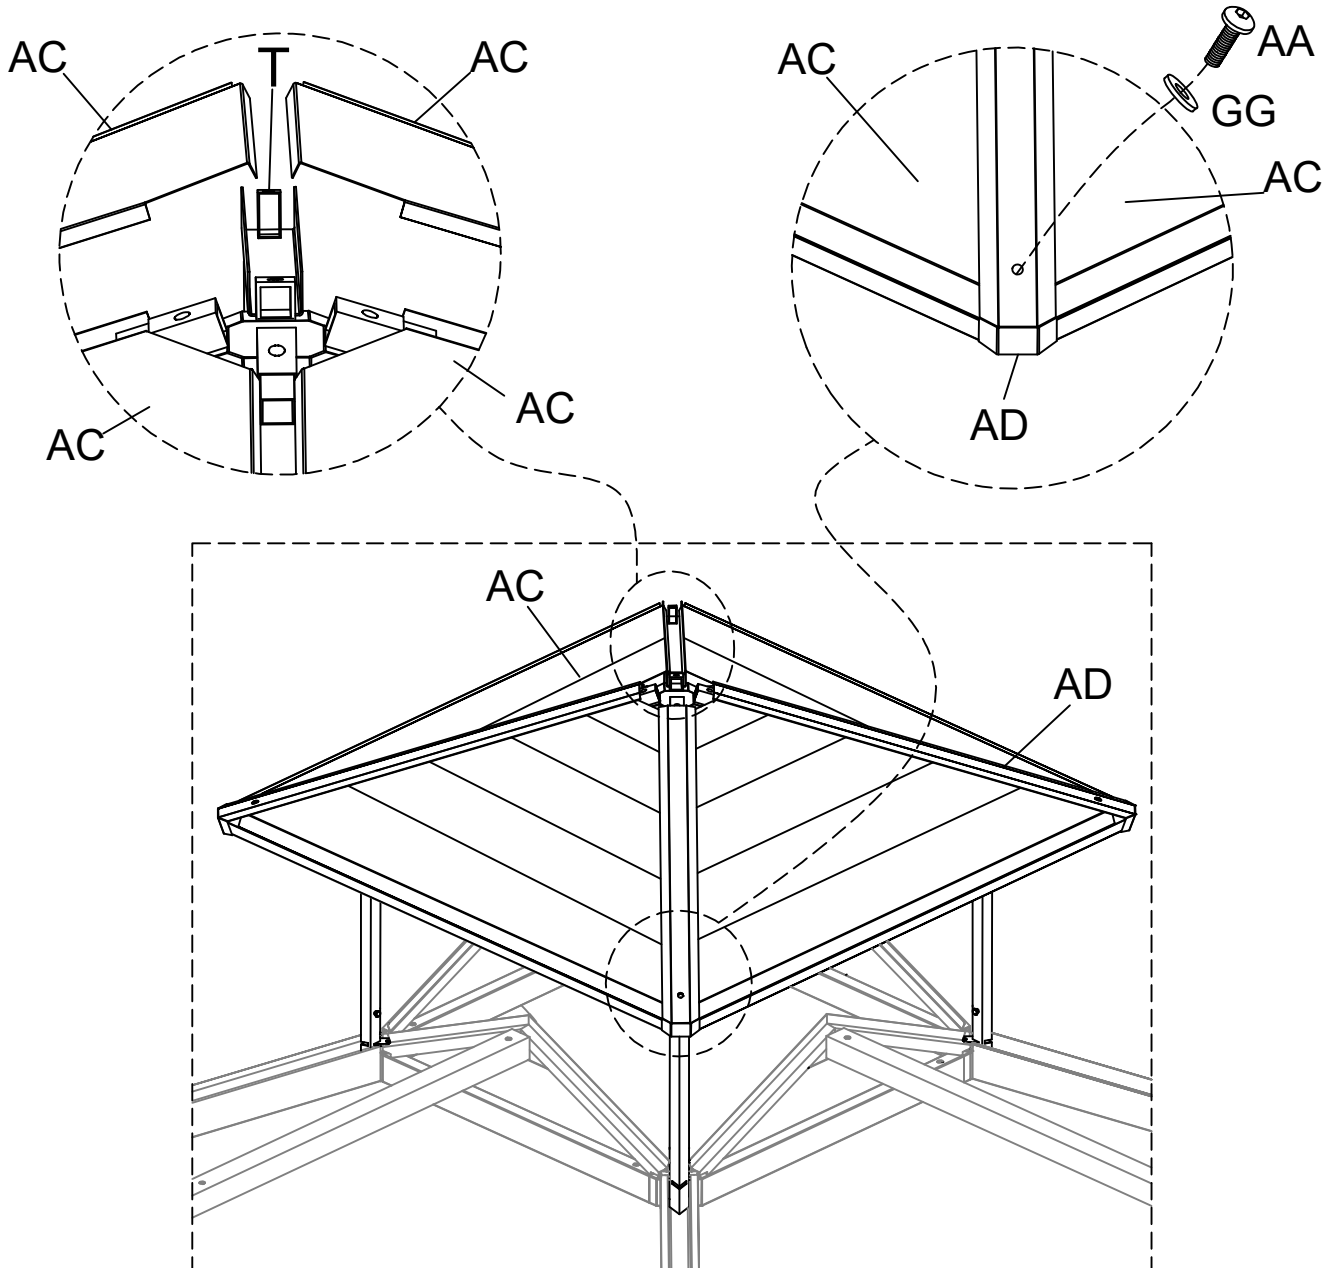
Step 15

Do not tight the bolts completely. Fix the roof support (M) with the corner roof tubing (H) by using the bolts (AA). Then fix the other end to the left eave (O). Repeat those steps for each roof support (M). Then, repeat those steps but for the roof support (L) and the right eave (N).

AC

X 4

AD


X 4
Hardware Used:

AA	Bolt M6x30mm	<u>x4</u>
GG	Plastic washer	<u>x4</u>
II	Allen key	<u>x1</u>

Step 16

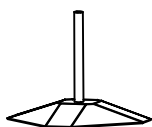
Bolts can be tightened completely. Insert the air vent roof panel (AC) into the air vent corner tube (T), then put the air vent roof cover (AD) onto the air vent roof panel (AC) and the air vent support (T) and fix it by using the bolts (AA) and plastic washers (GG).

X



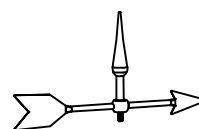
X 1

AE

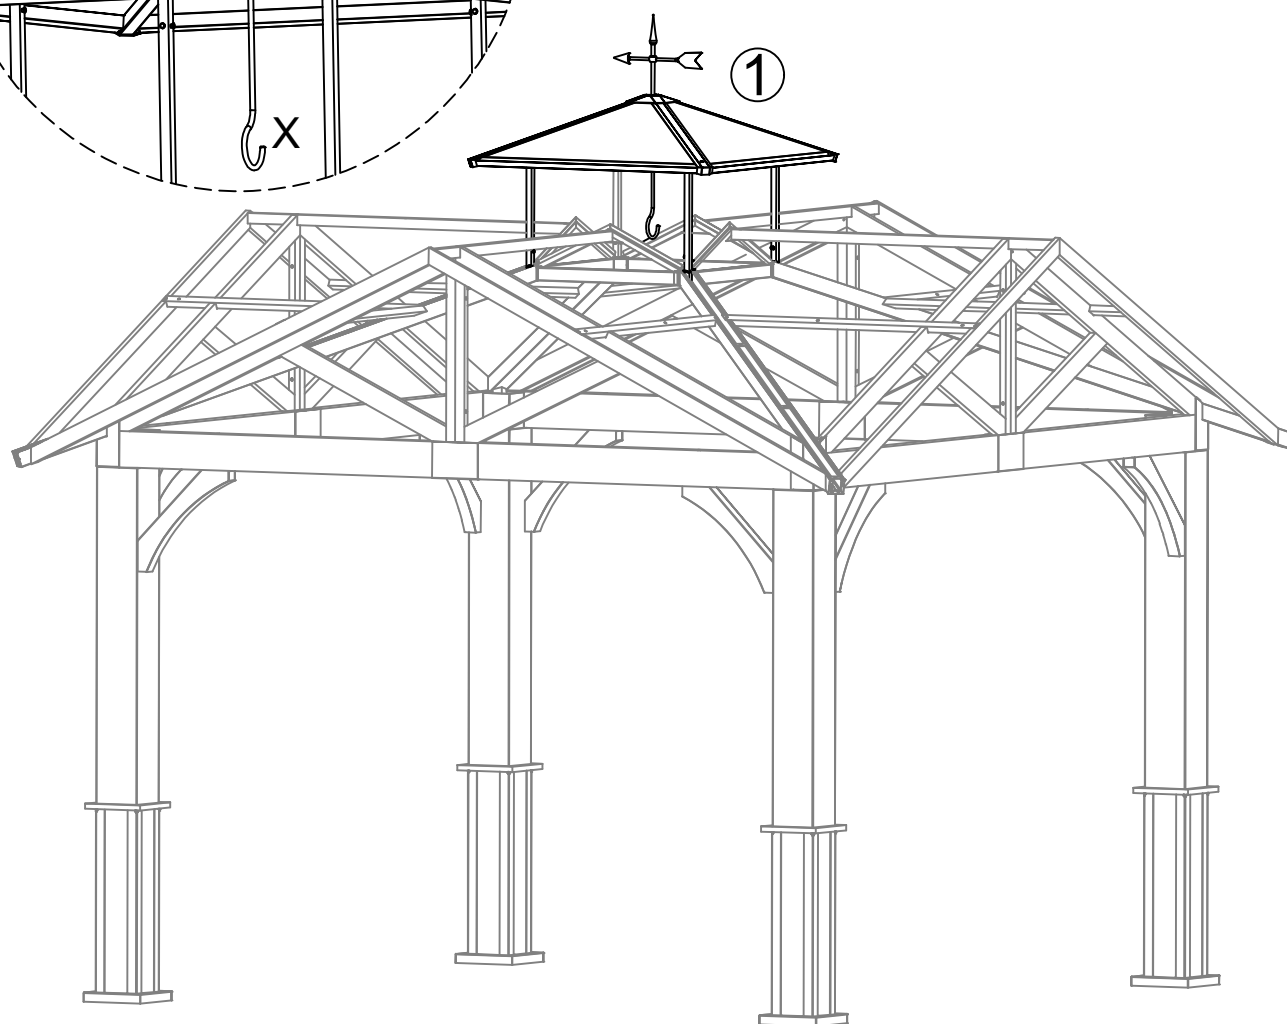
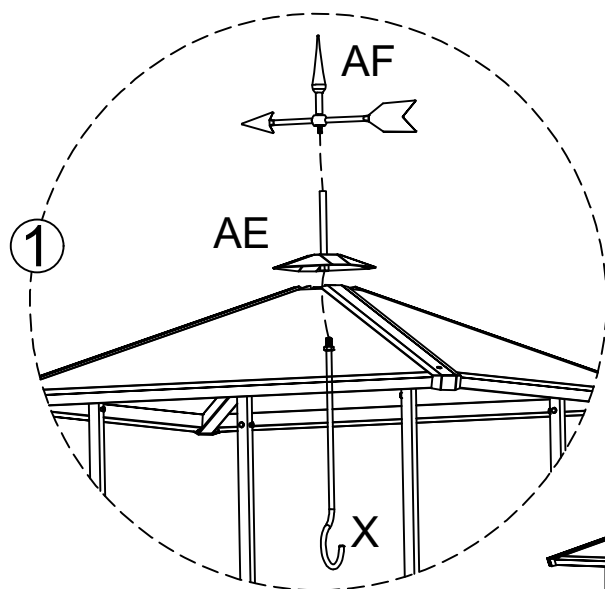


X 1

AF



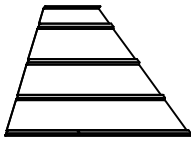
X 1



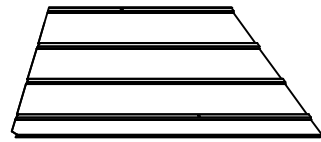
Step 17

Fix the weathervane (AF) with the roof cover (AE), then fix the hook (X) underneath the air vent roof.

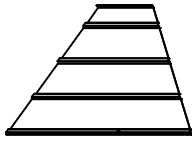
P

X 4

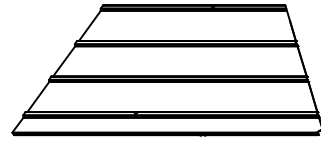
Q

X 4

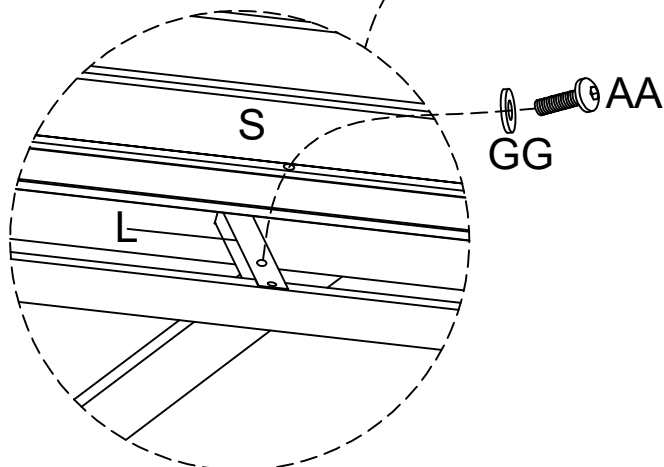
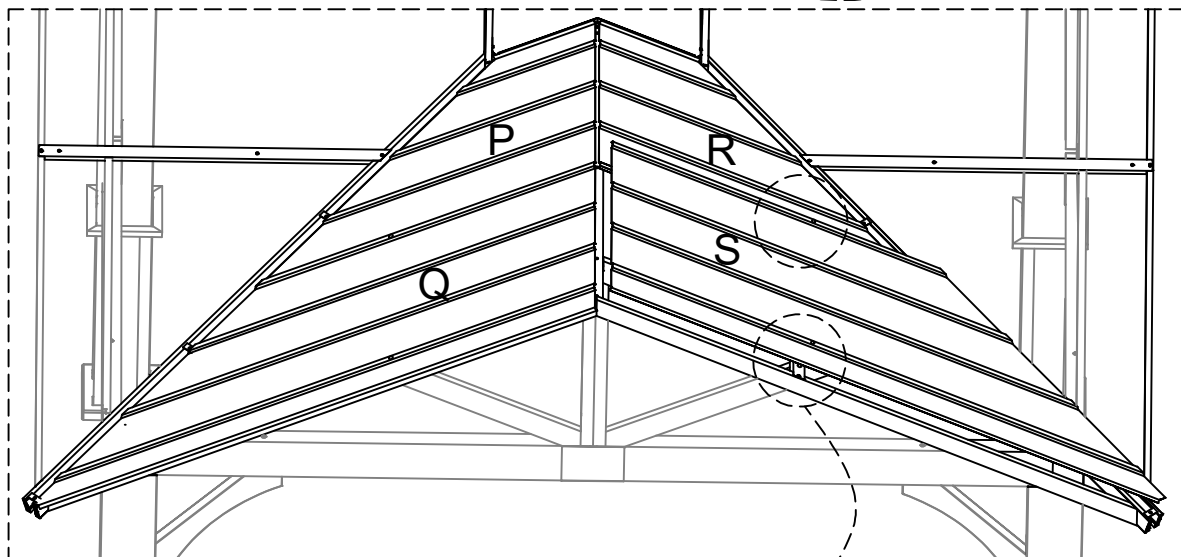
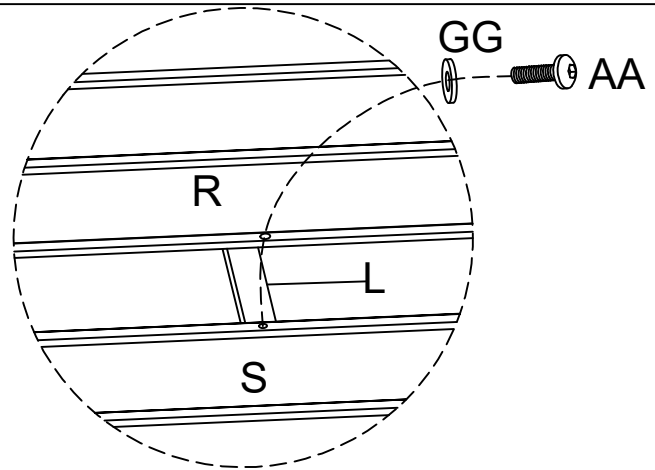
R

X 4

S

X 4


Hardware Used:

AA Bolt M6x30mm x16GG Plastic washer x16II Allen key x1

Step 18

Bolts can be tightened completely. Place the roof panel (P) onto the center roof tubing (I) and corner roof tubing (H). Then do the same for the roof panel (Q). Then align the holes of the roof panels with the anchors of the roof support (M) and fix it by using the bolts (AA) and the plastic washer (GG). Repeat those steps on all side.

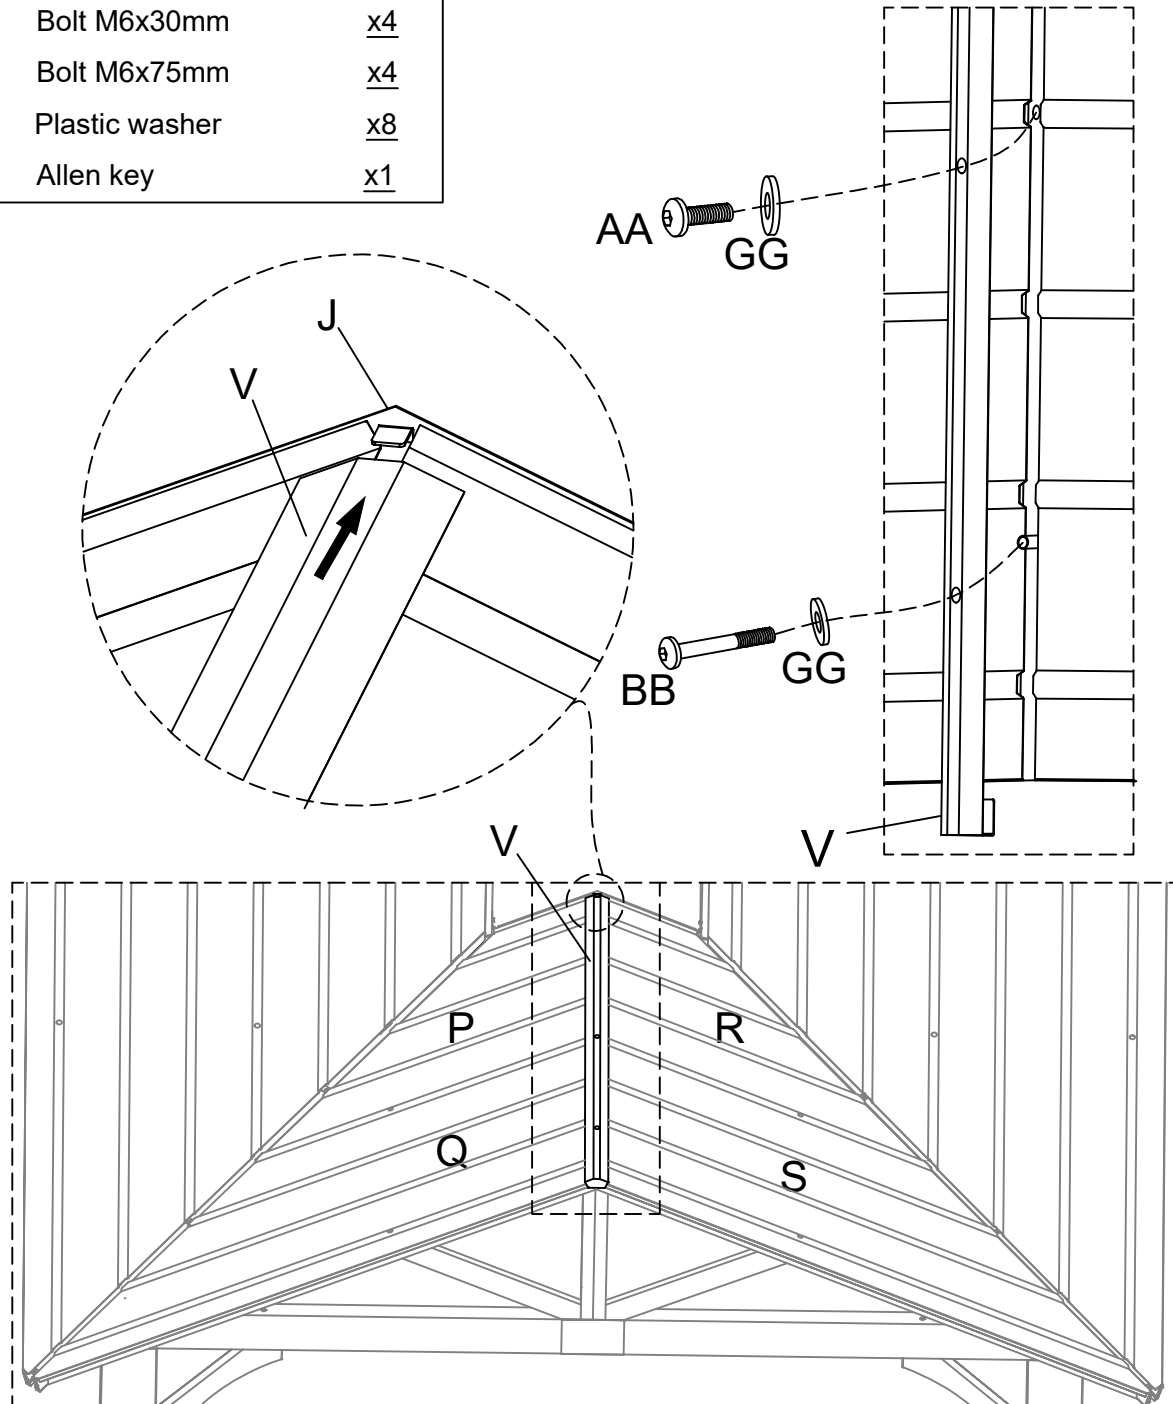
Bolts can be tightened completely. Place the roof panel (R) onto the center roof tubing (I) and corner roof tubing (H). Then do the same for the roof panel (S). Then align the holes of the roof panels with the anchors of the roof support (L) and fix it by using the bolts (AA) and the plastic washer (GG). Repeat those steps on all side.



X 4

Hardware Used:

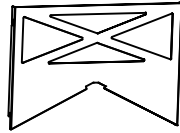
AA	Bolt M6x30mm	<u>x4</u>
BB	Bolt M6x75mm	<u>x4</u>
GG	Plastic washer	<u>x8</u>
II	Allen key	<u>x1</u>



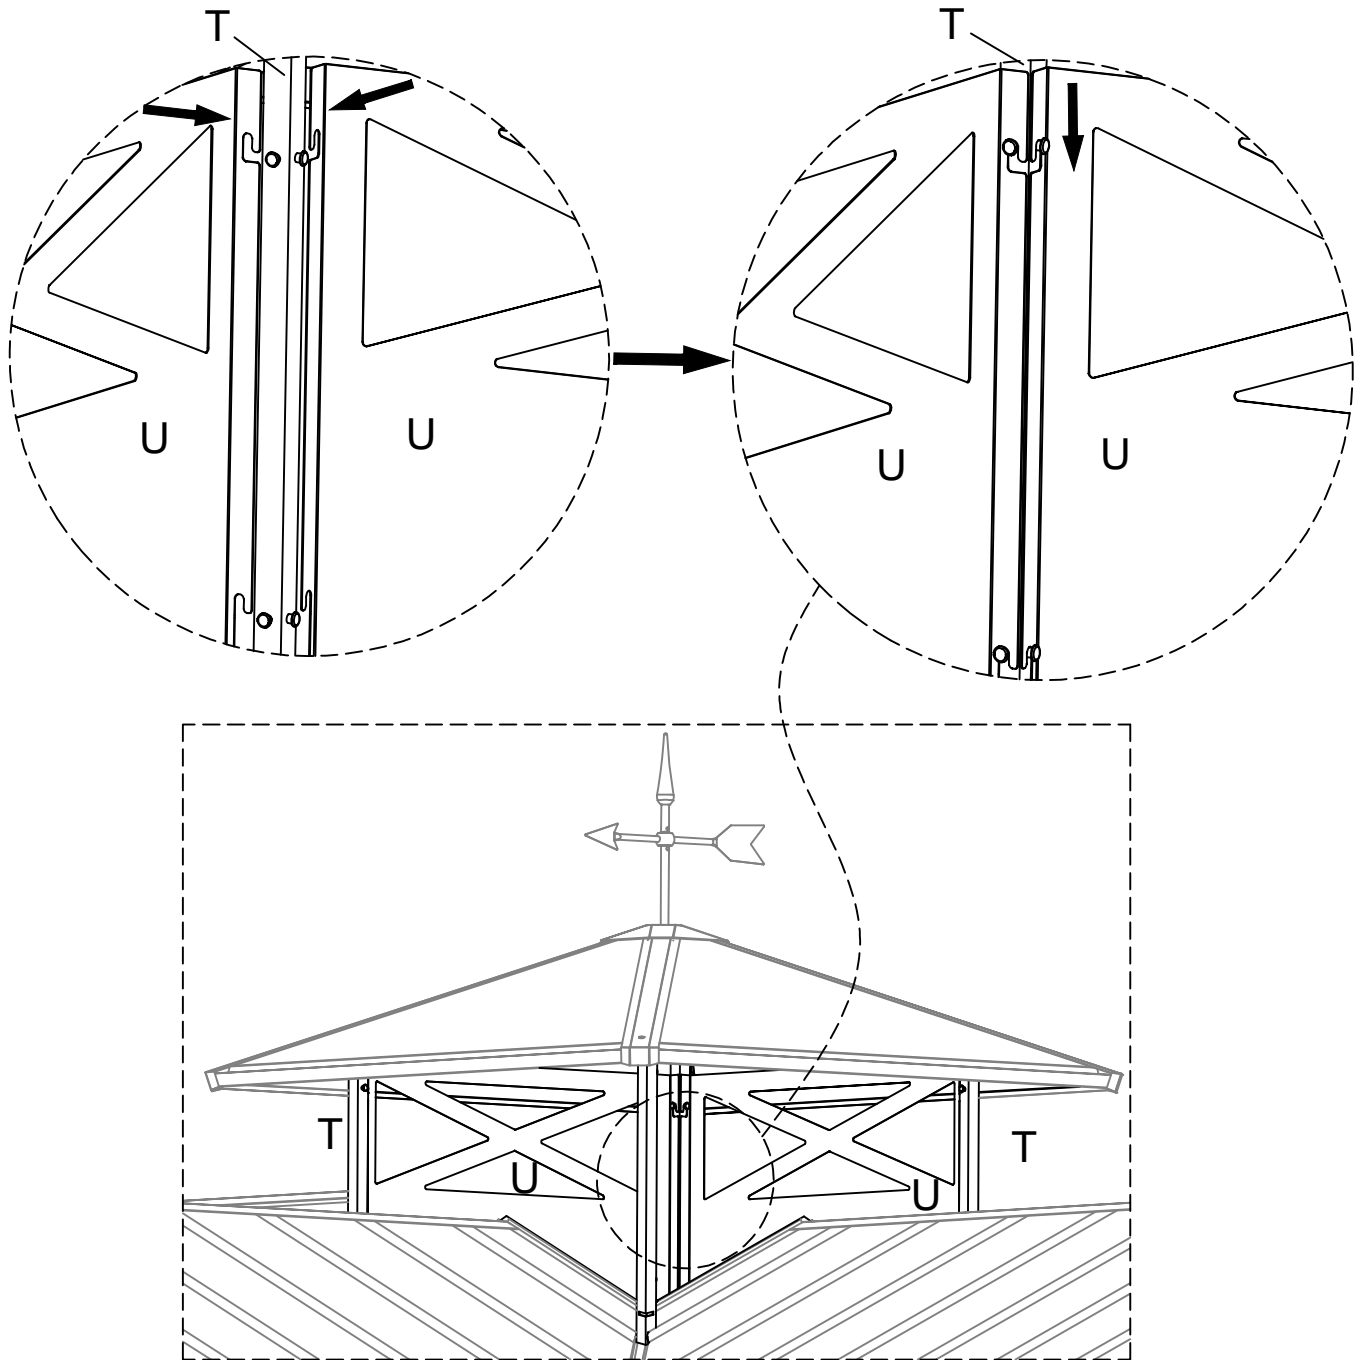
Step 19

Bolts can be tightened completely. Place the roof cover (V) onto the roof panels (P, Q, R & S) and fix it with the center roof tube (I) by using the bolts (BB) and plastic washers (GG) from the furthest from the center as shown is the illustration. Then fix the other end (closest to the center) by using the bolts (AA) and the plastic washers (GG). Repeat those steps for all roof cover (V).

U




X 4



Step 20

Secure air vent side panel (U) with the air vent corner tube (T) as shown in the illustration. Repeat for all air vent side panel (U).

W

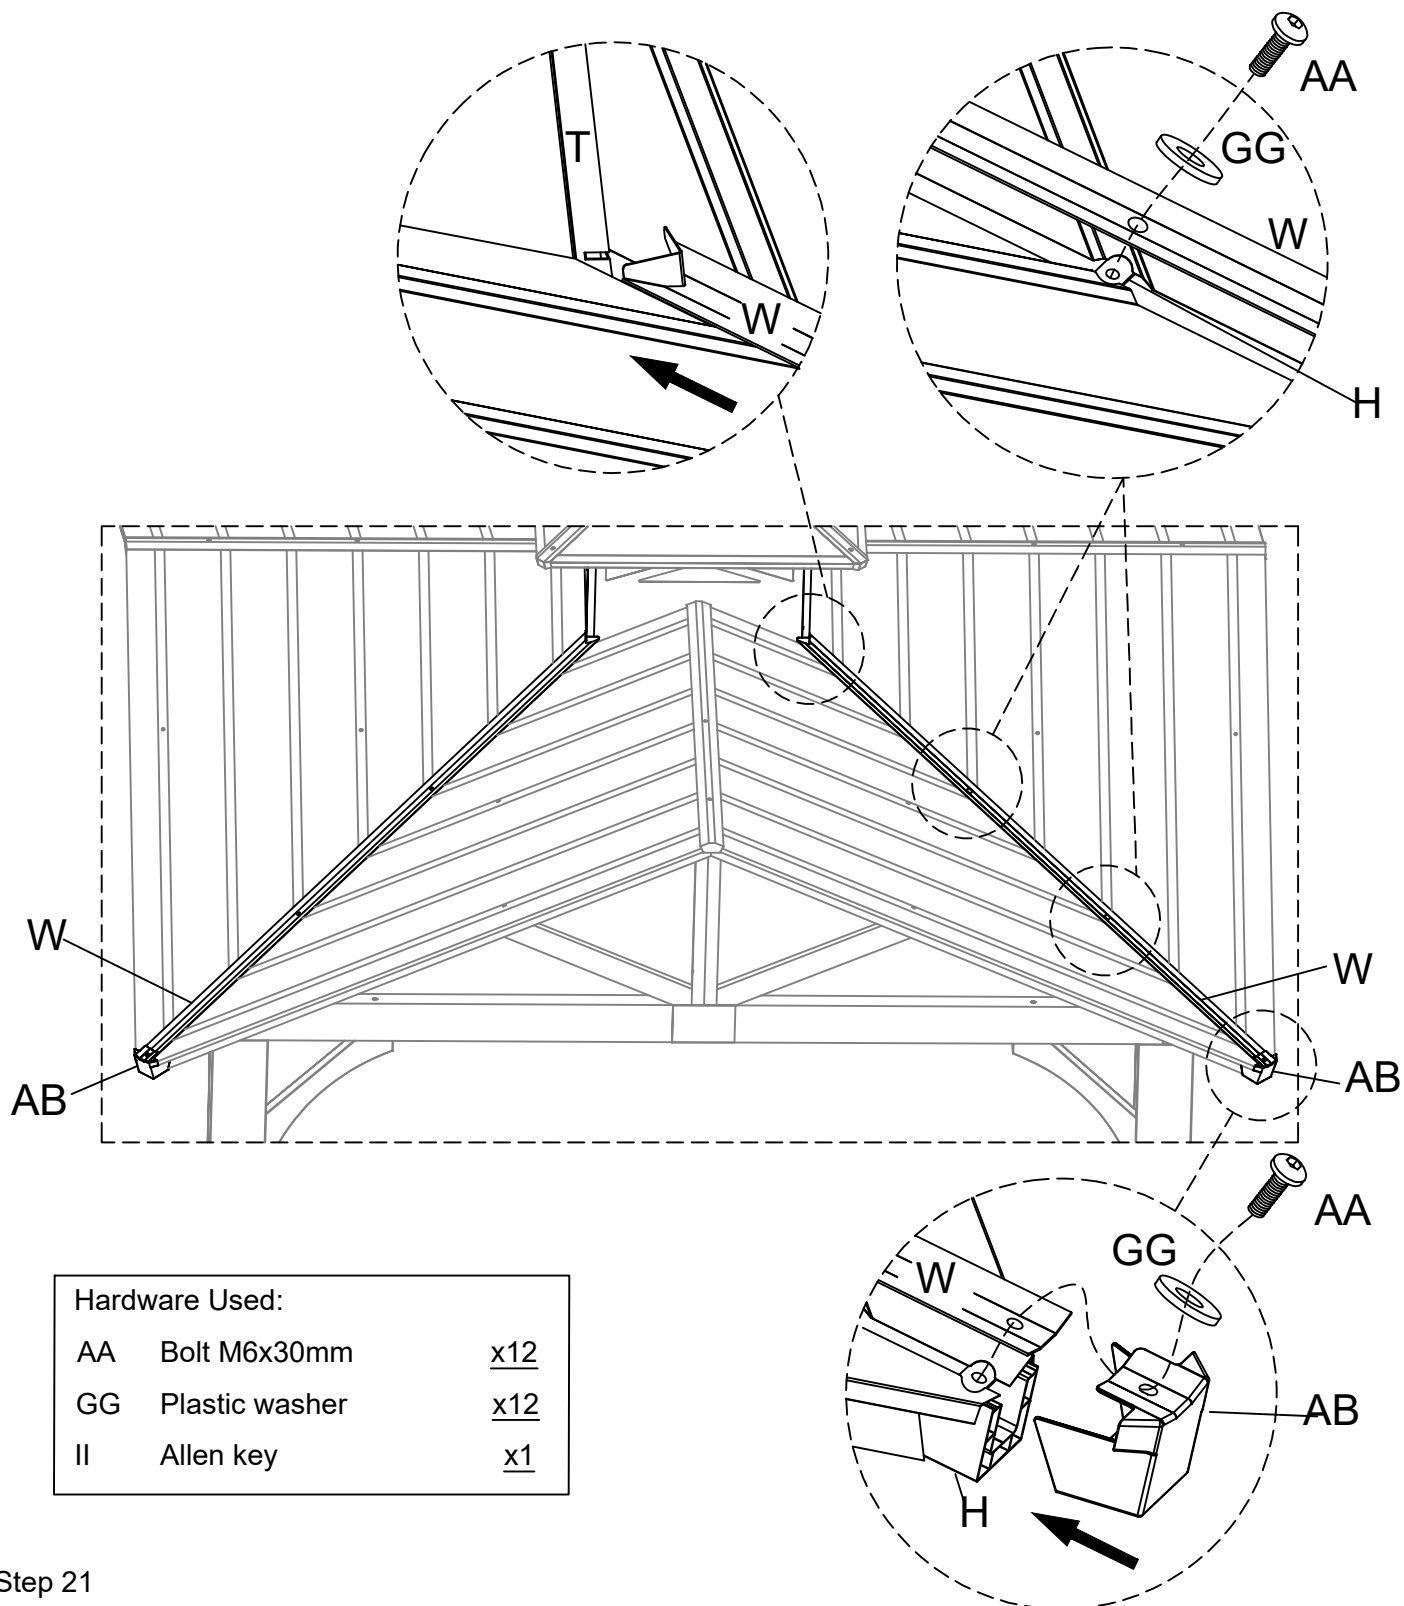


X 4

AB

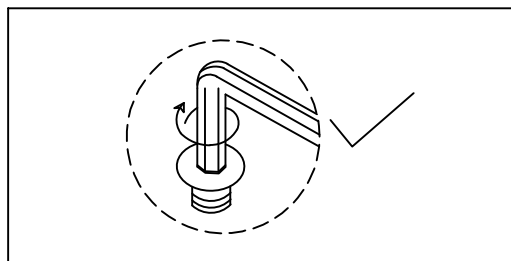
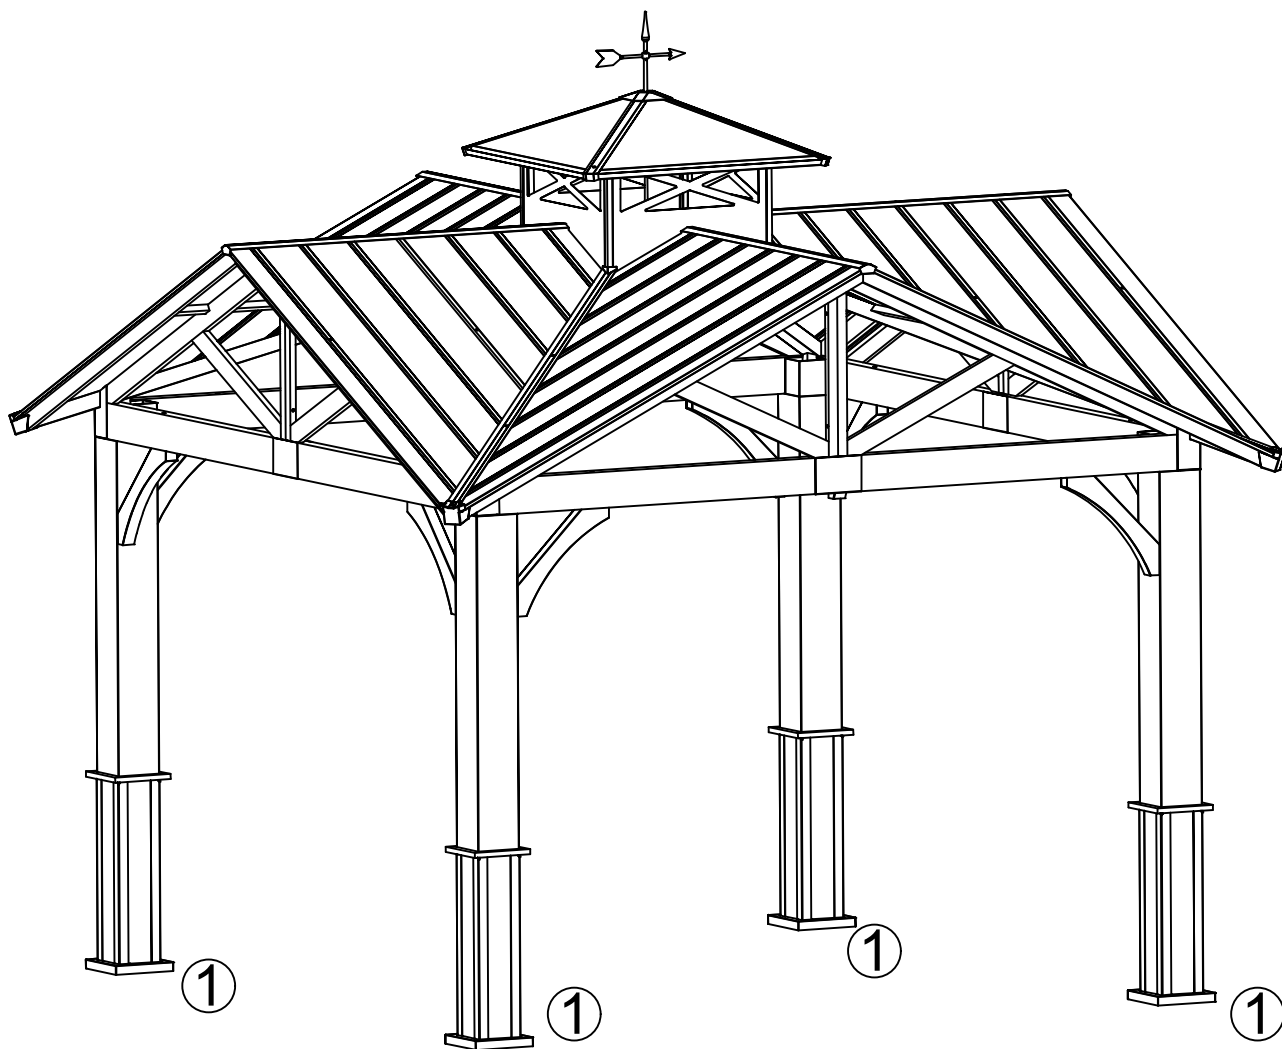


X 4



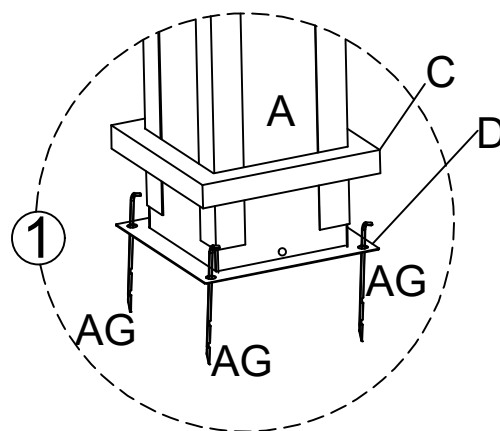
Step 21

Bolts can be tightened completely. Place the corner roof cover (W) onto the air vent corner tube (T) and fix the corner roof cover (W) with the corner roof tubing (H) by using the bolts (AA) and the plastic washers (GG). Then fix the roof corner molding (AB) with the corner roof tubing (H) by using the bolts (AA) and the plastic washers (GG). Repeat those steps for each corner roof cover (W) and roof corner molding (AB).



Step 22

Tight all remaining loose bolts.

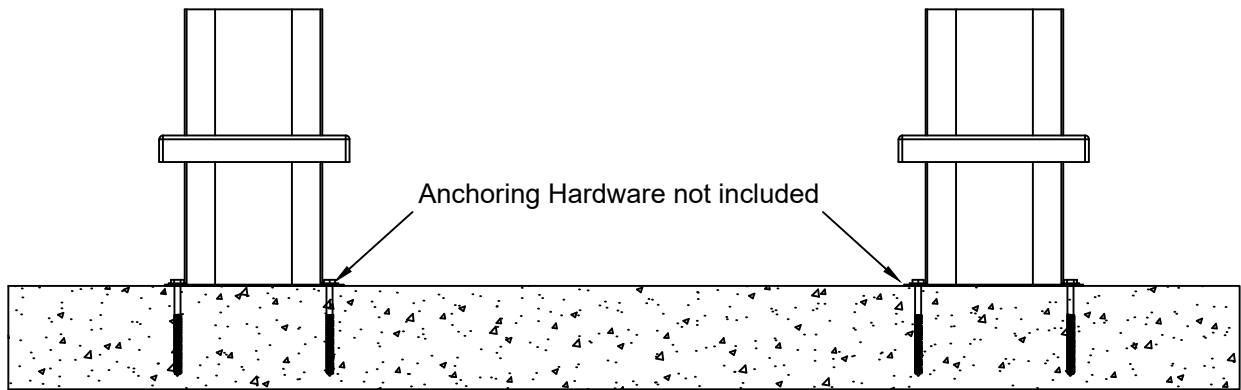


Step 23

If the gazebo is on soft type ground, insert the stake (AG) through the holes in the base plate (D) into the ground to secure the gazebo. Use the proper anchors for the ground. Please see next page, for example.

Permanent Installation

Concrete Patio(min. 12' × 12') with 6" clearance on all sides



Wood Deck (min. 12' × 12') with 6" clearance on all sides

